



GTC4Lusso USA - Seats - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E4.01 Seats

Removing the front seats



- Move the seat all the way back.
- Prise off and remove the guide rail caps (1).
- Undo the screws indicated.



- Move the seat all the way forwards.
- Tip the backrest forward.
- Prise off and remove the guide rail caps (1).
- Undo the screws indicated.

- Disconnect the battery (🔌 F2.01).
- Lift the seat and disconnect the connectors.
- Remove the seat from the vehicle.

Refitting the front seats

			
Tightening torque		Nm	Class
Fastening the front seats	Screw	40 Nm	B

- Fit the seat in the vehicle.
- Connect the connectors.
- Connect the battery ( F2.01).



- Move the seat all the way forwards.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	40 Nm	B

- Fit and fasten the guide rail caps (1).




- Move the seat all the way back.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	40 Nm	B


- Fit and fasten the guide rail caps (1).

Removing the rear seats


Right hand seat

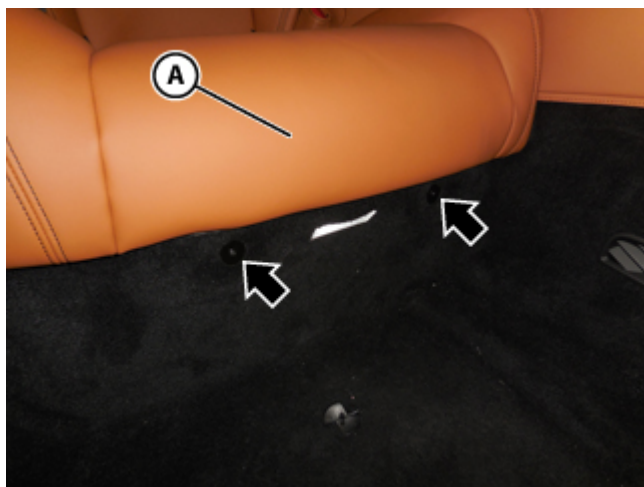

- Undo the screws indicated.
- Detach and remove the seat cushion **(A)**, lifting upward.

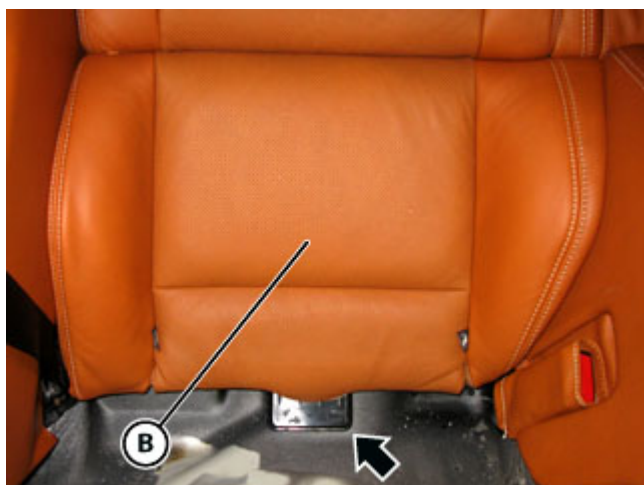


- Detach the indicated adhesive tab.
- Remove the fixed backrest **(B)**, rotating downwards.

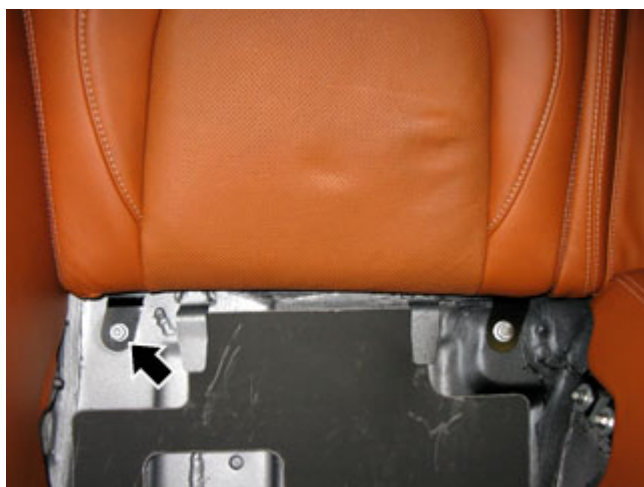

- Undo the indicated screw.


- Remove the luggage compartment trim panels (E4.06).
- Remove the luggage shelf trim in the luggage compartment.

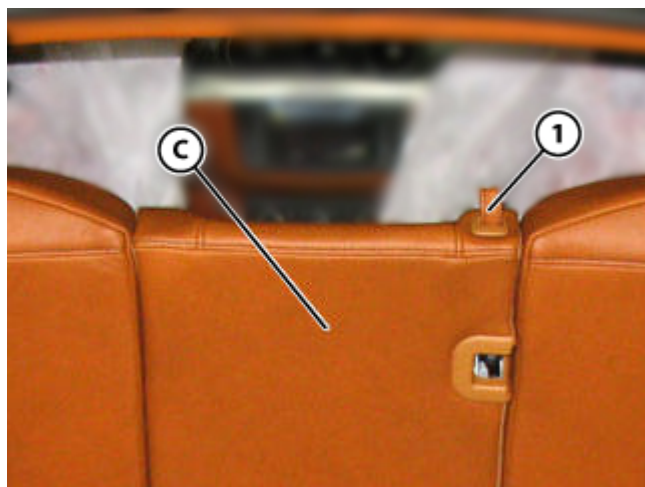

- Pull the loop **(1)** to release the lock of the tilting central backrest **(C)**.
- Tip the tilting central backrest **(C)** forward.




- Pull the lever **(2)** to release the lock of the tilting backrest **(D)**.
- Tip the tilting backrest **(B)** forward.

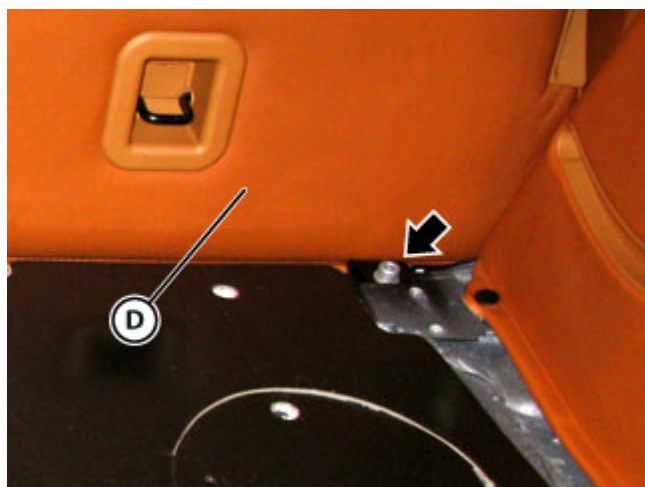

- Undo the indicated screw.
- Remove the tilting backrest **(D)**.


Left hand seat

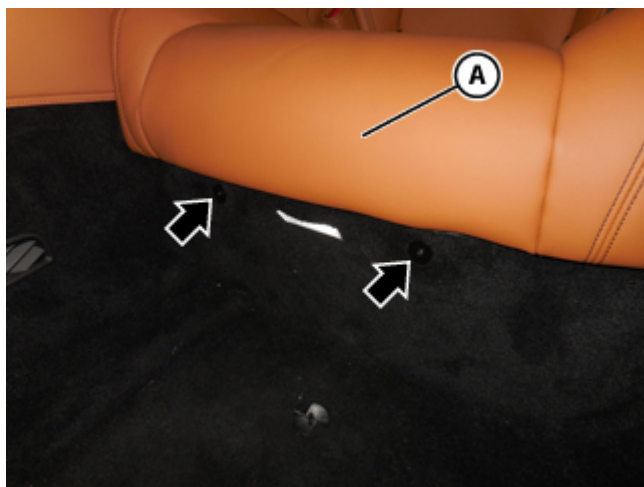

- Undo the screws indicated.
- Detach and remove the seat cushion **(A)**, lifting upward.



- Detach the indicated adhesive tab.
- Remove the fixed backrest **(B)**, rotating downwards.

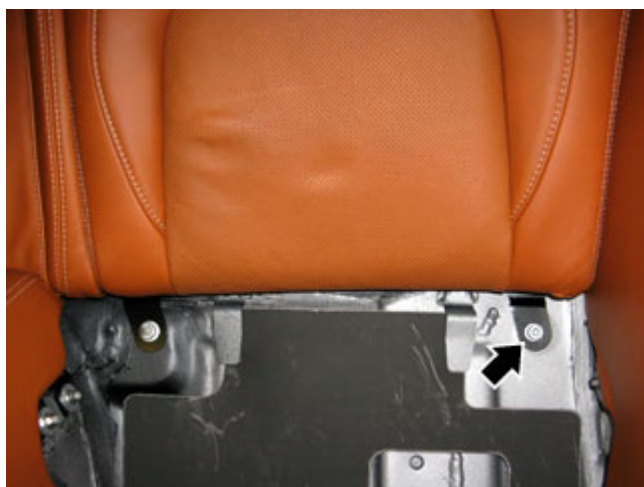

- Undo the indicated screw.

- Remove the luggage compartment trim panels (E4.06).
- Remove the luggage shelf trim.




- Pull the lever **(1)** to release the lock of the tilting backrest **(C)**.
- Tip the tilting backrest **(C)** forward.




- Undo the indicated screw.
- Remove the tilting backrest **(C)**.

Central tilting backrest

- Remove the lateral tilting backrests.

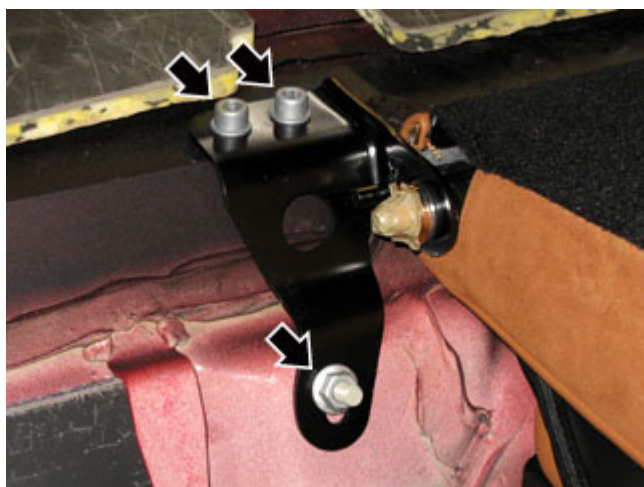

- Undo the screws indicated.
- Undo the indicated nut.

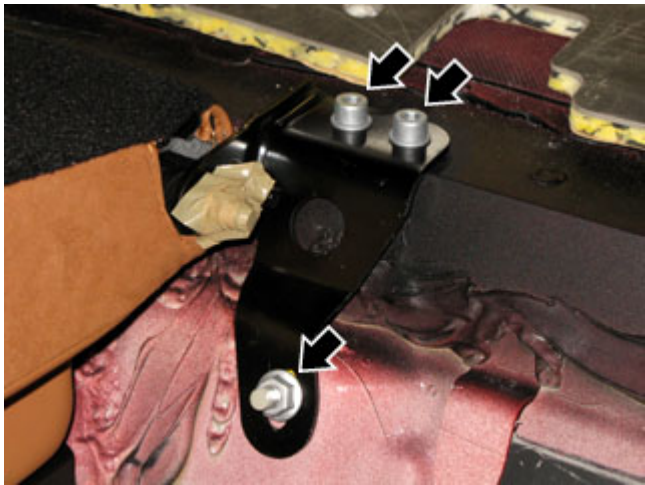

- Undo the screws indicated.
- Undo the indicated nut.


- Remove the central tilting backrest.

Refitting the rear seats

			
Tightening torque		Nm	Class
Fastening the tilting central backrest	Screw	25 Nm	B
	Nut	25 Nm	B
	Screw	30 Nm	B
Fastening rear seats	Screw	25 Nm	B

Central tilting backrest

- Fit the central tilting backrest.

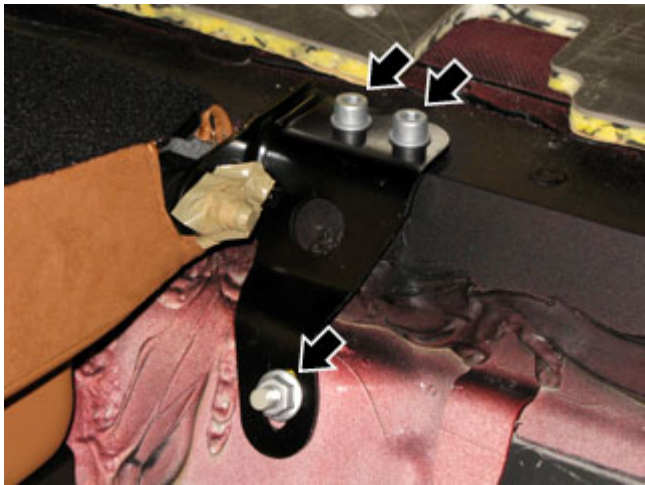


- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

- Tighten the indicated nut

		
Tightening torque	Nm	Class
Nut	25 Nm	B

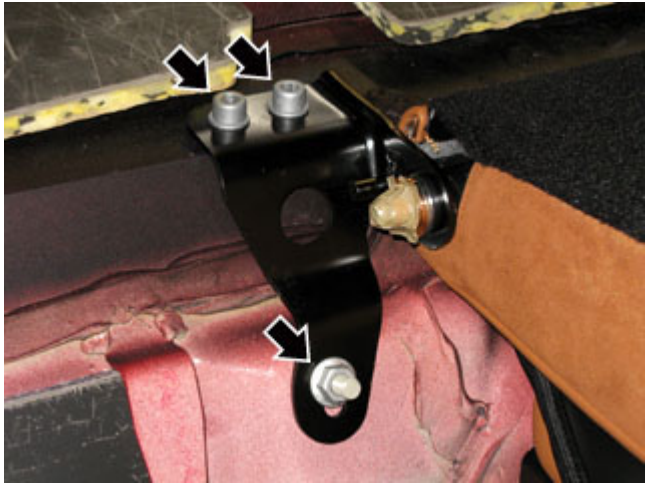

- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	25 Nm	B

- Tighten the indicated nut

		
Tightening torque	Nm	Class
Nut	25 Nm	B

- Refit the lateral tilting backrests.

Right hand seat

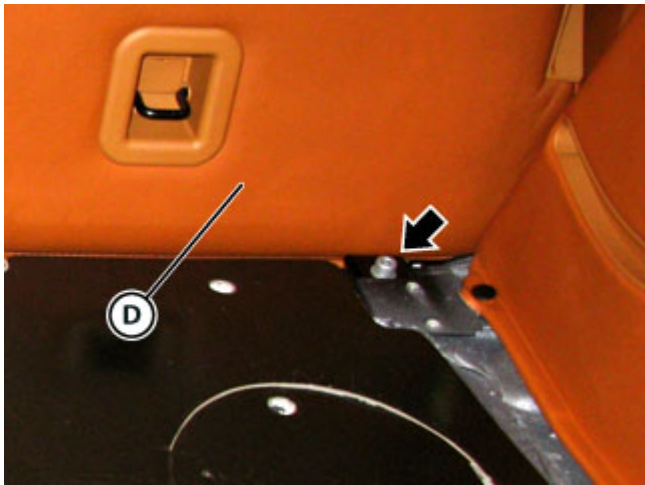


- Fit the tilting backrest (D).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	25 Nm	B


- Refit the luggage compartment trim panels ( E4.06).
-  Refit the luggage shelf trim.



- Tip the central tilting backrest (C) back until it locks into place.

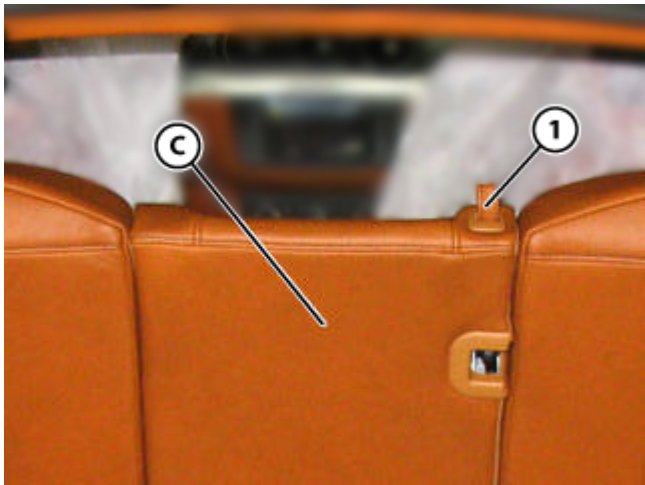

- Tip the tilting backrest **(D)** back until it locks into place.

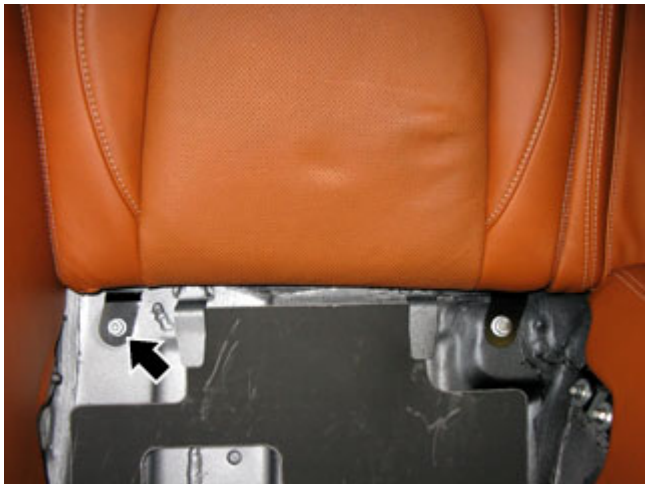


- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	25 Nm	B




- Fit the fixed backrest **(B)**, rotating upward to fasten onto the rear brackets.
- Fix the adhesive tab, pressing manually into place.

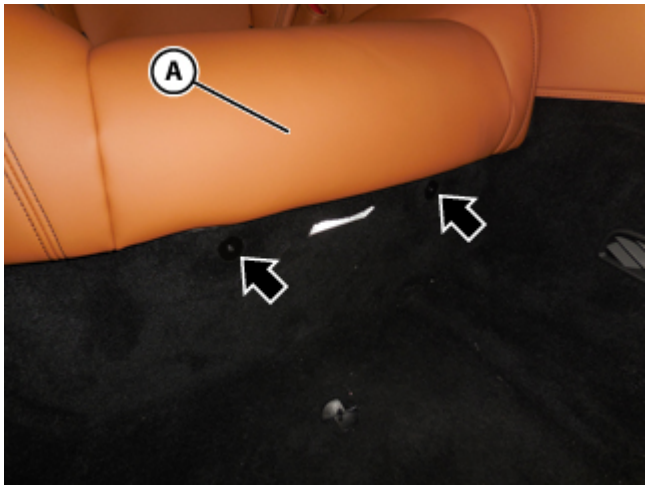

- Fit the seat cushion (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	30 Nm	B

Left hand seat

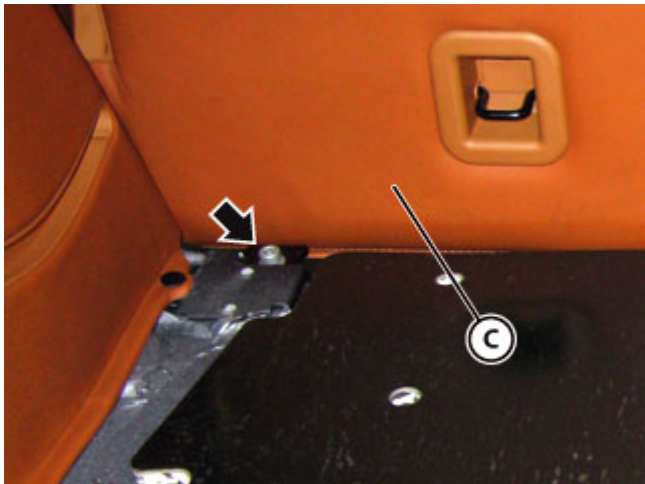

- Fit the tilting backrest (C).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

- Refit the luggage compartment trim panels ( E4.06).
-  Refit the luggage shelf trim.



- Tip the tilting backrest (C) back until it locks into place.




- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	25 Nm	B



- Fit the fixed backrest **(B)**, rotating upward to fasten onto the rear brackets.
- Fix the adhesive tab, pressing manually into place.

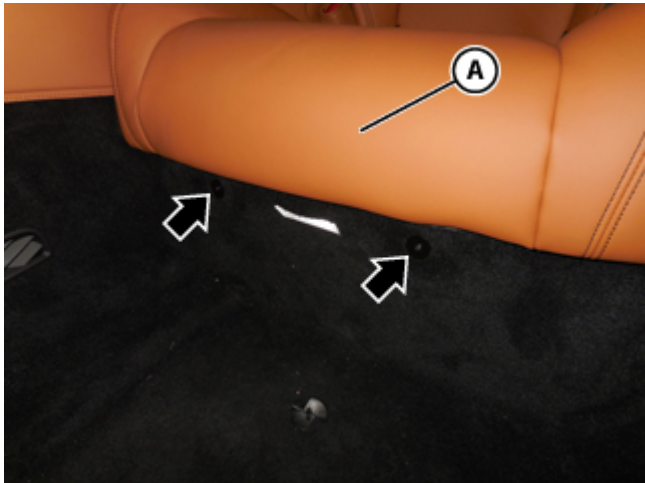

- Fit the seat cushion **(A)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	30 Nm	B