



GTC4Lusso USA - Centre console trim panel - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E4.03 Centre console trim panel

Removing the centre tunnel console trim

- Disconnect the battery ( F2.01).
- Remove the front seats ( E4.01).
- Remove the rear seats ( E4.01).

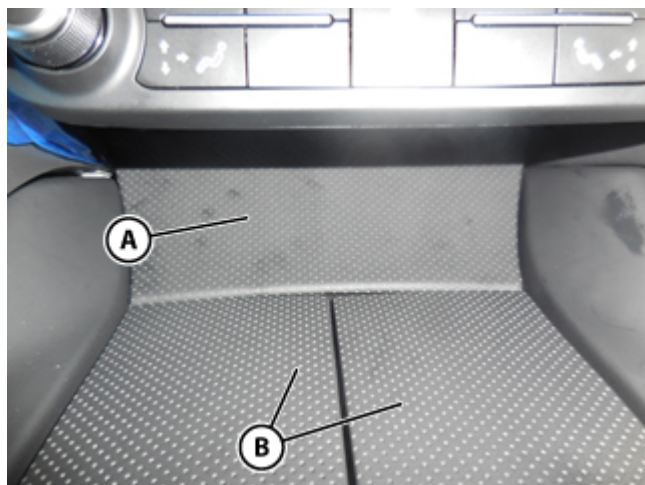

- Detach and remove the trim panel **(A)**.
- Open the compartment **(B)** by pressing the relative button.




- Detach and remove the trim elements **(C)**.



- Undo the screws indicated.
- Remove the front container **(D)**.



- Undo the screws indicated.
- Remove the trim **(E)**.

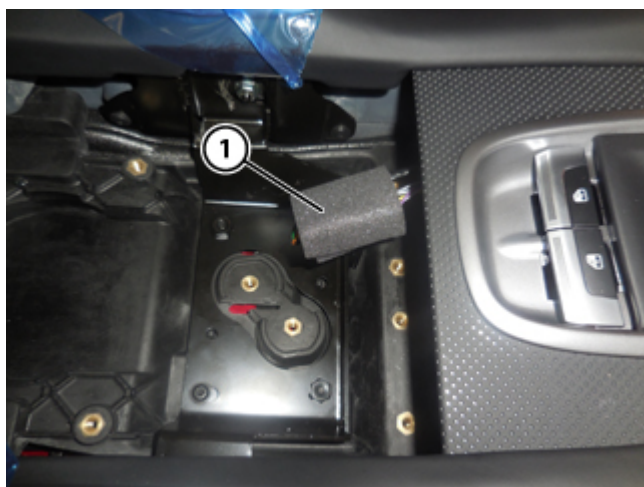

- Remove the adhesive protective foam and the disconnect the connector **(1)**.



- Undo the screws indicated.



- Undo the screws indicated.



- Prise out and disconnect the indicated USB ports.



- Prise out and disconnect the indicated USB ports.



- Undo the screws indicated.




- Undo the nuts indicated.




- Undo the nuts indicated.



- Detach and move the floor mat away from the side of the centre tunnel trim panel.
- Undo the indicated screw.
- Undo the nuts indicated.

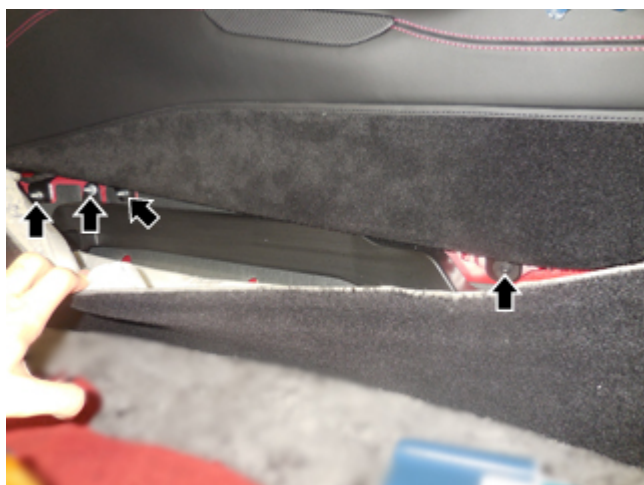


- Detach and move the floor mat away from the side of the centre tunnel trim panel.
- Undo the indicated screw.
- Undo the nuts indicated.

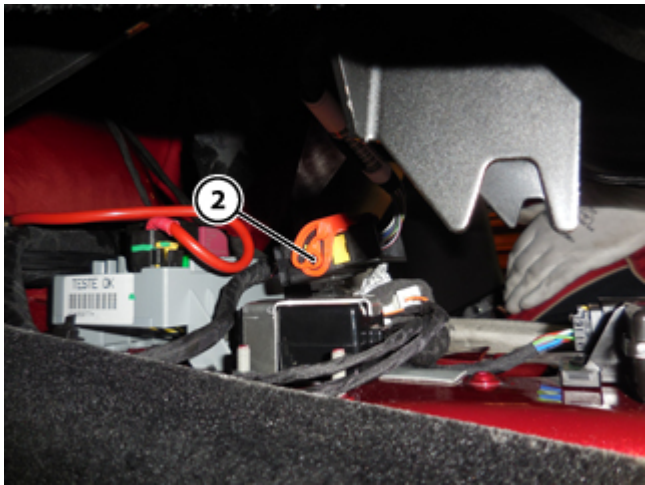


- Detach the centre tunnel console trim panel.
- Disconnect the connector (2).
- Remove the centre tunnel console trim panel via the luggage compartment.

Refitting the centre tunnel console trim

			
Tightening torque		Nm	Class
Fastening the centre console trim panel	Nut	4 Nm	B
	Screw	4 Nm	B
	Screw	5 Nm	B
	Screw	8 Nm	B
	Screw	9 Nm	B

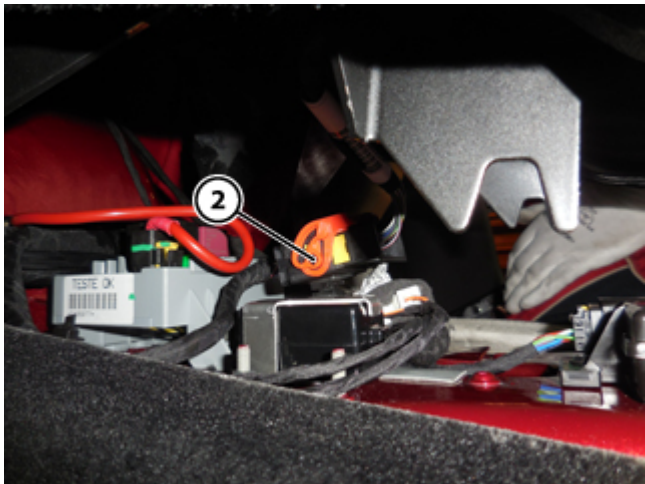

- Fit the centre tunnel console trim panel in the passenger compartment via the luggage compartment.
- Connect the connector (2).
- Fit the centre tunnel console trim panel.

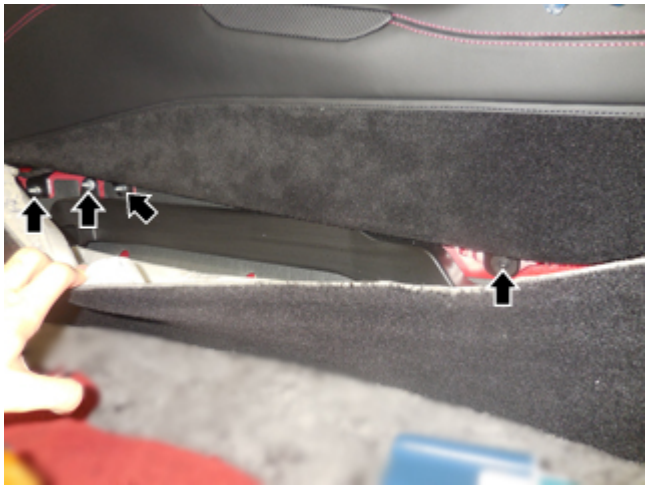

- Tighten the nuts indicated.

Tightening torque	Nm	Class
Nut	4 Nm	B

- Tighten the indicated screw.

Tightening torque	Nm	Class
Screw	4 Nm	B

- Fit and fasten the floor mat under side of the centre tunnel console trim panel.



- Tighten the nuts indicated.

Tightening torque	Nm	Class
Nut	4 Nm	B

- Tighten the indicated screw.

Tightening torque	Nm	Class
Screw	4 Nm	B

- Fit and fasten the floor mat under side of the centre tunnel console trim panel.



- Tighten the nuts indicated.

Tightening torque	Nm	Class
Nut	4 Nm	B



- Tighten the nuts indicated.

Tightening torque	Nm	Class
Nut	4 Nm	B



- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	5 Nm	B



- Fit and connect the indicated USB ports.



- Fit and connect the indicated USB ports.



- Tighten the upper screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B


- Tighten the lower screws indicated.

		
Tightening torque	Nm	Class
Screw	8 Nm	B



- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

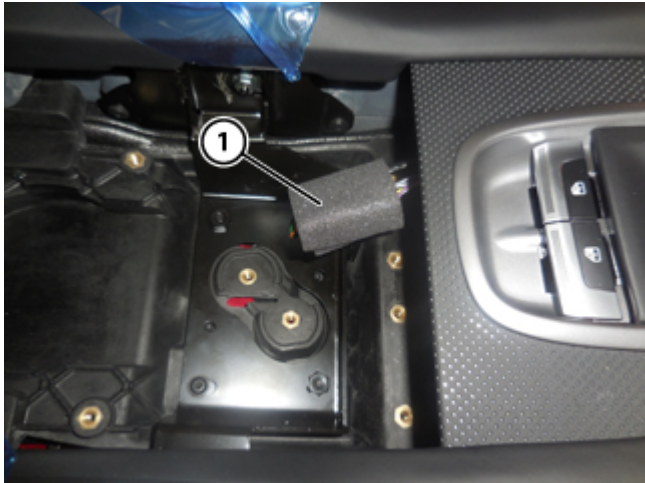

- Connect the connector (1), replacing the respective foam.

		
Tightening torque	Nm	Class
Screw	5 Nm	B



- Fit the trim (E).
- Tighten the screws indicated.




- Fit the trim (D).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B



- Fit and fasten the trim panels **(C)**.

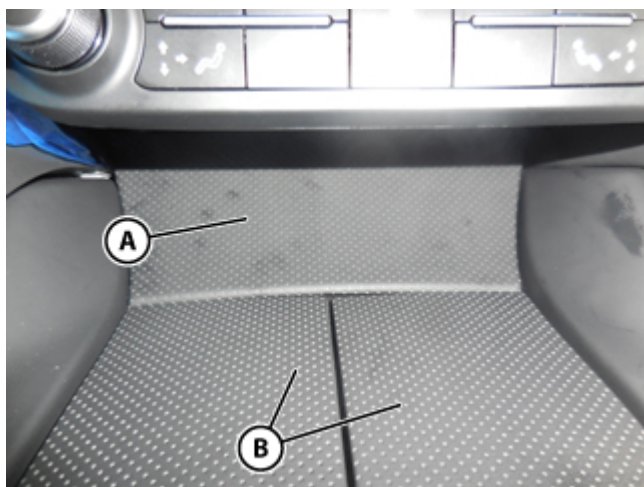

- Close the lid **(B)**.
- Fit and fasten the trim panel **(A)**.

- Refit the rear seats (🔑 E4.01).
- Refit the front seats (🔑 E4.01).
- Connect the battery (🔑 F2.01).