




GTC4Lusso USA - Mats - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E4.05 Mats

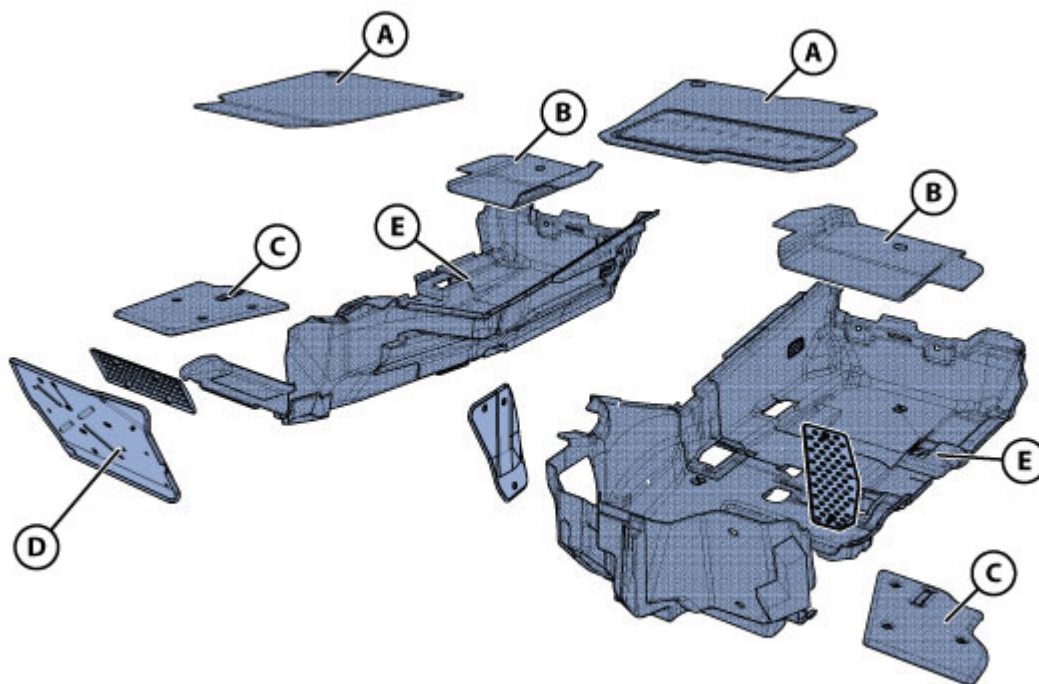

- A - Front removable mats
- B - Rear removable mats
- C - Inspection mats
- D - Passenger side footrest mat
- E - Floor mats

Removing the covers and mats

Front left hand removable mat

- Move the front left seat all the way back.



- Detach the indicated buttons.
- Remove the removable mat **(A)**.

Front right hand removable mat


- Move the front right seat all the way back.



- Detach the indicated buttons.
- Remove the removable mat **(A)**.

Left hand inspection mat


- Remove the front left hand removable mat.

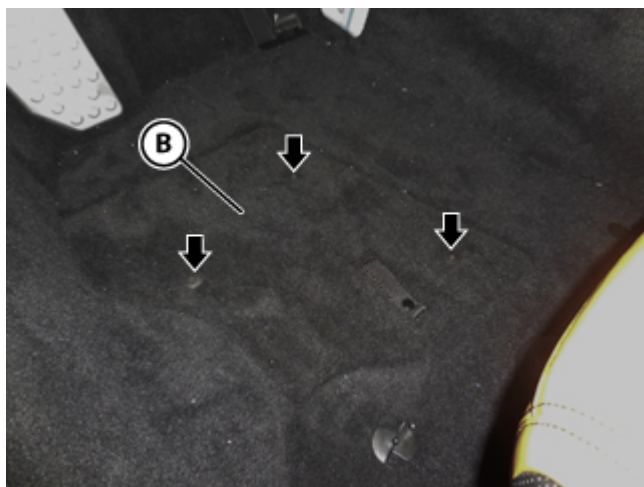

- Undo the screws indicated.
- Pulling the tab, detach and remove the inspection mat **(B)**.


Right hand inspection mat

- Remove the front right hand removable mat.

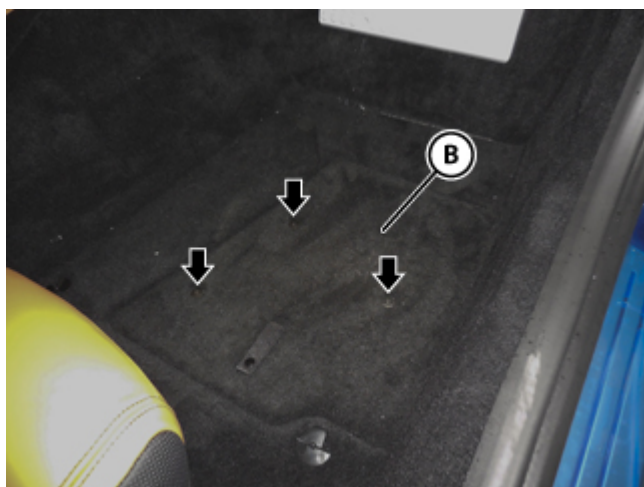

- Undo the screws indicated.
- Pulling the tab, detach and remove the inspection mat **(B)**.


Passenger side footrest mat

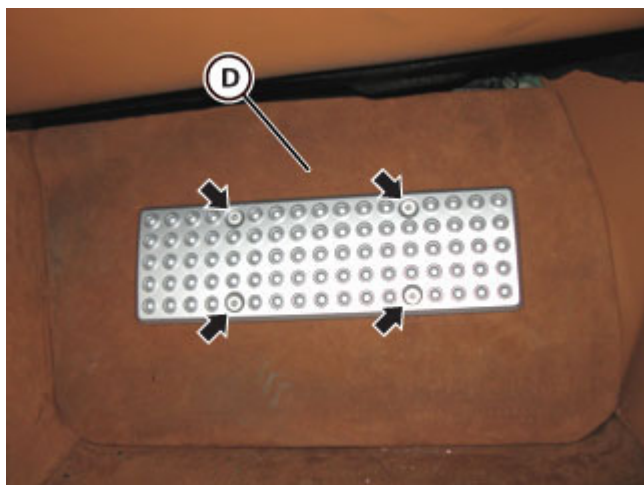

- Undo the screws indicated.
- Remove the passenger side footrest mat **(D)**.

Left hand floor mat


- Remove the front seats (🔑 E4.01).
i Remove the front left hand seat.
- Remove the rear seats (🔑 E4.01).
i Remove the rear left hand seat.
- Remove the passenger compartment trim panels (🔑 E4.04).
i Remove the front left hand lateral passenger compartment trim panel.
- Remove the left hand inspection mat.

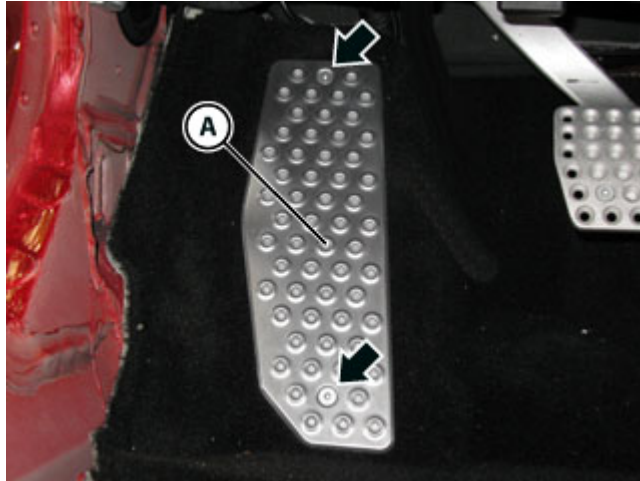

- Undo the screws indicated.
- Remove the footrest (A).



- Undo the screws indicated.
- Remove the plate (A).

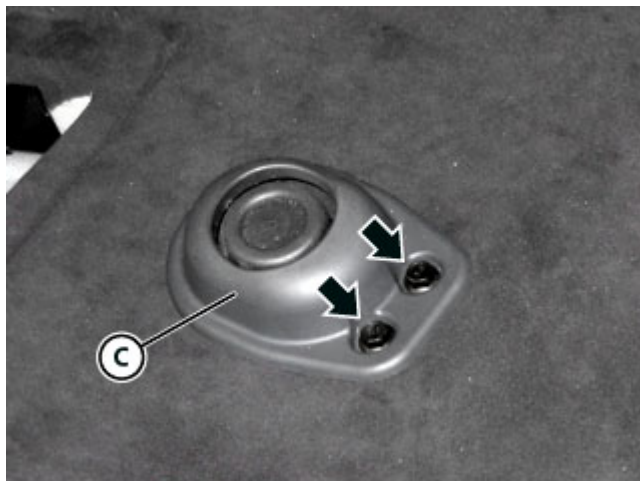

- Undo the screws indicated.
- Remove the guard (C).




- Disconnect the connector (1).

- Detach and remove the floor mat.

Right hand floor mat

- Remove the front seats (🔑 E4.01).
i Remove the front right hand seat.
- Remove the rear seats (🔑 E4.01).
i Remove the rear right hand seat.
- Remove the passenger compartment trim panels (🔑 E4.04).
i Remove the front right hand lateral passenger compartment trim panel.
- Remove the right hand inspection mat.
- Remove the passenger side footrest mat.

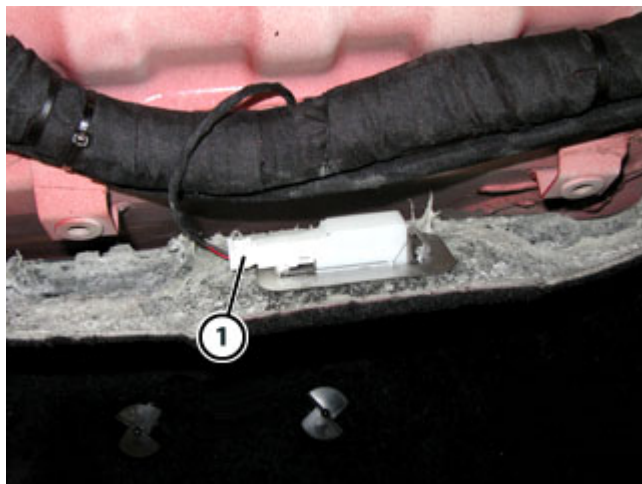

- Disconnect the connector (1).

- Detach and remove the floor mat.

Refitting the covers and mats


			
Tightening torque		Nm	Class
Fastening the inertia switch shield	Screw	5 Nm	B
Fastening accelerator pedal plate	Screw	8 Nm	B
Fastening driver side footrest	Screw	8 Nm	B
Fastening the footrest mat	Screw	9 Nm	B
Fastening inspection mat	Screw	3 Nm	B

Left hand floor mat

- Fit and fasten the floor mat.




- Connect the connector (1).

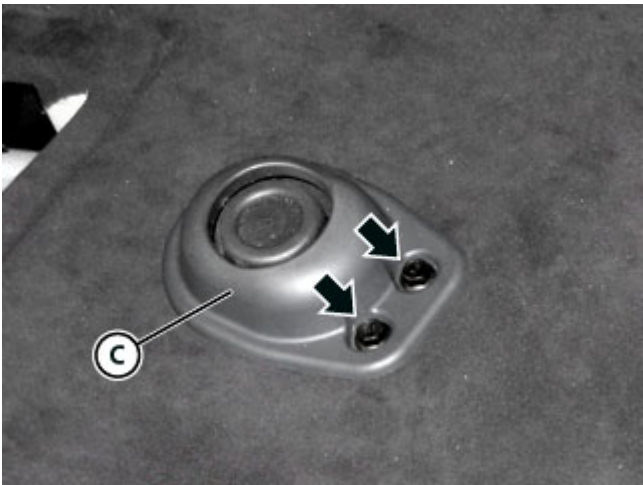


- Fit the guard (C).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

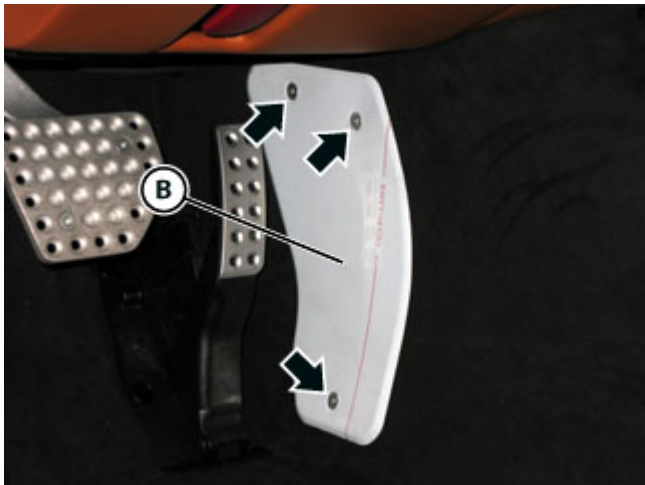

- Fit the plate **(B)**.
- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	8 Nm	B

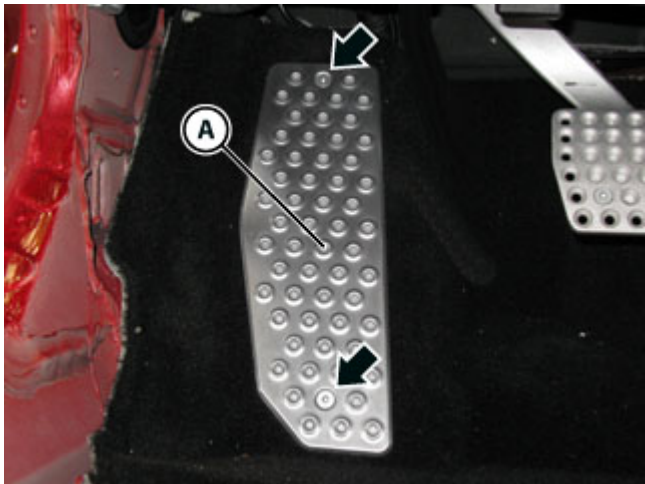


- Remove the footrest **(A)**.
- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	8 Nm	B

- Refit the left hand inspection mat.
- Refit the passenger compartment trim panels (E4.04).
- Refit the front left hand lateral trim panel.
- Refit the rear seats (E4.01).
- Refit the rear left hand seat.
- Refit the front seats (E4.01).
- Refit the front left hand seat.

Right hand floor mat


- Fit and fasten the floor mat.

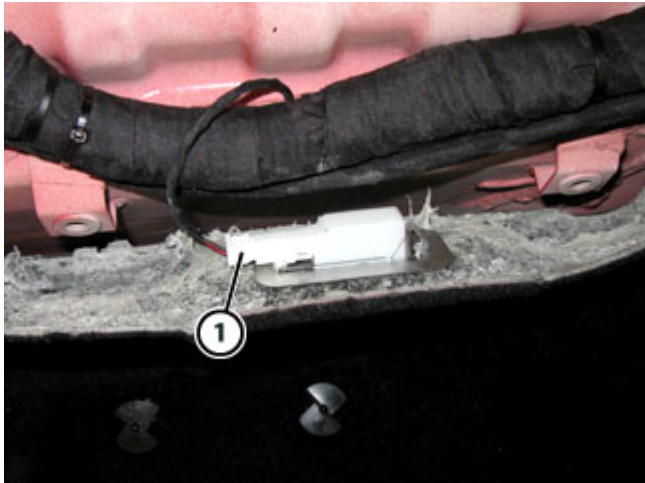

- Connect the connector **(1)**.

- Refit the passenger footrest.
- Refit the right hand inspection mat.
- Refit the passenger compartment trim panels (E4.04).
- Refit the front right hand lateral trim panel.
- Refit the rear seats (E4.01).
- Refit the rear right hand seat.
- Refit the front seats (E4.01).
- Refit the front right hand seat.


Passenger side footrest mat

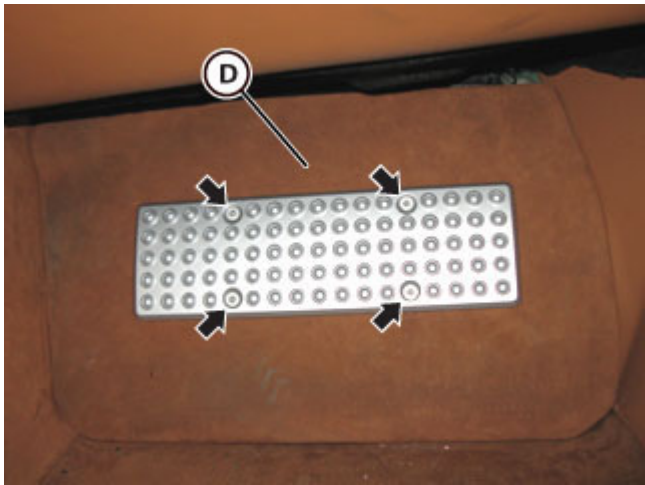

- Fit the passenger side footrest mat **(D)**.
- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	9 Nm	B

Right hand inspection mat

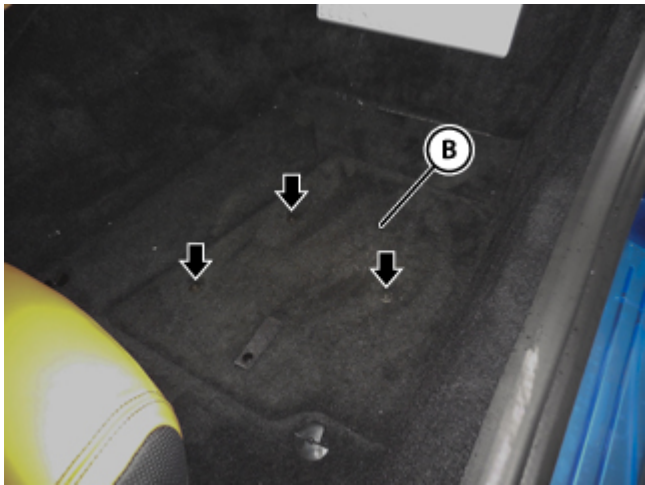


- Fit the inspection mat **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Refit the front right hand removable mat.

Left hand inspection mat

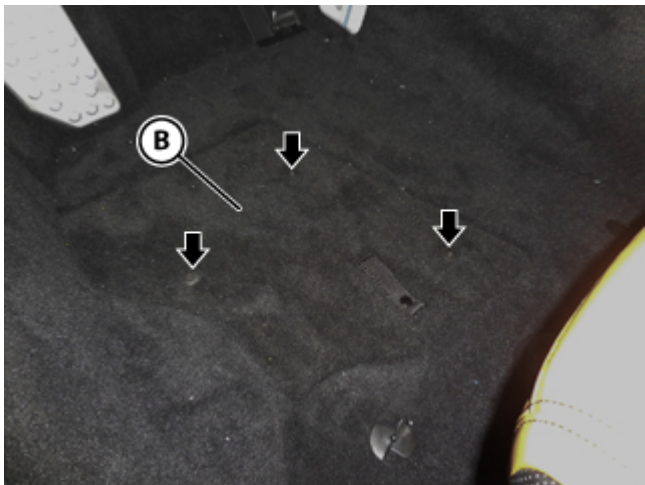

- Fit and fasten the inspection mat **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Refit the front left hand removable mat.

Front right hand removable mat



- Fit the removable mat **(A)**.
- Press the indicated buttons by hand to fasten.

Front left hand removable mat

- Fit the removable mat **(A)**.
- Press the indicated buttons by hand to fasten.