



GTC4Lusso USA - Instrument panel - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.02 Instrument panel



- A - Left hand TFT display
- B - Right hand TFT display
- C - Electronic tachometer
- D - DCT gearbox display
- E - Warning lights
- F - Manettino status
- G - Fuel level


Left hand TFT display

This display is set in the instrument panel and has the following functions:

- displaying control parameters;
- displaying general information while driving;
- indicating any faults.

To interact with the system, selecting the desired configuration and setting parameters, use the controls on the dashboard, on the left-hand side of the steering wheel.

Display areas

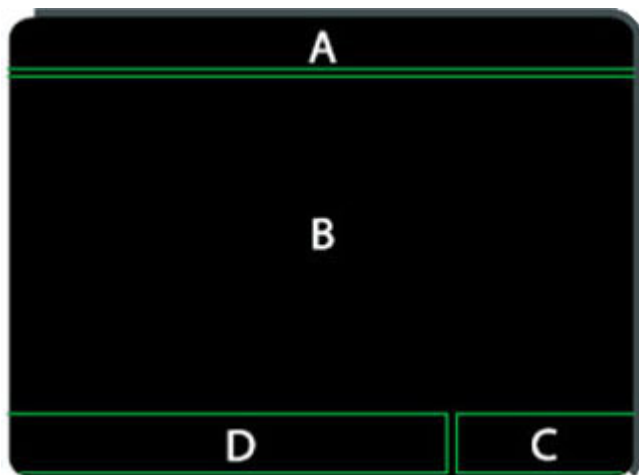

Each screen is subdivided into four display areas:

A: selected driving mode (Manettino position), windscreen wiper status, external temperature and "Ice hazard" icon, and "speed limit exceeded" warning.

B: virtual gauge display, fault/warning display (text message and specific symbol, if applicable) and brightness setting display.

C: total or trip (TRIP A or B) odometer display, range.

D: fuel gauge, area for iconised symbols relative to faults with no specific warning light on dial, speedometer repetition.

Fuel level gauge



The fuel level gauge is always displayed.

The gauge consists of yellow bars which progressively extinguish as the fuel level diminishes. After the second bar extinguishes, the first bar turns red and remains lit until the fuel tank is empty.



Once the fuel level enters reserve, in addition to the specific warning indicator illuminating on the dial, the relative symbol and the specific message **"Fuel level low"** are shown on the display for 10 seconds, together with the remaining range in Km.

If the conditions causing the symbol and message to be displayed persist, they are repeated every 8 Km. If the remaining range is very low, the remaining range information in Km is replaced by the message **"Limited cruising range"**.

MAIN screen

Turn and press the joystick to access the required screen group from the four groups available: STATUS, TRIP, VDA, SETTINGS.

These groups consist of the following screens:

- SETTINGS: MENU screen;
- STATUS: SPORT, SPORT 2 and TYRES screens;
- VDA: VDA screen;
- TRIP: TRIP A screen, TRIP B screen.

MENU screen


The display settings and a number of vehicle parameters are configurable from the MENU screen (the only screen in the SETTINGS group).

Navigation in the menu is organised into different levels:

The first level contains a list of options for setting the following parameters and displaying the following information:

- **Dimming**: adjust display illumination;
- **Right hand display**: configure right hand TFT display;
- **Date/Hour**: set date and time;
- **Language**: set language;
- **Units of measurement**: set units of measurement;
- **Car setup**: configure vehicle parameters;
- **Calibr. TPMS**: TPMS calibration;
- **Service**: scheduled maintenance information.

SPORT screen

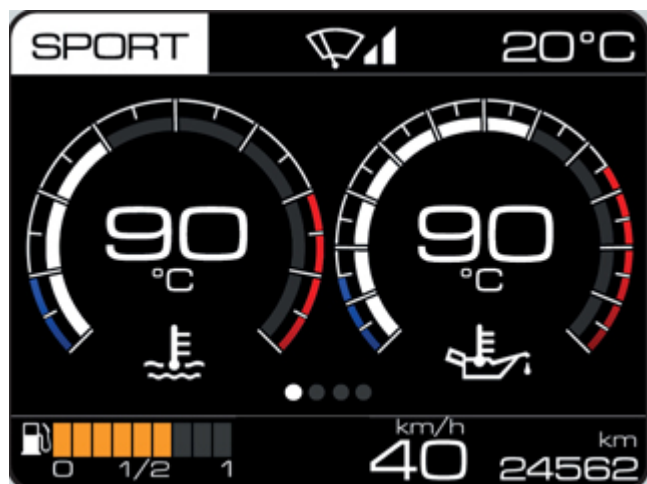


The SPORT screen contains the following virtual gauges:

- Engine coolant temperature;
- Engine oil temperature.

If any event occurs necessitating the visualisation of a specific symbol and/or message while the SPORT screen is active, the virtual indicators are displayed in minimised format.

SPORT 2 screen

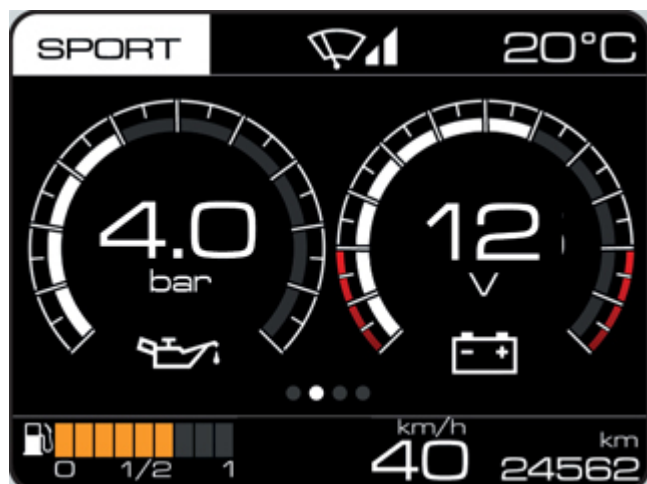


The SPORT 2 screen contains the following virtual gauges:

- Engine oil pressure;
- Voltmeter.

If any event occurs necessitating the visualisation of a specific symbol and/or message while the SPORT 2 screen is active, the virtual indicators are displayed in minimised format.

TYRES screen

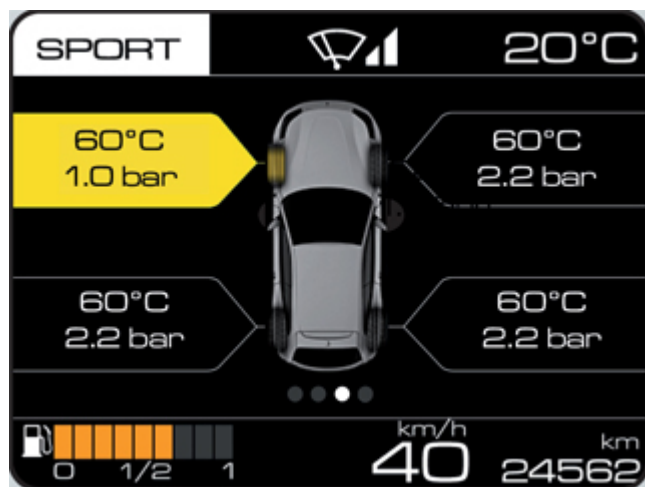

The TYRES screen displays a symbol of the vehicle with the pressure and temperature values for each tyre.

If any event occurs necessitating the visualisation of a specific symbol and/or message while the TYRES screen is active, the screen is displayed in minimised format.

TRIP A and TRIP B screens



The TRIP A and TRIP B screens display the following information:


- Maximum speed;
- Average speed;
- Travel distance;
- Travel time;
- Range.

If any event occurs necessitating the visualisation of a specific symbol and/or message while the TRIP A or TRIP B screens are active, the screen is displayed in minimised format.

Manettino status screen




In the event of a Manettino malfunction, the “Manettino Status” screen cannot be displayed or recalled.

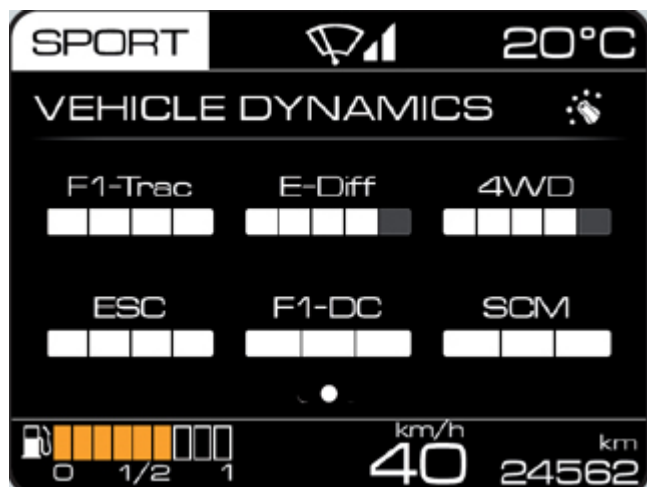

The “**Manettino status**” screen displays a list of the parameters configurable using the Manettino driving mode selector, indicating the relevant configuration for each parameter in each of the driving modes. The systems involved are as follows:


- **F1-Trac**: traction control;
- **E-Diff**: electronic differential;
- **4WD**: 4 wheel drive system;
- **ESC**: stability and traction control;
- **F1-DC**: dual clutch F1 gearbox;
- **SCM**: magnetorheologically controlled suspension.

Daytime running lights and turn indicator lights failure warning

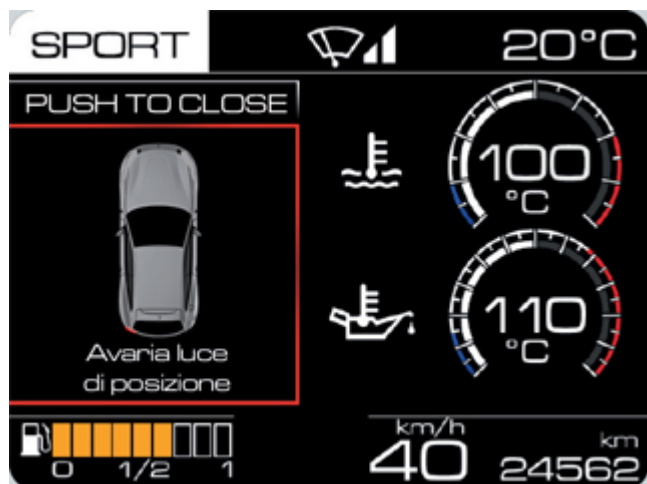

Daytime running light faults (front and/or rear) and turn indicator light faults (front and/or rear) are indicated with the same method as all other faults, but instead of the specific “External lights failure” symbol, the description of the fault is accompanied by the vehicle symbol with the malfunctioning daytime running light or turn indicator light indicated in red. The specific symbol “External lights failure” is reduced to iconised form once the display cycle is complete or if the joystick is pressed (“ESCAPE” function).

“Doors, engine compartment lid or luggage compartment lid open” notification

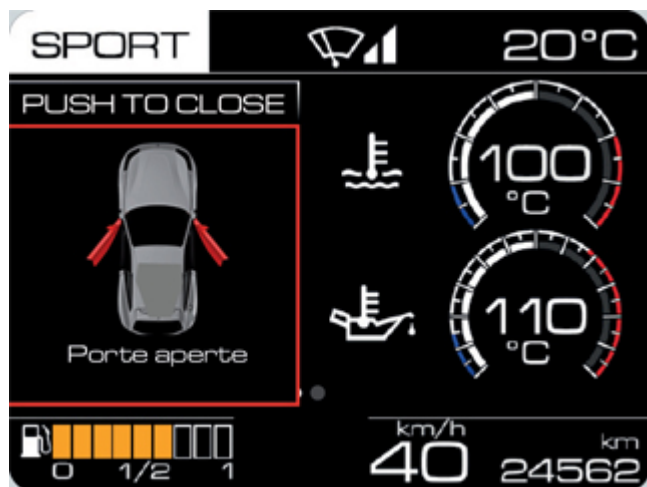

If one or more doors and/or the engine compartment lid and/or the luggage compartment lid are open, the vehicle symbol is shown on the display, indicating the open doors and/or lids, together with the specific message. An audible warning also sounds if the vehicle is moving. The specific symbol is reduced to iconised form once the display cycle is complete or if the joystick is pressed ("ESCAPE" function).

Electronic analogue tachometer



The electronic rev counter is set in the centre of the instrument panel.

The numbers on the dial represent engine speed in rpm/1000.

Avoid engine speeds in the red zone.

At the bottom right of the rev counter is a display showing information relative to the DCT dual clutch gearbox.



If the rev counter has a white or yellow background, the backlighting is not enabled during the daytime - i.e. with the parking lights off, or with the parking lights on, but with the twilight sensor detecting daytime light conditions - so as to allow instrument better visibility.

Right hand TFT display

This display is set in the instrument panel and has the following functions:


- vehicle speed display;
- duplicated infotainment system (MEDIA, NAVI and PHONE) information in reduced format.

Turn the control wheel behind the right hand steering wheel spoke to scroll through the screens.

Speedometer reading screen

The vehicle speed may be displayed on the right hand TFT display in either “Speedometer” or “Digital speed” mode.

To select the required display mode, recall the SETTINGS screen of the left hand TFT display and select the option “Right hand display”.

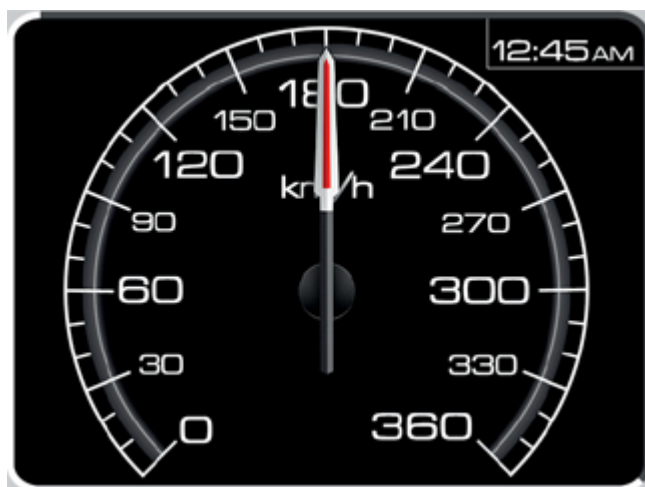

In “Speedometer” mode, the vehicle speed is displayed as a virtual analogue speedometer.



In “Digital speed” mode, the vehicle speed is indicated in digital format.

"Rear parking camera" screen




When reverse is selected, the "Rear Parking Camera" screen is automatically activated on the infotainment system display.

This screen, which remains active as long as reverse is engaged, displays images from the camera installed in the rear bumper to assist the driver when parking.

The image is overlaid by a dynamic grid of green, yellow and red lines, which changes in relation to steering angle to represent and predict the trajectory of the vehicle during the manoeuvre.

The dynamic parking grid overlay also indicates the distance between the vehicle and any obstacles in the field of vision of the camera. The red zone indicates the area between approximately 0 and 60 cm from the vehicle, the yellow zone indicates the area between 60 and 120 cm, and the green zone indicates the area between 120 and 240 cm from the vehicle.

"Dual view camera" screen (optional)

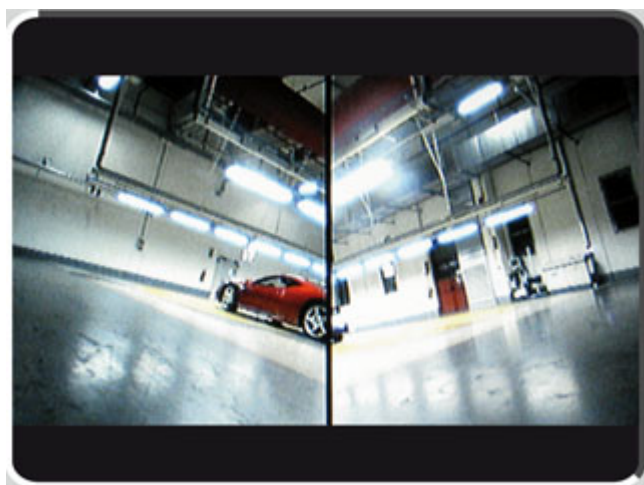

On vehicles equipped with the "Dual View Camera" (consisting of an additional camera installed in the front bumper) as well as the rear parking camera, the following screens are available on the right hand TFT display:

- "Top View" front centre view;
- "Corner View" lateral front corner view;
- rear view with grid ("Rear Parking Camera");
- wide angle rear view ("Rear Parking Camera");



Press **(C)** to select the view mode: press **(C)** briefly and release to recall "Corner View" mode.

Pressing the button again toggles between the two front views available.

The display of images from the front camera is disabled at speeds above 12 Km/h

The "Rear Parking Camera" screen is shown automatically on the infotainment system display when reverse is selected.

To exit "Dual View Camera" mode and return to the infotainment system display mode, press and hold **(C)** for a few seconds.

If one of the two reverse rear view modes is active, the "Corner View" is activated once the driver shifts out of reverse.

Storing the "Start of vehicle life"

When the vehicle is delivered, the start date of vehicle life must be stored, from which the counter begins for the expiry date for the first "Scheduled Maintenance" service.

The parameter is entered using the DEIS diagnostic tester.

"Scheduled Maintenance" reset

At every scheduled service date, the 'maintenance complete' procedure must be performed using the relevant function on the DEIS diagnostic tester.

The instrument panel must store the following data:

- service No. performed;
- service date;
- total mileage at service date.

This data must be readable via the DEIS diagnostic tester.

At each service, before resetting the "Scheduled Maintenance" parameter, the instrument panel verifies that the date on the CAN network is later than the "start of vehicle life" date or that of the previous service. If these conditions are not met, the panel will not accept the reset operation.

Gearbox display

At the bottom right of the tachometer is a display showing information relative to the DCT dual clutch gearbox. this displays the following information when the instrument panel is on:

- Gear selected;
- "Automatic" transmission mode;
- Gearbox in "auto easy exit" mode notification;
- "Parking" mode;
- "Launch Control" enabled;
- "AVH" system enabled.

Information concerning the gearbox is always displayed in all operating conditions.

Engaged gear (DCT gearbox)



The number or letter indicating the gear/mode selected is shown in the centre of the gearbox display.

- **N**: Neutral
- **R**: Reverse
- **1**: 1st gear
- **2**: 2nd gear
- **3**: 3rd gear
- **4**: 4th gear
- **5**: 5th gear
- **6**: 6th gear
- **7**: 7th gear

When the ignition is turned to Key-off, the display remains active for at least 3 seconds, displaying the currently selected gear/mode. If the information received by the instrument panel indicates that the transmission is in N (Neutral), the letter N is displayed and an audible warning signal sounds.

"Automatic transmission" mode



When the DCT gearbox is in AUTOMATIC mode, the message “**AUTO**” is shown at the bottom of the display together with the number or letter indicating the gear/mode currently selected.

Gearbox in "Auto easy exit gearbox" mode notification;



In addition to the message “**AUTO**” at the bottom, a small arrow pointing downwards is also shown in the left hand area of the gearbox display.

“Parking” mode



When the gearbox Park Lock system is activated, the gearbox display shows the letter “P” at the centre.

"Launch Control"



When, with the gearbox in "manual" mode, the driver requests the Launch Control function by pressing the relative button on the centre console, the message "launch" is shown at the bottom of the gearbox display. The message remains on the screen for as long as the function is active.

AVH system enabled



When the AVH function is activated, the message "**HOLD**" is shown on the gearbox display.

Efficient gear shift prompt (SIL)

When the gearbox is in "manual" mode, an upward pointing arrow symbol is displayed when the ideal engine and vehicle speed are reached for shifting to a higher gear. Shifting up when prompted will reduce fuel consumption.

The symbol disappears automatically if the recommended speed is exceeded or if the driver changes gear.


Removing instrument panel

- Disconnect the battery (🔧 F2.01).
- Remove the dashboard trim panels (🔧 E4.02).

 Remove the instrument panel trim and the steering column trim panel from the dashboard.




- Undo the indicated screw.

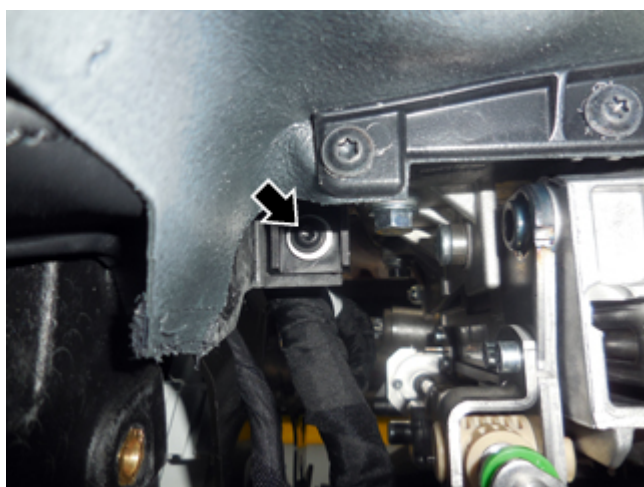

- Undo the indicated screw.




- Undo the screws indicated.

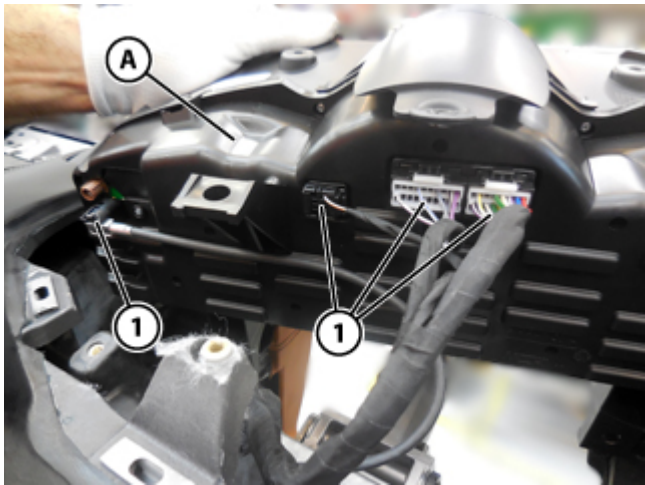


- Detach and lift the instrument panel (A).
- Disconnect the connectors (1).
- Remove the instrument panel (A).

Refitting instrument panel

			
Tightening torque		Nm	Class
Fastening instrument panel	Screw	3 Nm	B

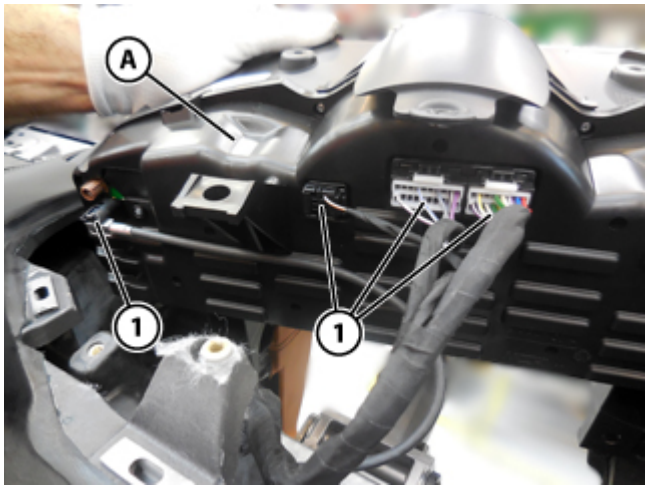


- Connect the connectors (1).
- Fit and fasten the instrument panel (A).

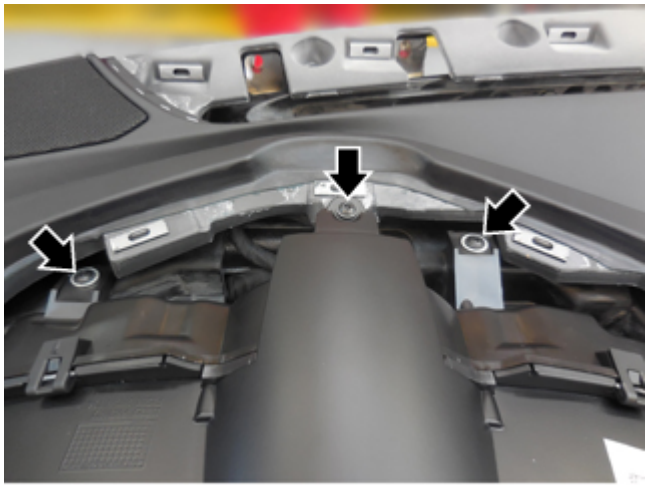

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

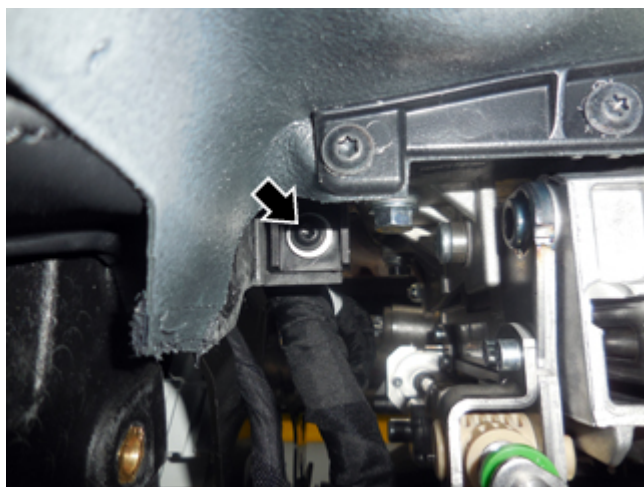

- Tighten the indicated screw.



Tightening torque	Nm	Class
Screw	3 Nm	B



- Tighten the indicated screw.



Tightening torque	Nm	Class
Screw	3 Nm	B

➤ Refit the dashboard trim panels (🔧 E4.02).

❗ Refit the steering column trim panel and the instrument panel trim on the dashboard.

➤ Connect the battery (🔧 F2.01).

➤ Connect the DEIS tester to the diagnostic socket (🔧 F2.09).

❗ Perform the respective cycle with the DEIS diagnostic tester.