



GTC4Lusso USA - TFT display messages/notifications and warning lamps - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.03 TFT display messages/notifications and warning lamps

Indications on the TFT display

The driver is notified of a fault by the instrument panel via the following events:

- relative fault warning light (if available) illuminated on instrument panel;
- icon (if available) corresponding to fault displayed with relevant specific message (if available) on TFT display;

The icon appears on the display simultaneously with the illumination of the warning light on the instrument panel (if available).

All information contained in the display area reserved for messages is replaced by information concerning the failure.

Faults are displayed according to the priority attributed to the faults themselves:

- Priority 0 (critical)
- Priority 1 (very serious)
- Priority 2 (serious)
- Priority 3 (not serious)

In the event of multiple simultaneous faults, the faults are displayed in order, with priority 0 faults first, priority 1 faults next and priority 2 and 3 faults last. The information relative to the faults is displayed for 5 seconds for each fault in rolling order,

If, during the display cycle for a fault, another fault occurs with the same priority, this will replace the message currently displayed only once the latter has been displayed for at least 2 seconds. If a higher priority fault occurs, this immediately replaces the fault currently displayed.

Warning lights

They are backlit by LED lights of appropriate colours illuminating the relative surface directly.

The warning lights are only displayed when active (symbol only illuminated).

The symbols are permanently visible with light coloured instrument backgrounds.

The lights are displayed at Key-on and in the following conditions with the vehicle in motion:

List of icons



In the images below, the icon on the left is the symbol appearing on the TFT display, while the icon on the right is the check lamp on the instrument panel.

Schedule maintenance



Indicates next scheduled service interval.

Engine diagnostic system (EOBD)



During operation, indicates emissions control system and ignition/injection system failures. Lights for a few seconds after turning the ignition to KEY-ON as a self-check cycle.

Inertia switch



Inertia switch triggered by an accident, cutting off the fuel supply to the engine.
This function also activates the hazard warning lights automatically.

Reserve fuel




Indicates low fuel level.

Engine oil pressure




Insufficient engine oil pressure.
Flashes to indicate an engine oil pressure sensor failure.

Engine oil temperature

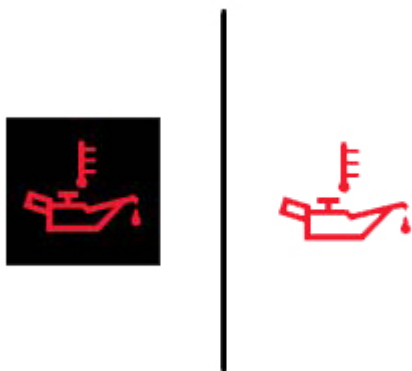

Oil temperature too high.

Engine coolant temperature

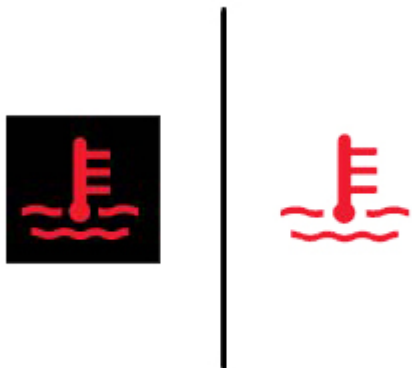


Engine coolant temperature too high.

Catalytic converter temperature



Lights red if an excessively high catalytic converter temperature is detected: stop the vehicle.
Lights orange if a high catalytic converter temperature is detected (driver must drive at reduce speed until the symbol extinguishes) or to indicate a catalytic converter temperature sensor failure.

Gearbox

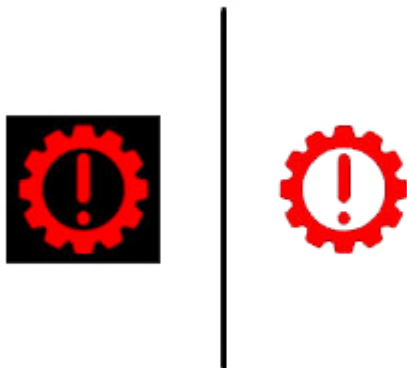

Gearbox system failure.

E-Diff system



Electronic differential system failure.

May light orange (severe failure) or red (very severe failure).

Power steering



Power steering system malfunction.

Brake system



BRAKE

May indicate the following:

- Low brake fluid level.
- EPB electric parking brake failure.
- Park Brake system service necessary.

Indicates an EBD system fault if displayed together with ABS warning lamp.

Brake pads



BRAKE

Excessive brake pad wear.

CCM brake discs



Carbon ceramic brake discs worn.

Parking brake

PARK

Parking brake engaged.

EPB electric parking brake failure, together with brake system warning light (lit continuously or flashing).

AVH system

AVH system failure.

ABS system

ABS system failure.

The braking system is still functional.

ESC system



Symbol and indicator lamp indicating that ESC system has been disengaged.
Symbol is displayed for 5 seconds together with the message “**ESC OFF**”.

ESC system failure



ESC system failure.

Stop the vehicle, avoiding sudden manoeuvres or hard braking.

The vehicle may be drive at low speeds only (max. 40 km/h) to clear the road.

The indicator lamp alone flashes on the instrument panel when the ESC system is actively controlling vehicle stability (does not indicate a fault).

4WD system



This symbol may indicate the following, depending on the specific message also displayed:

- 4 wheel drive system failure.

4 wheel drive system is not available. Slow down and drive with caution, especially in the case of low grip conditions.

- 4 wheel drive system overheated.

- Insufficient 4 wheel drive system oil pressure.

In these cases, the functions of the 4 wheel drive system are limited or temporarily unavailable.

Slow down and drive with caution, especially in the case of low grip conditions, until the fault indication is no longer displayed.

4WS system



"Snow chain" mode activated.

4 wheel steering system failure.

Suspension



Suspension control system failure.

Lift system



If lit steadily, indicates that the "Lift" system is active (vehicle raised).

If flashing, indicates that the "Lift" system is moving (activate or deactivate cycle).

"Front lift" system failure (shown on TFT DISPLAY).

TPMS system



One or more tyres punctured.

If the indicator lamp flashes for up to 90 seconds, and then lights steadily, this indicates the following:

- TPMS system failure.
- TPMS system temporarily inactive.
- TPMS system inactive.
- TPMS system not calibrated



TPMS system calibration launched.

Generic fault



Airbag warning lamp failure.

Manettino failure.

Electronic system failure.

Battery conditioner connected



When the instrument panel is on, indicates an active connection with the battery conditioner.

Alternator



Charging system fault.

Twilight sensor



Ambient light sensor failure.

Parking sensor system

Parking sensor system failure.

Vehicle alarm system

May indicate an anti-theft system failure or that the system has not been programmed.

Passive Start System (Keyless)

!“Key-Less” key detection system failure.

Stop&Start system



When displayed together with the relative specific message, this may indicate the following:

- Stop&Start system engaged.
- Stop&Start system active.
- Stop&Start system unavailable or temporarily disabled.



Stop&Start system disengaged.



Stop&Start system failure (lights orange to indicate a severe failure, or red to indicate a very severe failure)

Doors/luggage compartment lid/engine compartment lid open

One or more doors and/or lids open.

Airbag system

Airbag system failure.

Flashes to indicate that airbag test cycle has not completed successfully.

Seat belts

Indicates that driver and/or passenger have not fastened their seat belt. Accompanied by an audible warning signal lasting 90 seconds.

Cruise Control



Cruise Control system engaged / disengaged.

Ice hazard



Illuminates with an external temperature of 3°C (38°F) or less to warn of potential ice on the road. Drive with due caution and at lower speed, as tyre grip is significantly reduced in these conditions.
Select “ICE” manettino mode.

Rain sensor



Rain sensor failure.

Low windscreen washer fluid level

Indicates that the level in the windscreen washer fluid reservoir is low.

Windscreen wiper motor

Windscreen wiper motor failure.

Adaptive headlights

Symbol and indicator lamp flash to indicate an adaptive headlight system failure.

External lights

Light system malfunction or blown DRL, turn indicator or rear fog light lamp.

Stop lights

Light system malfunction or blown brake light lamp.

Number plate lights

Light system malfunction or blown license plate light lamp.

Running lights

Daytime running lights or low beam lights on.

Rear fog light

Fog lights switched on.

Left hand turn indicator

Left hand turn indicator on.

Right hand turn indicator

Right hand turn indicator on.

Hazard warning lights

Left and right hand turn signal indicator lights flash simultaneously to indicate that the hazard warning lights have been switched on.

high beams

High beam headlights switched on.

Indicator lamp also illuminates when flashing the high beam lights.