



GTC4Lusso USA - Switches and buttons - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.04 Switches and buttons

Preparation in progress

External lights control

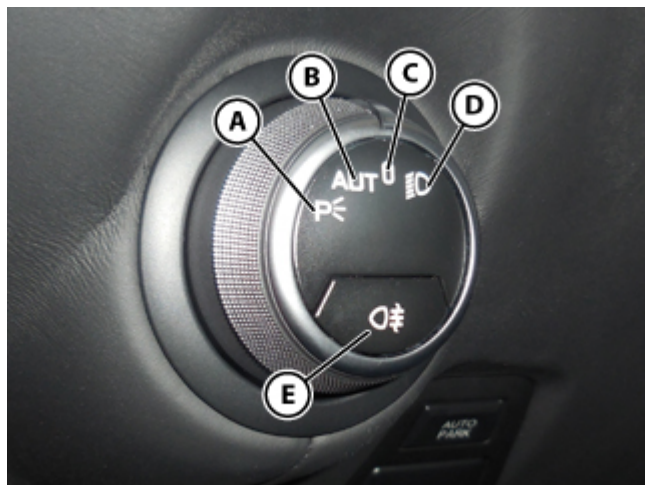

The external lights will only function with the system in Key-ON state.

Turn the external light control clockwise or anticlockwise to select between the following external light modes:

- Turn to position **(A)** to switch on the parking lights.
- Turn to position **(B)** to set the lights to automatic mode, controlled by the twilight sensor.
- Turn to position **(C)** to switch the lights off.
- Turn to position **(D)** to switch on the low beam headlights.
- Press the button **(E)** to switch the rear fog lights on and off. The rear fog lights can only be switched on and off if the low or high beam headlights are on.

The rear fog lights may be switched on manually once the external lights have switched on in automatic mode.

When the external lights switch off automatically, the rear fog lights are also switched off automatically (if on), and will have to be switched on again manually, if required, the next time that the external lights switch on automatically.



Push the lever **(F)** towards the dashboard to switch on the high beam headlights. Pull the lever towards yourself to switch off the high beam headlights and switch on the low beam headlights.

Replacing the external light selector

			
Tightening torque		Nm	Class
Fastening external lights control mounting bracket	Screw	3 Nm	B

- Disconnect the battery (🔧 F2.01).
- Remove the dashboard trim panels (🔧 E4.02).
 - ❗ Remove the driver side lower dashboard trim panel.
- Replace the EPB electric parking brake control buttons (🔧 E5.04).
 - ❗ Perform the procedure for removing the bracket only.



- Undo the screws indicated.
- Prise off and remove the light selector **(B)** and replace.
- Fit and fasten the new light selector **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Replace the EPB electric parking brake control buttons (🔧 E5.04).

 Perform the procedure for refitting the bracket only.

- Refit the dashboard trim panels ( E4.02).
-  Refit the driver side lower dashboard trim panel.

➤ Connect the battery ( F2.01).

Left hand TFT display control buttons




- Rotate and press the controller joystick **(A)** to select and recall the four available screen groups: STATUS, TRIP, VDA, SETTINGS.
- Press BACK **(B)** to recall the MAIN screen.
- Press CRUISE CONTROL **(C)** to activate or deactivate the cruise control function.
- Rotate and press the RES **(D)** controller joystick to set the cruise control speed.


Replacing the left hand TFT display control

			
Tightening torque		Nm	Class
Fastening TFT display control	Screw	0.3 Nm	B
Fastening TFT display control bracket	Screw	3 Nm	B

- Disconnect the battery ( F2.01).
- Remove the dashboard trim panels ( E4.02).
-  Remove the driver side lower dashboard trim panel.

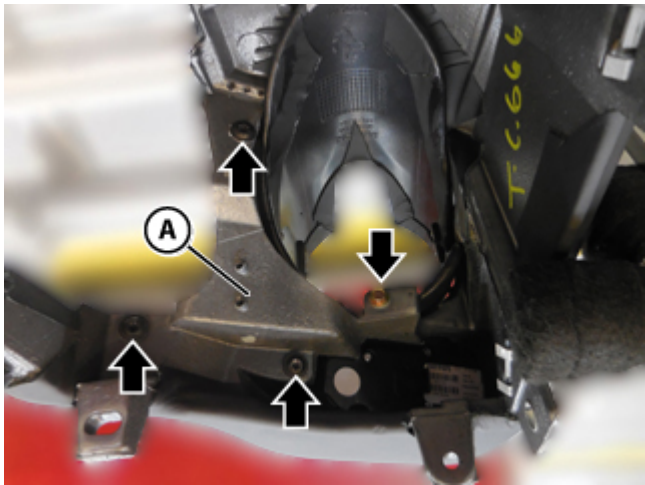


- Undo the screws indicated.
- Detach and remove the left hand TFT display control mounting bracket **(A)**.

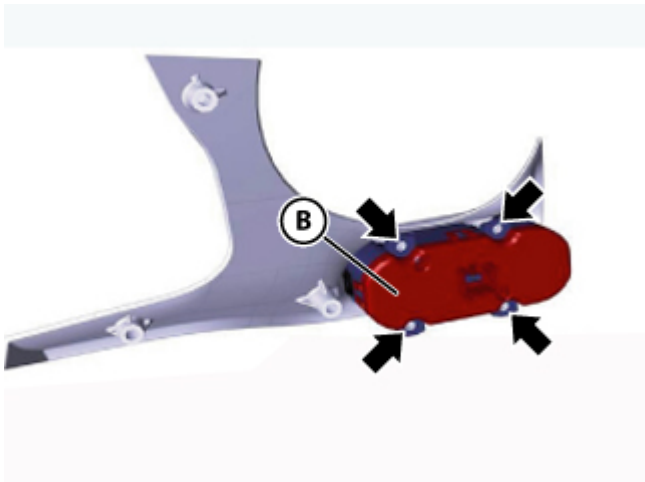

- Undo the screws indicated.
- Prise off and remove the left hand TFT display control **(B)** and replace.
- Fit the new left hand TFT display control **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	0.3 Nm	B

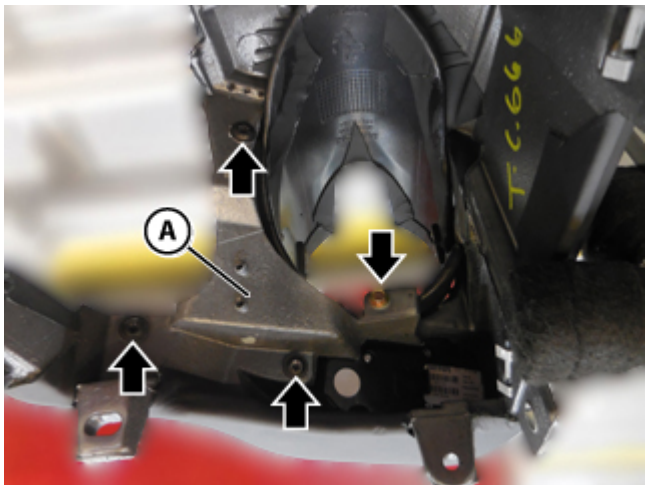

- Fit the left hand TFT display control mounting bracket **(A)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Refit the dashboard trim panels ( E4.02).
- Refit the driver side lower dashboard trim panel.
- Connect the battery ( F2.01).

Electrically adjustable steering wheel control



The steering wheel reach and rake are adjustable electrically (only with the system in Key-On state), by pushing the control **(A)** in the intended direction of adjustment for the steering wheel.

The steering wheel position is also memorised, together with the external rear view mirror position, when the driver seat position is memorised.

EPB electric parking brake control buttons



The vehicle may move with no warning when the Park Lock is mechanically released!
The vehicle is held in position only by the electric parking brake, if engaged.

The lever **(B)** engages and releases the EPB electric parking brake (by operating the brake shoes) in the following conditions:

- engine off;
- System in Key-on state;
- brake pedal depressed.

The parking brake may be used as an emergency brake while the vehicle is in motion. In this case, the system continues to apply the brakes to all four wheels until the lever **(B)** is released, dialoguing with the ESP stability control system, which prevents the wheels from locking up.

Autohold function

After deactivating the EPB electric parking brake as described previously, and with the system in Key-ON state, pressing the AUTO PARK button **(A)** activates or deactivates the Autohold function, which automatically engages the EPB electric parking brake when the ignition is switched to Key-OFF.



CAUTION

When the Autohold function is deactivated, when parking the vehicle, always remember to manually engage the electric parking brake with the relative lever before switching off the engine.


When the button **(A)** is pressed, the message **"PARK OFF"** is displayed for **5 seconds** on the left hand TFT display. The next time the button **(A)** is pressed, the message **"PARK ON"** is displayed for **5 seconds** on the left hand TFT display.

AVH "Automatic Vehicle Holding" function

The electric parking brake ensures optimised brake release dynamics for hill starts with the Automatic Vehicle Holding function: when certain conditions are met, the system keeps the vehicle braked by releasing the brake shoes and callipers at different times, allowing the driver enough time to move the foot from the brake to the accelerator without the vehicle rolling backwards.

Replacing the EPB electric parking brake control buttons

- Disconnect the battery ( F2.01).
- Remove the dashboard trim panels ( E4.02).
- Remove the driver side lower dashboard trim panel.

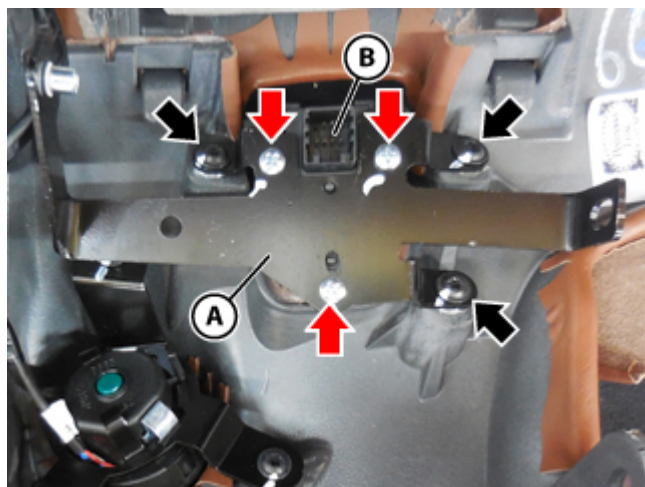


- Undo the screws indicated by the black arrows.
- Remove the bracket **(A)**.
- Undo the screws indicated by the red arrows.
- Remove the EPB electric parking brake control buttons **(B)** and replace.
- Fit the new EPB electric parking brake control buttons **(B)**.
- Tighten the screws indicated by the red arrows.
- Fit the bracket **(A)**.
- Hand tighten the screws indicated by the black arrows.

- Refit the dashboard trim panels ( E4.02).
- Refit the driver side lower dashboard trim panel.

- Connect the battery ( F2.01).

Replacing the external rear view mirror adjustment control

- Disconnect the battery (🔑 F2.01).
- Remove the door panels (🔑 E3.09).
- Remove the left hand armrest trim.

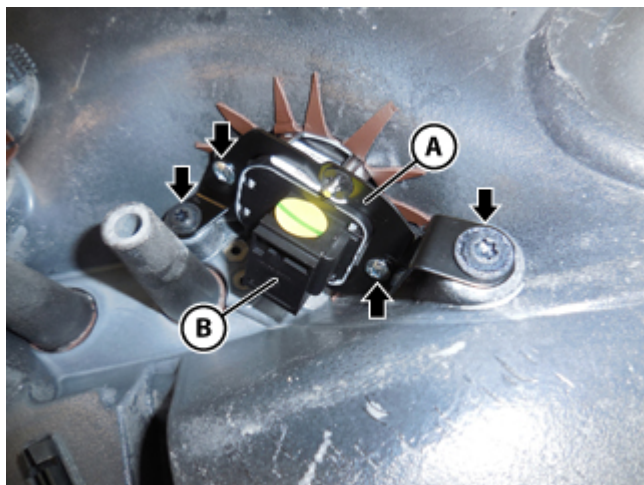

- Remove the bracket **(A)**, undoing the respective screws indicated.
- Remove the external rear view mirror adjustment control **(B)**, undoing the respective screws indicated, and replace.
- Fit the new external rear view mirror adjustment control **(B)**, tightening the respective screws indicated.
- Fit the bracket **(A)**, tightening the respective screws indicated.

- Refit the door panels (🔑 E3.09).
- Refit the left hand armrest trim.
- Connect the battery (🔑 F2.01).

DCT gearbox control buttons



Press the **LAUNCH (A)** button to activate the Launch Control performance start function. Activating this function ensures the fastest acceleration possible for the vehicle from a standing start. The function, which cannot be selected with the Manettino set to “Low Grip” mode, transmits the optimum amount of torque to the road surface to prevent wheelspin under acceleration.

Use the following procedure to activate Launch Control:

- Vehicle stationary;
- brake pedal depressed;
- gearbox in manual mode;
- select first gear;
- disable traction control by setting the Manettino to CST OFF;
- press the **LAUNCH (A)** button on the centre console panel, an audible signal warns that the function is active and the message “launch” is shown on the gearbox display;

- press the accelerator pedal and release the brake pedal.

In the event of malfunction of the “UP” and “DOWN” shift paddles, the message “Depress brake pedal and press LAUNCH to engage gear” is shown on the left hand TFT display. The gear may then be engaged by pressing **LAUNCH (A)** on the centre console while depressing the brake pedal.

In this case, the “Launch Control” function is not available.

If the gear selected previously was R, the **LAUNCH** button **(A)** must be pressed twice to engage 1st gear.

Press **R (C)** to select reverse.

Release button **R (C)** immediately once the relative gear selected is shown on the display. Holding the button for a prolonged period will cause the gearbox fault warning indicator to light, accompanied by a warning sound.

An audible safety signal sounds intermittently for as long as reverse is engaged.

If the system automatically engages 2nd gear when attempting to shift from “R” to 1st, this indicates that crashing was encountered in 1st gear.

If crashing is encountered when attempting to shift from 1st to “R”, the system automatically engages “N”.

Press **AUTO (B)** to select “Automatic” mode for the DCT gearbox.

The message “auto” is shown on the display when “Automatic” mode is enabled.

When in “Automatic” mode, the system automatically upshifts and downshifts in relation to vehicle speed, engine speed and the torque/power requested by the driver.

When in “Automatic” mode, the driver may still shift manually using the UP and DOWN shift paddles.

After a manual shift, the system remains in “Automatic” mode, as indicated by the message “auto”, which continues to be shown on the display and flashes when the driver shifts manually with the paddles.

When the vehicle is stationary, requesting “N” from 1st or “R” will not cause the gearbox to switch from “Automatic” to “Manual” mode.

Press and hold **AUTO (B)** until the message “auto” is no longer shown on the gearbox display to exit the DCT gearbox “Automatic” mode.


The default mode for the DCT gearbox is “Automatic”.

At each engine start, the DCT gearbox will be in “Auto easy exit” unless the vehicle was last switched off with the DCT gearbox in “Automatic” mode.


To exit “Auto easy exit” mode, simply press the **AUTO** button **(B)** on the centre console.

Removing DCT gearbox control panel

- Disconnect the battery ( F2.01).
- Remove the centre tunnel console trim ( E4.03).

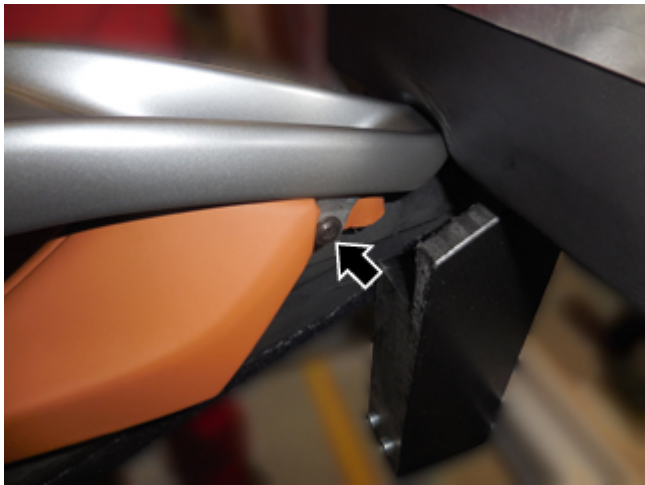

- Undo the indicated screw.
- Turn the centre console trim panel upside down.

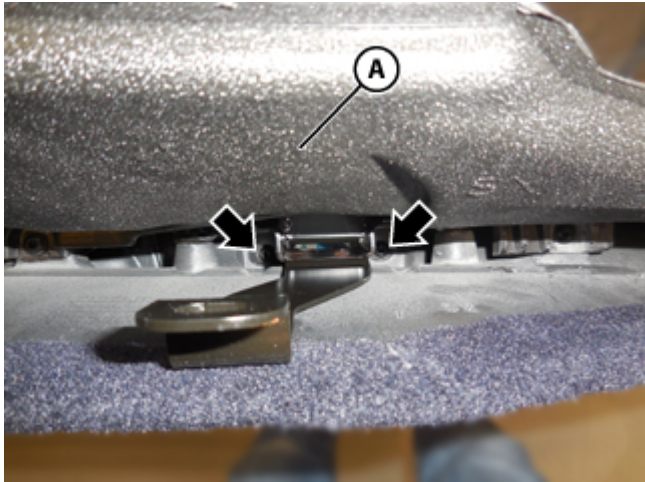

- Move the passenger air duct (A) aside.
- Undo the screws indicated.
- Turn the centre console trim panel upside down.




- Detach and remove the DCT control panel (B), disconnecting the relative connectors.

Refitting DCT gearbox control panel

			
Tightening torque		Nm	Class
Fastening DCT gearbox control panel	Screw	3 Nm	B




- Connect the connectors of the DCT control panel (B) and fit the panel in the relative seat.
- Turn the centre tunnel console upside down.

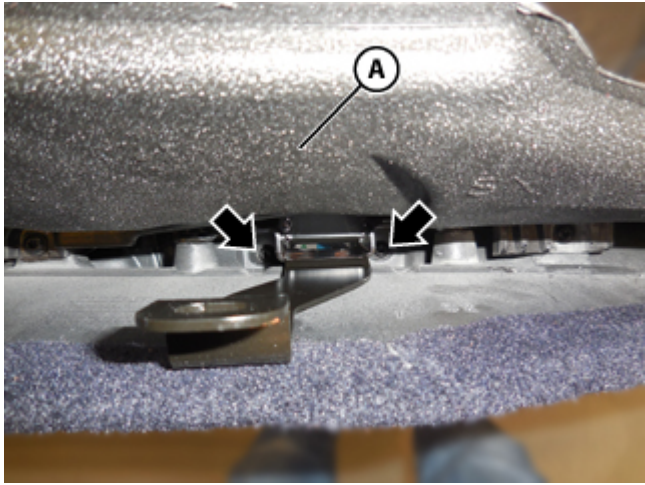

- Move the passenger air duct (A) aside.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Turn the centre tunnel console upside down.

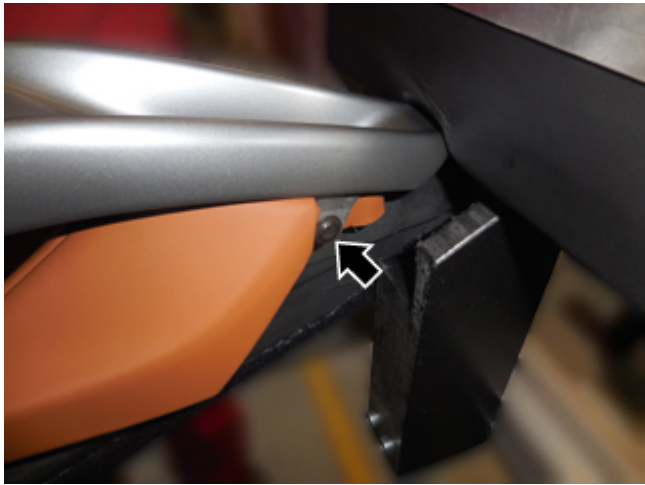


- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Refit the centre tunnel console trim (🔧 E4.03).
- Connect the battery (🔧 F2.01).

Power window controls

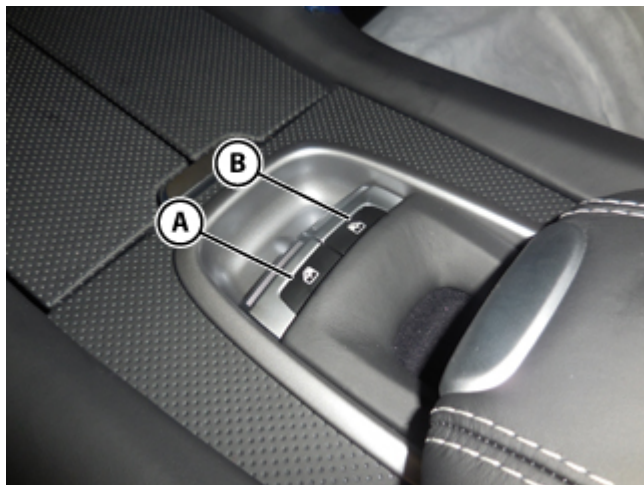

Improper use of the power windows may be dangerous.

Always ensure that all persons and objects are at a safe distance before operating.

Use particular caution when operating the driver side window in automatic mode.

The power windows may only be operated with the system in Key-ON state.

Push the button **(A)** up or down briefly and release to raise or lower the driver side door window manually (partial open/close).


Pushing and holding (for more than 0.3 seconds) the button **(A)** down or up lowers or raises the driver side door window completely in one-touch automatic mode, with the window stopping only once it has completed its travel or if the button is pressed again.

Push the button **(B)** up or down briefly and release to raise or lower the passenger side door window manually (partial open/close).

Press and hold the button **(B)** (longer than 0.3 seconds) up or down to lower the passenger side door window automatically (complete open/close) or raise manually.

Removing the power window control panel


- Disconnect the battery (🔧 F2.01).
- Remove the centre tunnel console trim (🔧 E4.03).
- Remove the front container.

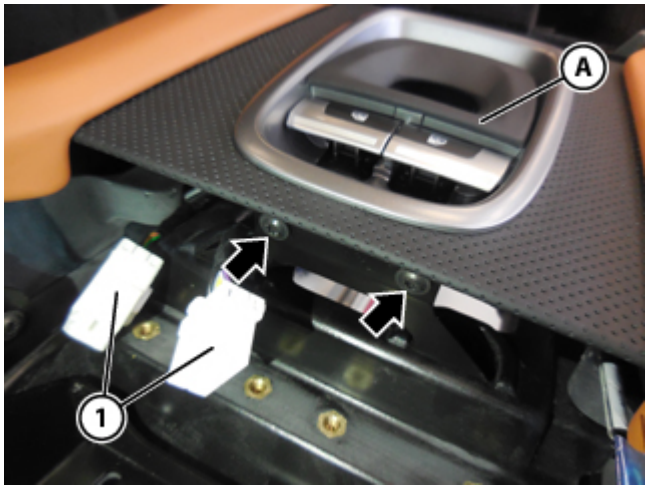

- Disconnect the connectors (1).
- Undo the screws indicated.
- Detach and remove the power window control panel (A).

Refitting the power window control panel

			
Tightening torque		Nm	Class
Fastening the power window control panel	Screw	3 Nm	B

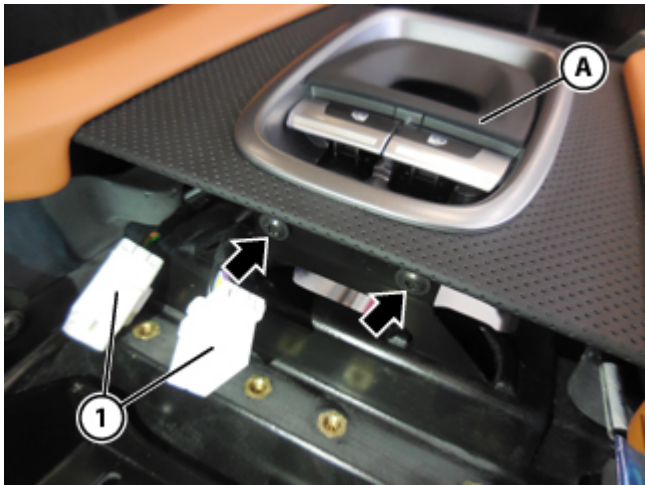

- Fit the power window control panel (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B

- Connect the connectors (1).

- Refit the centre tunnel console trim (🔧 E4.03).
- Refit the front container.
- Connect the battery (🔧 F2.01).


Replacing the luggage compartment lid and fuel filler flap release button panel

			
Tightening torque		Nm	Class
Fastening the luggage compartment lid and fuel filler flap release button panel	Screw	3 Nm	B

➤ Disconnect the battery (🔌 F2.01).



- Remove the surround **(A)**.

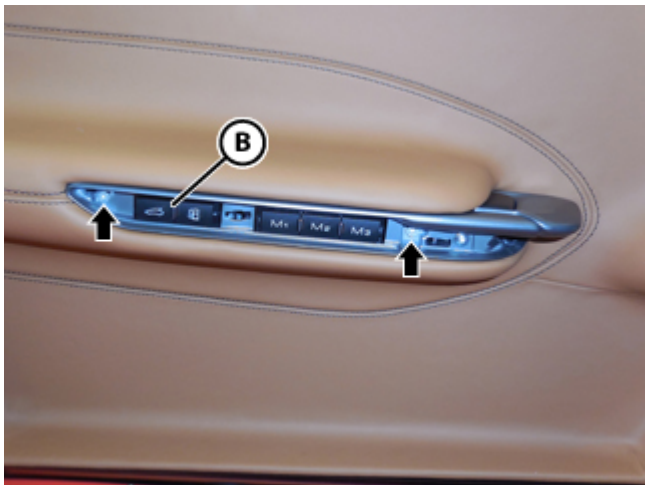

- Undo the screws indicated.
- Detach and remove the button panel **(B)**, undoing the screws and disconnecting the connector.
- Replace the button panel **(B)**.
- Connect the connector and tighten the screws fastening the button panel.
- Fit and fasten the panel **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	3 Nm	B



- Fit the surround **(A)**.

➤ Connect the battery (🔌 F2.01).