



GTC4Lusso USA - Door controls - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


E5.05 Door controls



When the door is opened, the window will automatically drop by approximately 2 centimetres to the **target position**, to prevent contact with the door seal.

After the door is closed, the window automatically rises to the **upper limit**.

Opening from the outside

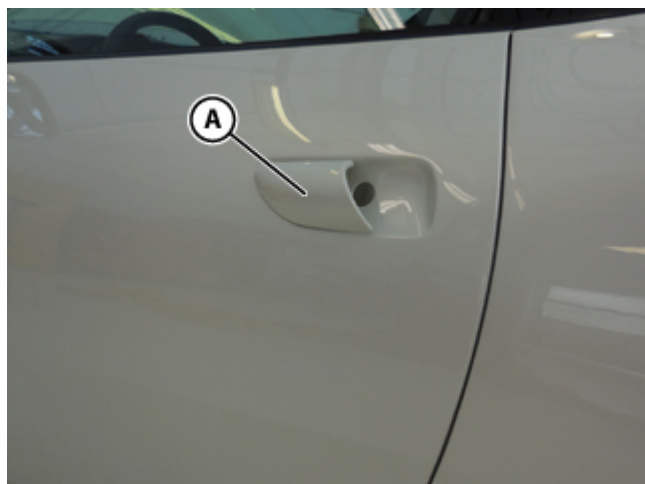

Deactivate the alarm and unlock the centralised locking with the remote control or by turning the key in the relative lock.

Pull the handle **(A)** until the lock clicks open to open the door.

Opening from inside the vehicle



Pull the handle **(A)** until the lock clicks open to open the door.

When the door handle **(A)** is pulled without opening the door, the window drops to the **"target position"**. If the door is then not opened within two seconds, the window returns to the **"upper limit"**.

To open the door, release the handle and pull again.

Pulling the door handle **(A)** unlocks both doors

Door lock



Press the **"LOCK / UNLOCK" (A)** button to lock and unlock both doors from inside the passenger compartment.

The rolling lock function, which automatically locks the doors when the vehicle speed reaches 20 Km/h, may be enabled from the "Car setup" screen viewable on the left hand TFT display on the instrument panel.

