



GTC4Lusso USA - Passive Start System (Keyless) - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.06 Passive Start System (Keyless)

Functions of Passive Start system (Keyless)



The Passive Start system is a convenient electronic start enable system - all the driver has to do is have the electronic key with him in the passenger compartment, in his jacket pocket, for example, to start the engine.

Activating Key-ON state



- Ensure that the electronic vehicle key is inside the passenger compartment.
- i* If the electronic vehicle key is not inside the passenger compartment, the left hand TFT display shows the specific message "**Electronic key not detected**".



- If the electronic system of the vehicle is in Key-OFF state, press the **ENGINE START/STOP** button and release as soon as the electronic system of the vehicle switches to **Key-ON** state.
- i* If the vehicle key is removed from the passenger compartment for any reason while the driver is inside the passenger compartment and the doors of the vehicle are closed, the left hand TFT display shows the specific message "**Key not in vehicle**".

- If the message "**Remote key battery drained**" is shown on the left hand TFT display, the following procedure is required to activate Key-ON state.



- Detach and remove the cover (A).



- Hold the vehicle key horizontally over the KIN emergency button.



- Press the **ENGINE START/STOP** button and release as soon as the electronic system of the vehicle switches to **Key-ON** state.

Activating Key-OFF state



- If the electronic system of the vehicle is in Key-ON state, press the **ENGINE START/STOP** button and release as soon as the electronic system of the vehicle switches to **Key-OFF** state.
- If the electronic system is in Key-ON state with the engine off, the electronic system of the vehicle automatically switches to **Key-OFF** state after **240 minutes**.

Starting the engine

- Ensure that the antitheft system and any major current consumers are switched off.
- Ensure that the EPB electric parking brake is activated.
- Ensure that all doors and lids are closed correctly.
- Activate Key-ON state (🔑 E5.06).
- Wait for the initial instrument cluster indicator lamp check cycle to complete.



- Keep the brake pedal depressed.
- ⚠ Do not keep the ENGINE START button pressed for prolonged periods.
- ⚠ DO NOT depress the accelerator while the engine is starting.
- Press the **ENGINE START/STOP** button and release as soon as the engine has started.
- ⓘ If the vehicle key is removed from the passenger compartment for any reason while the engine is running, the driver is inside the passenger compartment and the doors of the vehicle are closed, the left hand TFT display shows the specific message "**Key not in vehicle**" repeatedly whenever the vehicle is moving until the engine is switched off. If the key is not in the passenger compartment, it will not be possible to start the engine again after switching it off.

Stopping the engine



- With the vehicle at a standstill and parked, press the **ENGINE START/STOP** button and release as soon as the engine stops.
- ⓘ If the key is not in the passenger compartment, it will not be possible to start the engine again after switching it off.
- If it is necessary to stop the engine while the vehicle is moving, press and hold the **ENGINE START/STOP** button for at least **2 seconds**, or press the **ENGINE START/STOP** button **3 times in rapid succession** within 6 seconds.

Emergency engine stop

The following procedure may only be used if the engine fails to stop after performing the normal engine

stop procedure with the ENGINE START/STOP button.



- Detach and remove the cover (A).



- Press the KIN emergency button (B) and release as soon as the engine stops.
- The KIN emergency button (B) can only be used to switch the system off, and cannot be used to turn the system on.
- If it is necessary to stop the engine while the vehicle is moving, press and hold the KIN button (B) for at least 2 seconds, or press the KIN button (B) 3 times in rapid succession within 6 seconds.


Replacing the passive start system antennas

			
Tightening torque		Nm	Class
Fastening passive start antennas	Screw	4 Nm	B

➤ Disconnect the battery (🔧 F2.01).


Centre antenna

- Remove the centre tunnel console trim (🔧 E4.03).

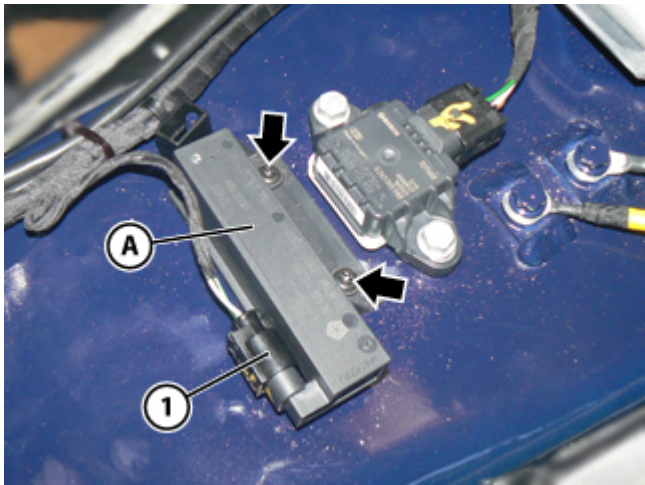

- Refit the centre tunnel console trim ( E4.03).

Lateral antennas

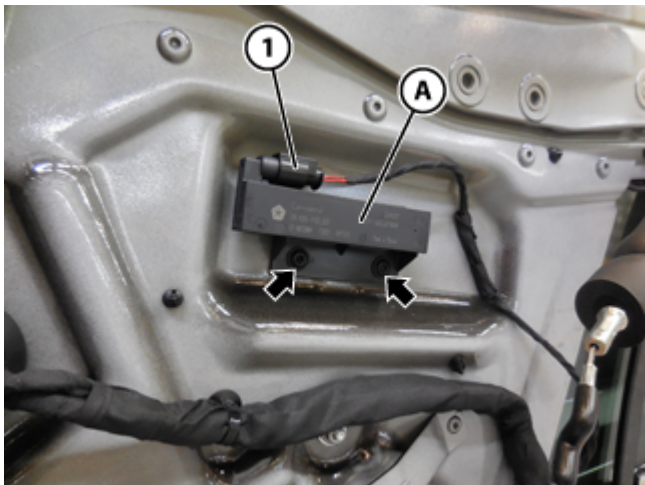

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the antenna (A) and replace.
- Fit the new antenna (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B


- Connect the connector (1).

Right hand lateral antenna

- Remove the door panels ( E3.09).
-  Remove the right hand door panel.
- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the antenna (A) and replace.
- Fit the new antenna (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Connect the connector (1).
- Refit the door panels ( E3.09).
-  Refit the right hand door panel.

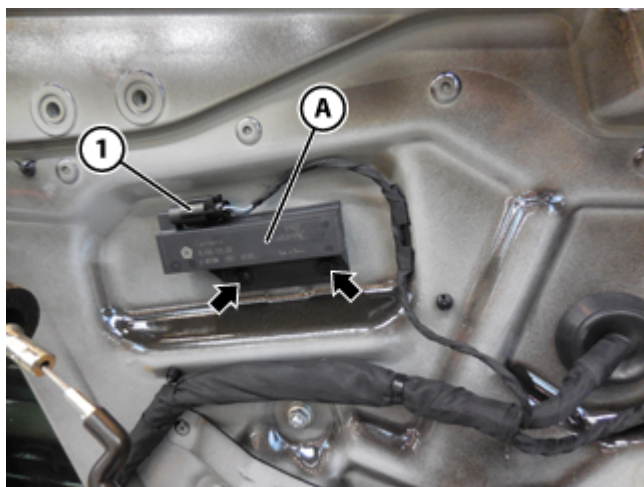

Left hand lateral antenna

- Remove the door panels ( E3.09).
-  Remove the left hand door panel.
- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the antenna (A) and replace.
- Fit the new antenna (A).
- Tighten the screws indicated.




Tightening torque	Nm	Class
Screw	4 Nm	B

- Connect the connector (1).
- Refit the door panels ( E3.09).
-  Refit the left hand door panel.

Rear aerial

- Remove the luggage compartment trim panels ( E4.06).
-  Remove the tool kit compartment tray.

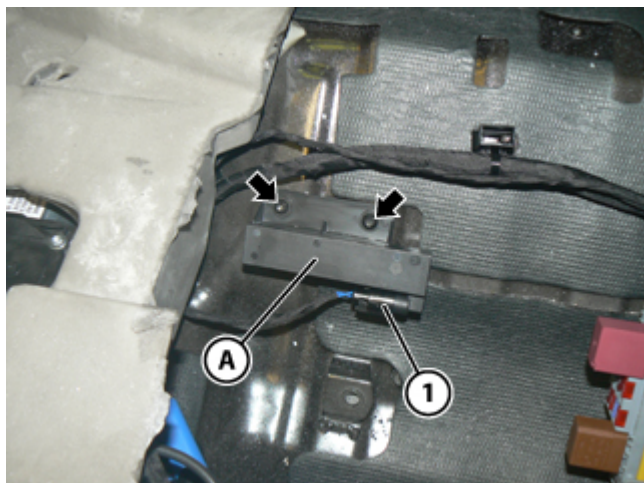

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the antenna (A) and replace.
- Fit the new antenna (A).
- Tighten the screws indicated.



Tightening torque	Nm	Class
Screw	4 Nm	B

- Connect the connector (1).

- Refit the luggage compartment trim panels ( E4.06).
-  Remove the tool kit compartment tray.

➤ Connect the battery ( F2.01).

