



GTC4Lusso USA - Rear view mirrors - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.07 Rear view mirrors


Adjusting the interior rear view mirror



Do not adjust the rear view mirrors while the vehicle is in motion.

The internal rear view mirror is electrochromic and dims automatically to reduce glare.

The speed at which the mirror dims varies in relation to the brightness of the incident light.

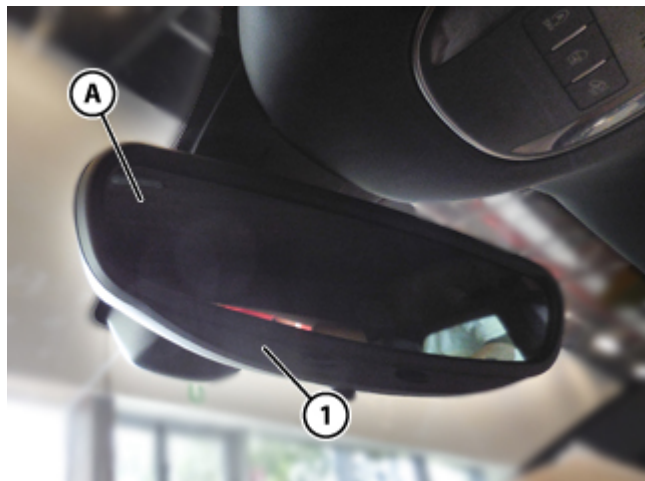


- Move the internal rear view mirror **(A)** into the desired position.
- Press button **(1)** to enable or disable electrochromic dimming mode.
- i* The green LED is lit when the electrochromic dimming function is active.
- i* The red LED is lit when the electrochromic dimming function is not active.

Removing the interior rear view mirror

- Disconnect the battery ( F2.01).
- Remove the cabin light ( E5.12).




- Detach the internal rear view mirror **(A)**.

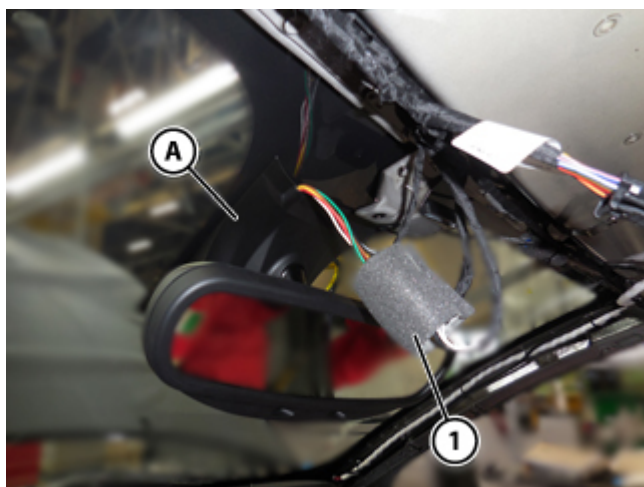

- Lift the front cross member trim slightly and pull out the connectors **(1)**.
- Disconnect the connectors **(1)**.
- Remove the internal rear view mirror **(A)**.

Refitting the interior rear view mirror

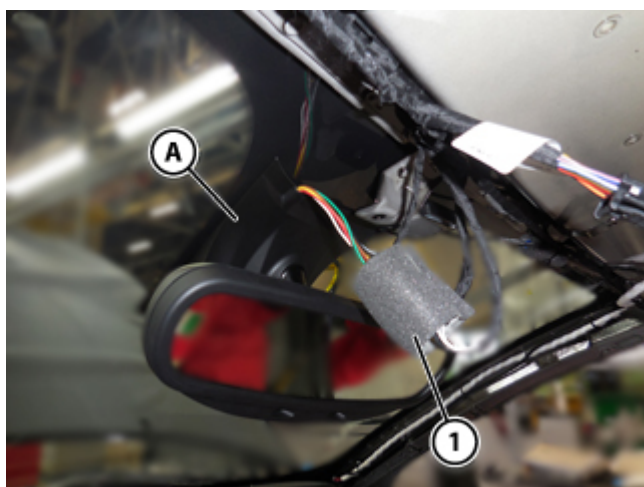

- Fit the internal rear view mirror **(A)**.
- Connect the connector **(1)** and push it back under the front cross member trim.



- Refit the internal rear view mirror **(A)**, pressing manually until the mirror snaps audibly into place.

- Refit the cabin light (🔧 E5.12).
- Connect the battery (🔧 F2.01).

Adjusting the external rear view mirrors



Do not adjust the rear view mirrors while the vehicle is in motion.

The mirrors can fold forward or backward in the event of collision: if necessary, the mirrors may be pushed forwards or backwards.

When reverse is engaged, the driver may adjust the passenger side rear view mirror into a different position than the one used in normal driving to facilitate parking manoeuvres. This position may be memorised by pressing the driving position memory buttons (E5.14, "Driving positions").

If a personalised reverse position for the rear view mirror has not been memorised, when reverse gear is engaged, the external rear view mirror will still move slightly downwards and inwards (relative to the normal driving position).



- To adjust the driver side external rear view mirror, turn the knob **(A)** 45° to the left.
- To adjust the passenger side external rear view mirror, turn the knob **(A)** 45° to the right.



- Push the knob **(A)** in the corresponding direction to adjust the field of view of the external rear view mirror as desired.




- After adjusting, turn the knob back **(A)** by 45° to the centre position to prevent unintentionally altering the rear view mirror setting.
- Turn the knob **(A)** by 180° from the centre position to fold both external rear view mirrors.




- Each time a new driver seat position is stored, the positions for the rear view mirrors for both normal driving and reversing are automatically memorised together with the seat position.
- To store a new rear view mirror position, turn the ignition to "**Key-ON**" and set the positions of the mirrors; select reverse, adjust the rear view mirrors so that they offer the best possible view for reversing, then shift out of reverse.
- Press and hold button M1, M2 or M3 (**B**) on the driver side door, corresponding to the three different memorisable positions, until a double beep is sounded to confirm that the setting has been stored.
- The new rear view mirror setting is automatically memorised together with the seat position.
- The mirror setting may be adjusted either for normal driving or for reversing.
- The passenger seat position may also be stored using the buttons on the passenger side door.

Removing the external rear view mirrors

- Disconnect the battery ( F2.01).
- Remove the door panels ( E3.09).

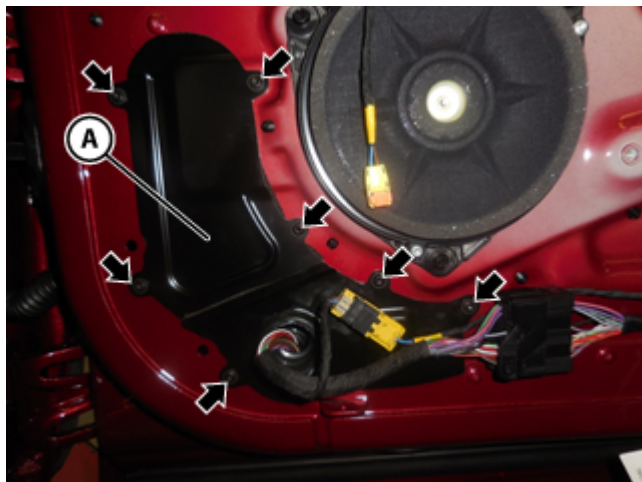

- Undo the screws indicated.
- Remove the cover (**A**).

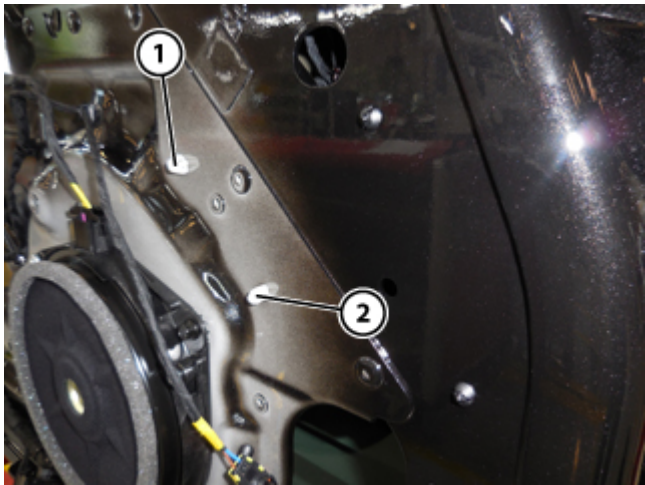

- Detach and disconnect the connectors **(1)** and **(2)**.
- The connector **(2)** is only present on the driver side.



- Detach the inner part of the window scraper seal **(B)**.



- Undo the screws indicated.
- Remove the rear view mirror **(C)**, pulling out the relative cables.


Refitting the external rear view mirrors

			
Tightening torque		Nm	Class
Fastening external rear view mirror	Screw	9 Nm	B
Fastening door panel shield	Screw	4 Nm	B




- Fit the rear view mirror **(C)**, inserting the relative cables.
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	9 Nm	B

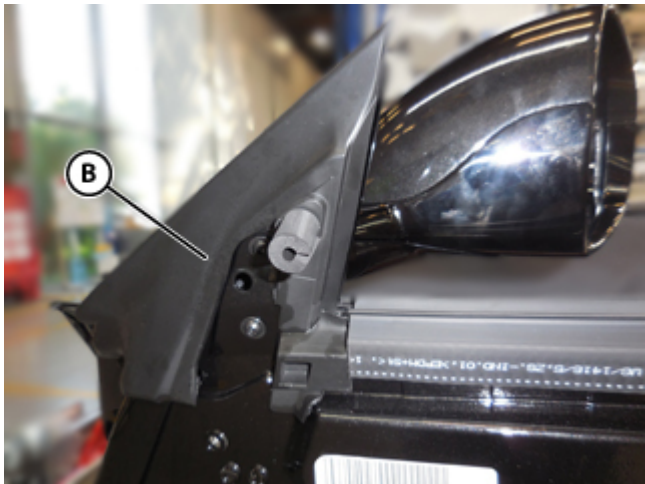

- Install the inner part of the window scraper seal **(B)**.

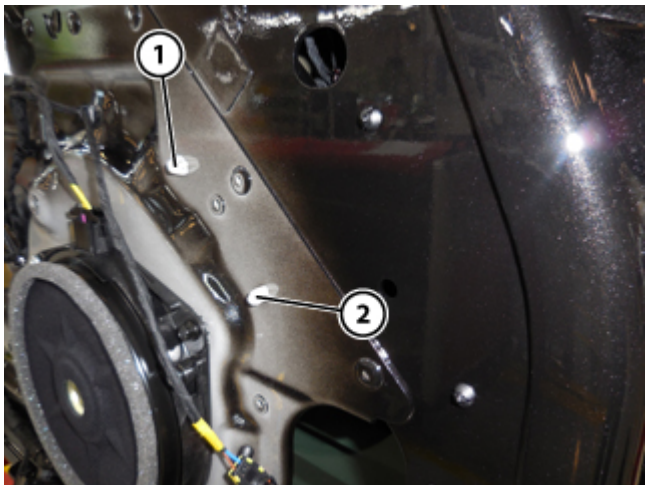

- Connect and fasten the connectors **(1)** and **(2)**.
- The connector **(2)** is only present on the driver side.

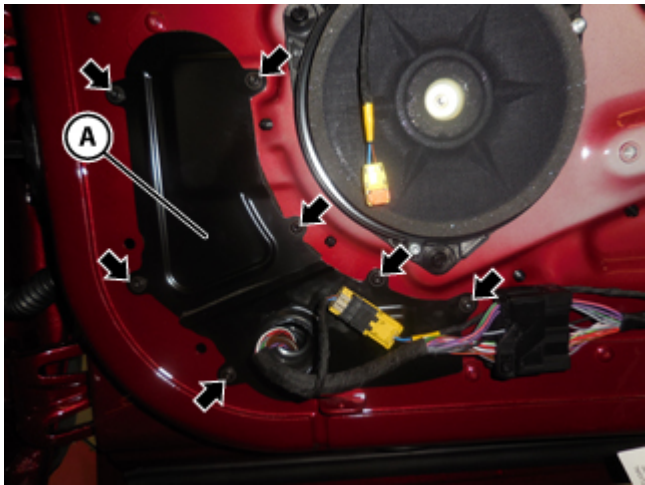

- Refit the door panels (🔑 E3.09).
- Connect the battery (🔑 F2.01).

- Fit the cover (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B