



GTC4Lusso USA - Gearshift paddles - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.08 Gearshift paddles

Gearshift paddles



The driver can select the gears by means of two shift paddles located behind the steering wheel.

- Pull the left shift paddle **DOWN** to downshift.
- Pull the right shift paddle **UP** to upshift.
- Pull both shift paddles to select **neutral (N)**.

In the event of a malfunction of the **UP** and **DOWN** shift paddles, the message “**Depress brake pedal and press LAUNCH to engage gear**” is shown on the left hand TFT display. To engage the gear, press the **LAUNCH** button on the centre tunnel console while depressing the brake pedal.


In the event of a malfunction of the **UP** and **DOWN** shift paddles with **R** engaged, press the **LAUNCH** button twice to select **1st gear**.

In this case, the “**Launch Control**” function is not available.

Removing the shift paddle assembly

- Disconnect the battery (🔧 F2.01).


- Remove the steering wheel ( D5.06).
- Remove the dashboard trim panels ( E4.02).
-  Remove the steering column trim panel from the dashboard.

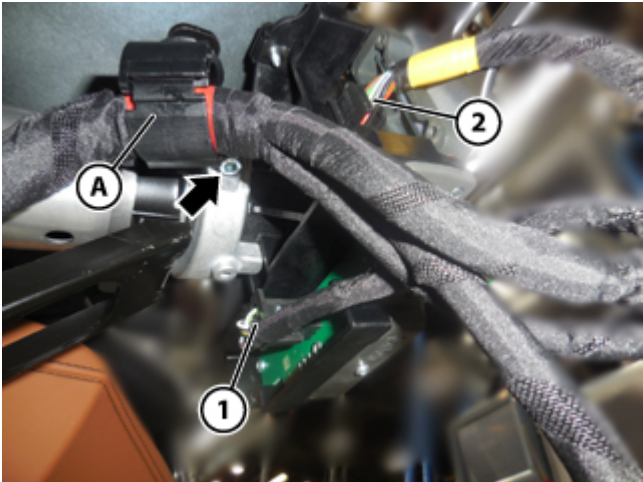

- Open the clamp (A) and move the dashboard cable aside.
- Disconnect the connectors (1) and (2).
- Undo the indicated screw and remove the shift paddle assembly.

Refitting the shift paddle assembly

			
Tightening torque		Nm	Class
Fastening shift paddle assembly to steering column	Screw	6 Nm	B

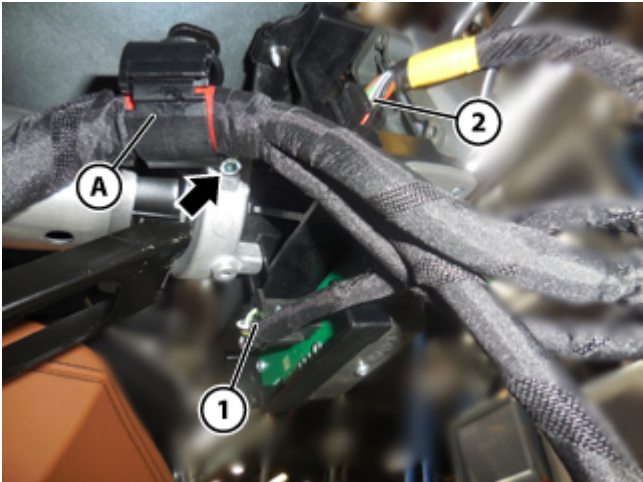

- Fit the shift paddle assembly.
- Tighten the indicated screw.
-  Centre the shift paddle assembly correctly as originally fitted.

		
Tightening torque	Nm	Class
Screw	6 Nm	B

- Connect the connectors (1) and (2).
- Fit the dashboard cable in the clamp (A).
- Close the clamp (A).

- Refit the dashboard trim panels ( E4.02).
-  Refit the steering column trim panel on the dashboard.
- Refit the steering wheel ( D5.06).
- Connect the battery ( F2.01).

