



GTC4Lusso USA - Lid and fuel filler flap opening systems - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

E5.09 Lid and fuel filler flap opening systems

Opening the engine compartment lid



- Pull the lever **(1)** located on the lower left hand trim panel of the dashboard.



- Lift the engine compartment lid slightly and push the lever **(2)** to the left.
- Lift the engine compartment lid until the gas struts take up the weight.

Closing the engine compartment lid

**CAUTION**

Always check that the engine compartment lid has been correctly closed to prevent accidental opening while driving.


- Lower the lid to close and press down on the lock area until it locks with an audible click.

Replacing the engine compartment lid lock


			
Tightening torque		Nm	Class
Fastening engine compartment lid lock	Nut	9 Nm	B

➤ Remove the engine compartment cosmetic shields (🔑 E3.14).

❗ Remove central cosmetic shield.

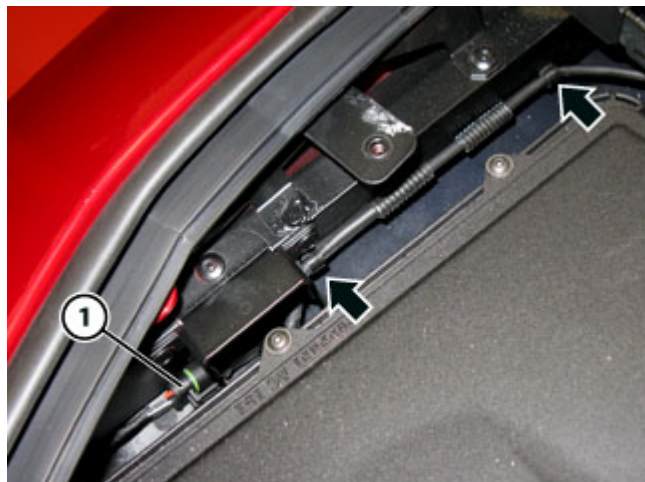

- Release and disconnect connector (1).
- Release the indicated clips.

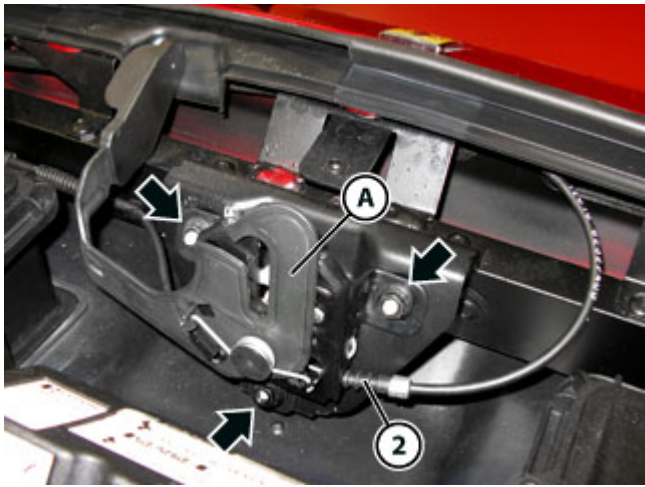


- Release the Bowden cable (2).
- Undo the nuts indicated.
- Remove the lock (A) and replace.
- Fit the new lock (A).
- Tighten the nuts indicated.
- Attach the Bowden cable (2).
- Close the engine compartment lid by letting it drop to align the lock (A).
- Check that the engine compartment lid is closed correctly.
- Check that the **GAP** between the engine compartment lid and the front fenders is **3.0 mm ± 0.5 mm** and that the **STEP** between the engine compartment lid and the front fenders is **0.5 mm +0.5 / - 1.0 mm // 1.0**.

i If the alignment measurements are incorrect, repeat the procedure to align the lock and check alignment again.

- Open the engine compartment lid (E5.09).
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	9 Nm	B

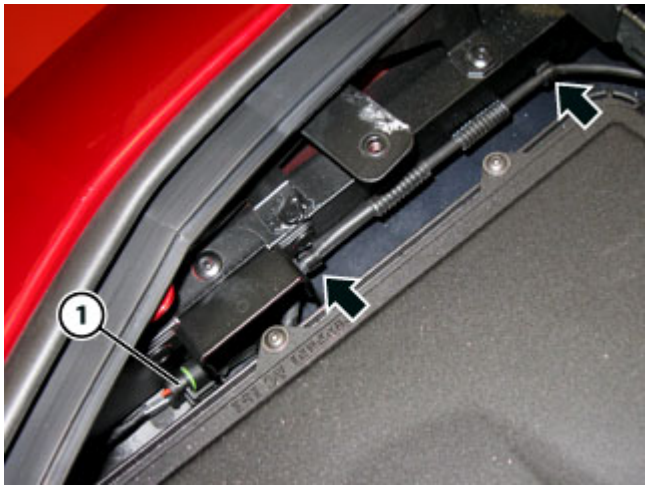

- Attach the indicated clips.
- Connect and fasten the connector (1).


➤ Refit the engine compartment cosmetic shields (E3.14).

i Refit central cosmetic shield.

Replacing the engine compartment lid striker plate

			
Tightening torque		Nm	Class
Fastening the engine compartment lid striker	Screw	13 Nm	B

➤ Open the engine compartment lid (🔑 E5.09).

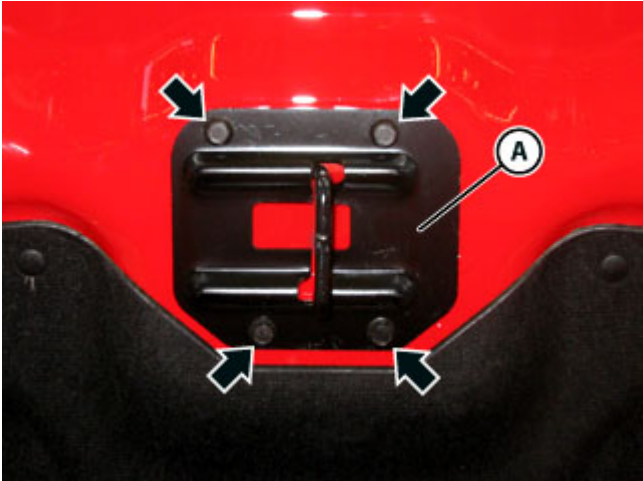


- Mark the position of the striker **(A)** on the engine compartment lid.
- Undo the screws indicated.
- Remove the striker **(A)** and replace.
- Fit the new striker **(A)**, using the markings on the engine compartment lid as reference.
- Tighten the screws indicated.

			
Tightening torque		Nm	Class
Screw		13 Nm	B


➤ Close the engine compartment lid and check that it closes correctly.

Replacing the engine compartment lid release Bowden cable

- Remove the engine compartment cosmetic shields (🔑 E3.14).
- ❗ Remove the centre cosmetic shield and the left hand lateral cosmetic shield.
- Remove the dashboard trim panels (🔑 E4.02).
- ❗ Remove the driver side lower trim panel.

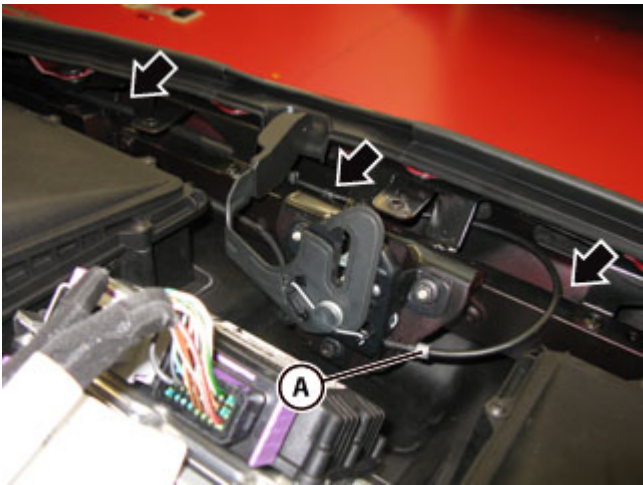

- Disconnect the Bowden cable **(A)** from the engine compartment lid lock.
- Release the indicated clips.

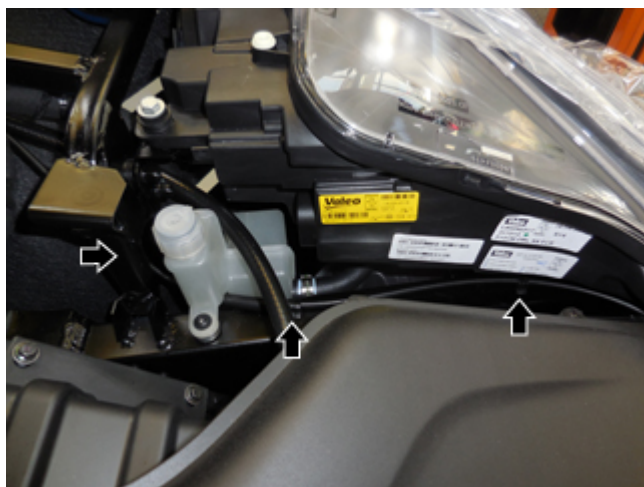

- Release the indicated clips.



- Release the indicated clips.



- Release the indicated clips.
- i* The Bowden cable is fastened under the outer diagonal member.



- Remove the Bowden cable, prising out the relative cable grommet from the firewall.



- Detach the Bowden cable from the release handle.
- Fit the new the Bowden cable, attaching to the release handle.



- Fit the new cable grommet and the new Bowden cable in the firewall.




- Attach the indicated clips.



- Attach the indicated clips.



- Attach the indicated clips.

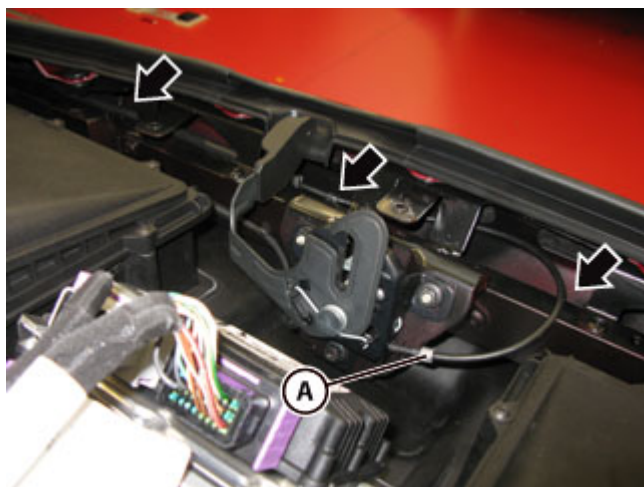

- Attach the indicated clips.
- Connect the Bowden cable (**A**) to the engine compartment lid lock.

➤ Refit the dashboard trim panels (🔧 E4.02).

i Refit the driver side lower trim panel.

➤ Refit the engine compartment cosmetic shields (🔧 E3.14).

i Refit the centre cosmetic shield and the left hand lateral cosmetic shield.

Opening the luggage compartment lid



- Press the button (**1**).
- i* Press the button (**1**) again to stop the luggage compartment lid when opening automatically.



- The luggage compartment lid may also be opened by pressing and holding the button (**2**) for longer than **2 seconds**.

**CAUTION**

Keep objects and parts of the body away from the luggage compartment lid while it is opening or closing.



Never try to assist the luggage compartment lid manually.

- Wait for the luggage compartment lid to open completely.

i The luggage compartment lid stops automatically if it encounters an obstacle when opening automatically.

Closing the luggage compartment lid



- Press the button (1).

i Press the button (1) again to stop the luggage compartment lid when closing automatically.

**CAUTION**

Keep objects and parts of the body away from the luggage compartment lid while it is opening or closing.



Never try to assist the luggage compartment lid manually.

- Wait for the luggage compartment lid to close completely.


i The luggage compartment lid stops automatically if it encounters an obstacle when closing automatically.

Replacing the luggage compartment lid lock

			
Tightening torque		Nm	Class
Fastening luggage compartment lid lock	Screw	8 Nm	B

➤ Remove the luggage compartment trim panels ( E4.06).

 Remove the lower luggage compartment trim panel

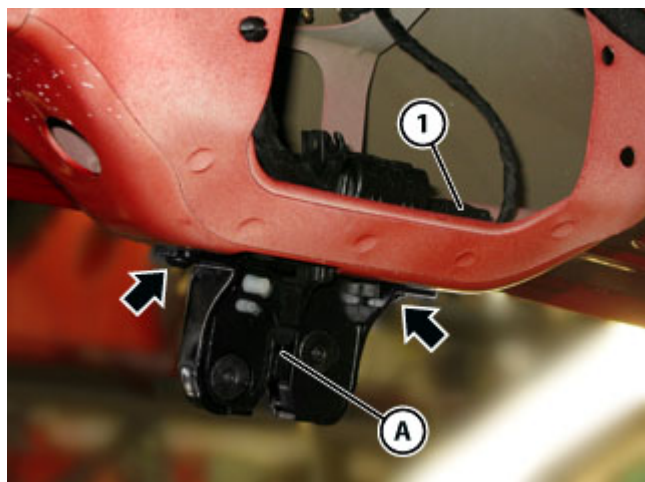

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the lock (A) and replace.
- Fit the new lock (A).
- Tighten the screws indicated.

			
Tightening torque		Nm	Class
Screw		8 Nm	B

- Connect the connector (1).

➤ Refit the luggage compartment trim panels ( E4.06).

 Refit the lower luggage compartment trim panel.


Replacing the luggage compartment lid striker plate

			
Tightening torque		Nm	Class
Fastening luggage compartment lid striker plate	Screw (pretightening)	0.4 Nm	B
	Screw	8 Nm	B


➤ Disconnect the battery ( F2.01).

➤ Remove the luggage compartment trim panels ( E4.06).


 Remove the inner sill protector from the luggage compartment.

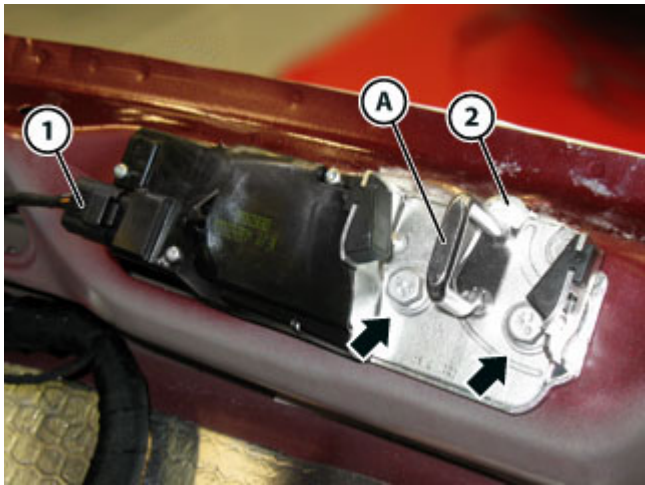

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the striker (A), retrieving the reinforcement plate and the shim (2), and replace.
- Fit the new striker (A), installing the reinforcement plate and the shim (2).
- Connect the connector (1).

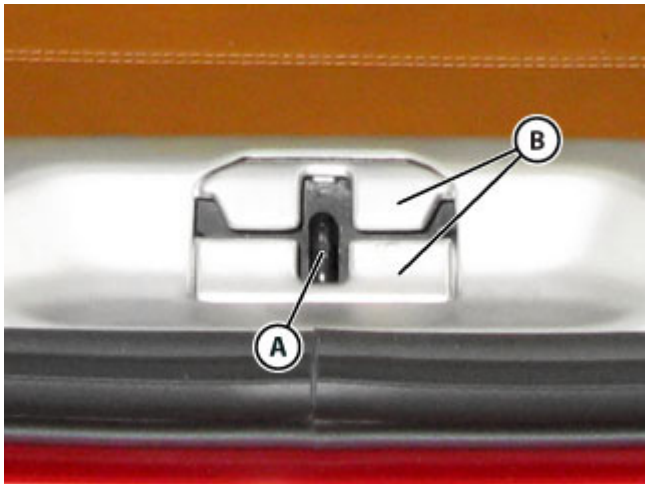


- Refit the luggage compartment trim panels (E4.06).
- Provisionally refit the inner sill protector to ensure that the lugs (B) do not interfere with the striker (A).
- Remove the luggage compartment trim panels (E4.06).
- Remove the inner sill protector from the luggage compartment.

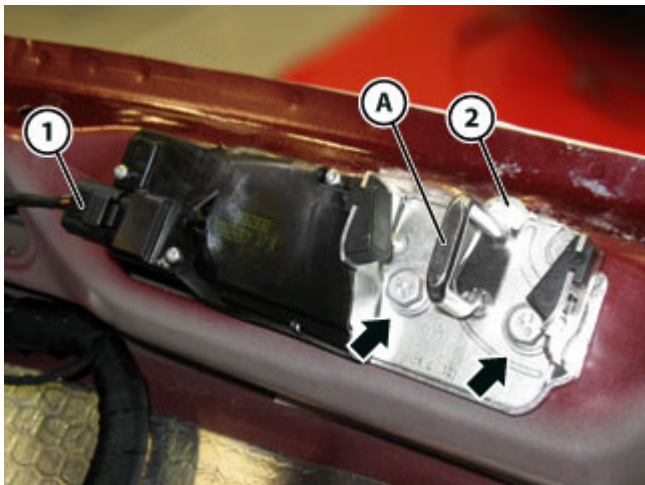

- Add a shim if necessary (2).
- Pre-tighten the indicated screws.


		
Tightening torque	Nm	Class
Screw (pretightening)	0.4 Nm	B

- Close the luggage compartment lid to align the striker (A).

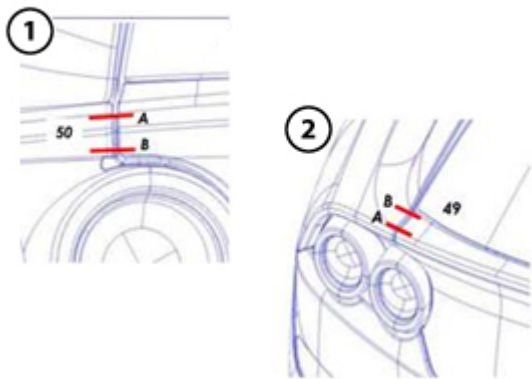

- In position **A** in figure (1), check that the **GAP** between the luggage compartment lid and the rear fender is - **0.5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **4.5 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.
- In position **B** in figure (1), check that the **GAP** between the luggage compartment lid and the rear fender is - **0.5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **5.1 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.
- In position **A** in figure (2), check that the **GAP** between the luggage compartment lid and the rear fender is - **0.5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **4.0 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.
- In position **B** in figure (2), check that the **GAP** between the luggage compartment lid and the rear fender is - **5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **4.0 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.

i If the alignment measurements are incorrect, repeat the procedure to align the striker and check alignment again.

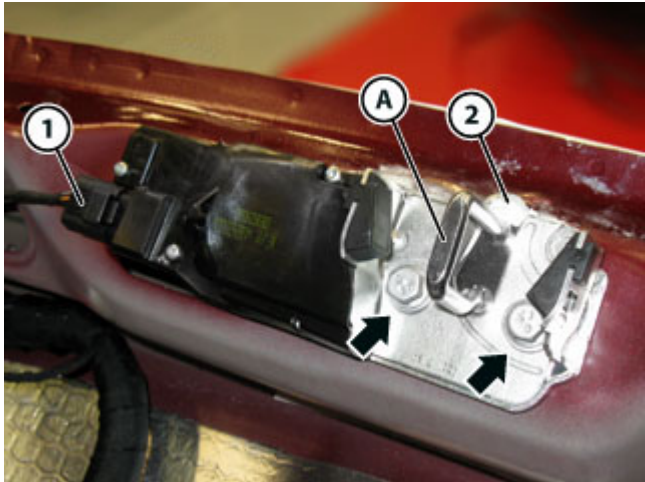

- Open the luggage compartment lid (E5.09).
- Tighten the screws indicated.


Tightening torque	Nm	Class
Screw	8 Nm	B

- Refit the luggage compartment trim panels (E4.06).
- i* Refit the inner sill protector in the luggage compartment.
- Connect the battery (F2.01).


Adjusting the luggage compartment lid lock striker plate

			
Tightening torque		Nm	Class
Fastening luggage compartment lid striker plate	Screw (pretightening)	0.4 Nm	B
	Screw	8 Nm	B

- Remove the luggage compartment trim panels (🔧 E4.06).
- ❗ Remove the inner sill protector from the luggage compartment.

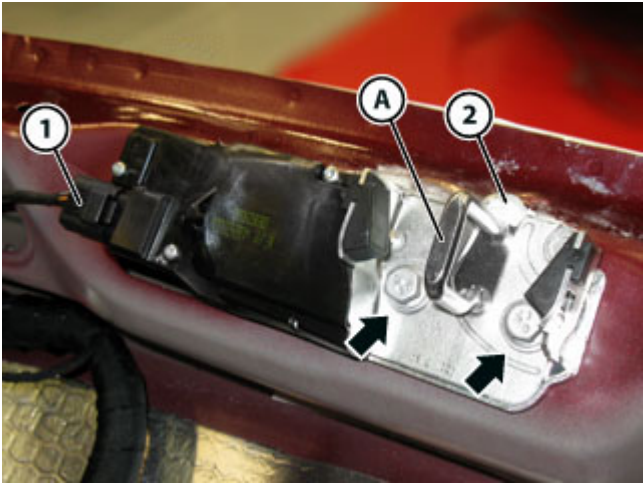


- Loosen the indicated screws.
- Close the luggage compartment lid to align the striker (A).

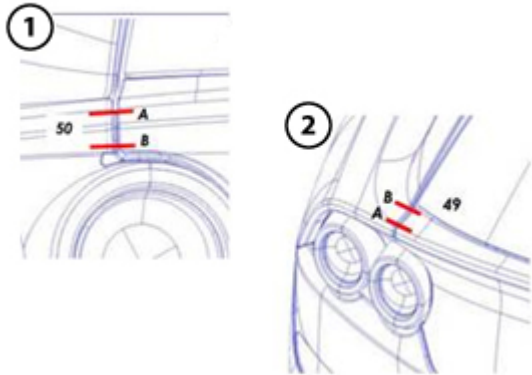

- In position **A** in figure (1), check that the **GAP** between the luggage compartment lid and the rear fender is - **0.5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **4.5 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.
- In position **B** in figure (1), check that the **GAP** between the luggage compartment lid and the rear fender is - **0.5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **5.1 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.
- In position **A** in figure (2), check that the **GAP** between the luggage compartment lid and the rear fender is - **0.5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **4.0 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.
- In position **B** in figure (2), check that the **GAP** between the luggage compartment lid and the rear fender is - **5 mm + 0.5 mm / - 1.0 mm**, and that the **STEP** is + **4.0 mm ± 1.0 mm**, with an RH/LH symmetry tolerance of **1 mm**.

i If the alignment measurements are incorrect, repeat the procedure to align the striker and check alignment again.

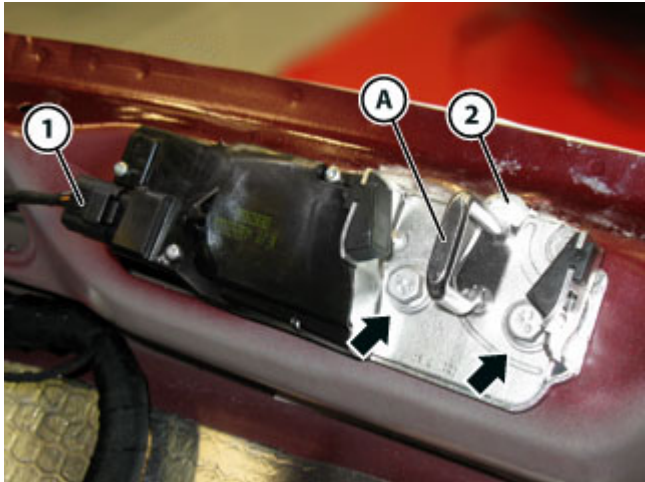


- Open the luggage compartment lid (E5.09).
- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	8 Nm	B

- Refit the luggage compartment trim panels (E4.06).
- i* Refit the inner sill protector in the luggage compartment.

Opening the fuel filler flap

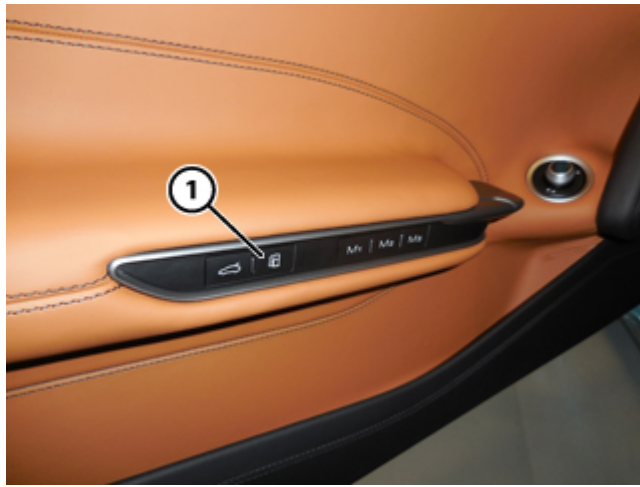

- With the vehicle in **"Key off"** state, press button **(1)** on the left of the driver side seat.

Emergency release of fuel filler flap

In the event of a fuel filler flap release button or actuator failure, or a flat battery, the fuel filler flap may be opened manually as follows.

- Remove the luggage compartment trim panels (🔧 E4.06).
- Detach the right taillight trim in the luggage compartment.



- Locate and pull the emergency fuel filler flap release cable indicated.

Closing the fuel filler flap



- Press the filler flap **(2)** closed until it locks audibly.

Replacing the fuel filler flap lock

			
Tightening torque		Nm	Class
Fastening the fuel filler flap lock	Screw	4 Nm	B


- Open the fuel filler flap ( E5.09).
- Disconnect the battery ( F2.01).
- Remove the active carbon filter ( A3.10).



- Undo the indicated nut.



- Undo the screws indicated.

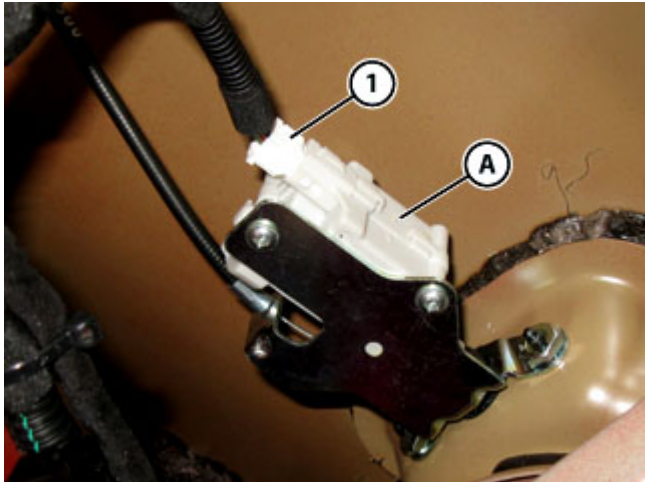

- Disconnect the connector (1).
- Remove the lock (A), complete with the emergency release Bowden cable, and replace.
- Fit the new lock (A), complete with the emergency release Bowden cable.
- Connect the connector (1).



- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B



- Tighten the indicated nut.

- Refit the active carbon filter (🔑 A3.10).
- Connect the battery (🔑 F2.01).