



GTC4Lusso USA - Park Lock - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


E5.10 Park Lock

The Park Lock device is integrated in the gearbox and immobilises the vehicle to prevent involuntary movement when the multiplate clutches are open, specifically, when the engine is off and/or with no hydraulic pressure in the gearbox.

This device is activated automatically at every "Key-OFF".

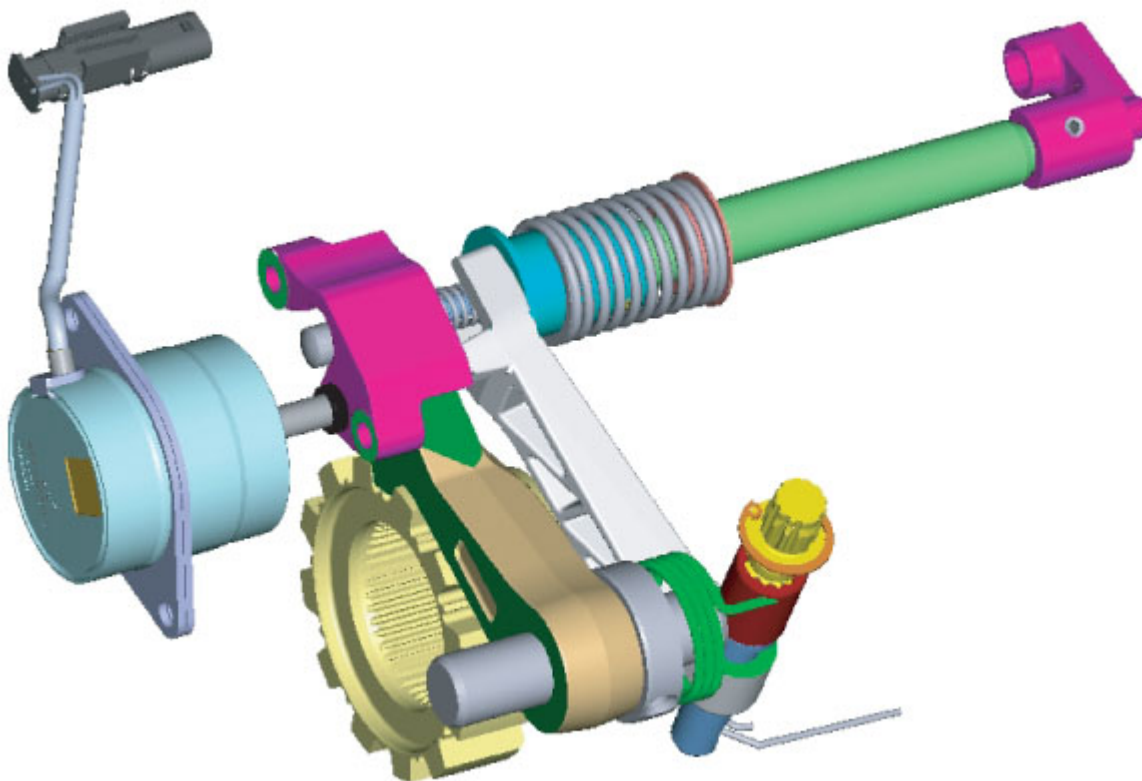

Park Lock engaged

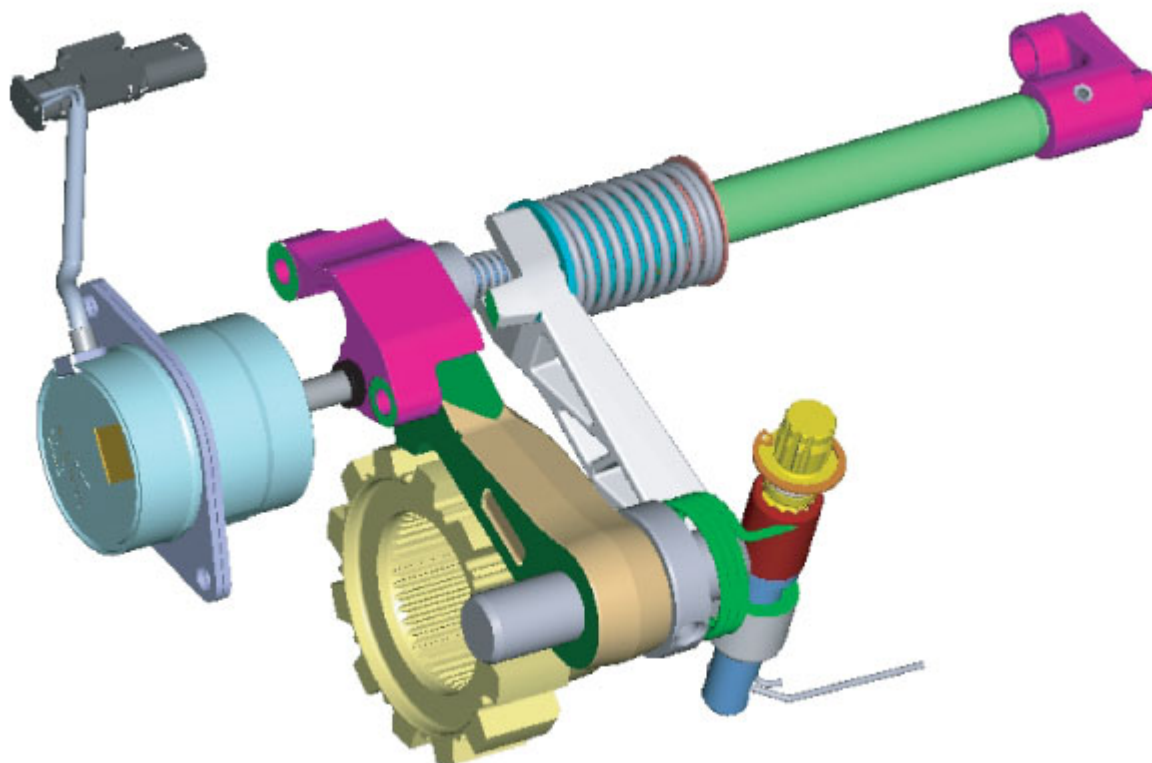

Park Lock disengaged

The mechanism consists of a retainer wheel located on the output shaft, onto which a cable-controlled ratchet engages.

When the ratchet is over one of the teeth of the retainer wheel, the compression spring is loaded; as soon as the vehicle begins to move, the ratchet drops between two teeth, the spring relaxes, the carriage moves and the system locks.

When exiting park mode, carriage returns to its starting position and the compression spring retracts the ratchet from the gap between the retainer wheel teeth.

The vehicle is equipped with a manual system for releasing the Park Lock, situated on the gearbox housing, for use in the event of an emergency (e.g. vehicle breakdown or when transporting the vehicle with the battery disconnected).

Deactivating Park Lock electronically (CAR WASH mode)



The vehicle may move with no warning when the Park Lock is released electronically (CAR WASH mode)! The vehicle is held in position only by the electric parking brake, if engaged.

At each Key-OFF, the Park Lock system engages automatically to prevent the vehicle from moving.

Provided that the vehicle electrical system is functioning correctly, the Park Lock system may be deactivated electronically as described as follows.

In the case of a vehicle electrical system malfunction, the Park Lock system must be released with the "Emergency mechanical release procedure for Park Lock".

- Start the engine.
- Select **1st** gear.
- Select neutral (**N**).
- Switch off the engine.
- Activate **Key-ON** state within no more than **3 seconds**.



- Check that the letter "**N**" is shown on the DCT gearbox display.
-  The Park Lock system is now temporarily **DEACTIVATED** and the vehicle is held in position only by the electric parking brake, if engaged.

- The Park Lock system will only remain in the **DEACTIVATED** state as long as **Key-ON** state is active.
- After **Key-OFF** state is activated, the Park Lock system is normally **ACTIVE**.

Mechanically deactivating the Park Lock



CAUTION

The vehicle may move with no warning when the Park Lock is mechanically released!
The vehicle is held in position only by the electric parking brake, if engaged.




CAUTION

If the vehicle is NOT on a level surface, suitable chocks must be placed in front of or behind the wheels.

Should it not be possible to deactivate the Park Lock electronically, the system may be released manually from the luggage compartment. If the vehicle is NOT on a level surface, before releasing the system, place suitable chocks behind or in front of the wheels to prevent the vehicle from moving unexpectedly.

➤ Open the luggage compartment lid ( E5.09).

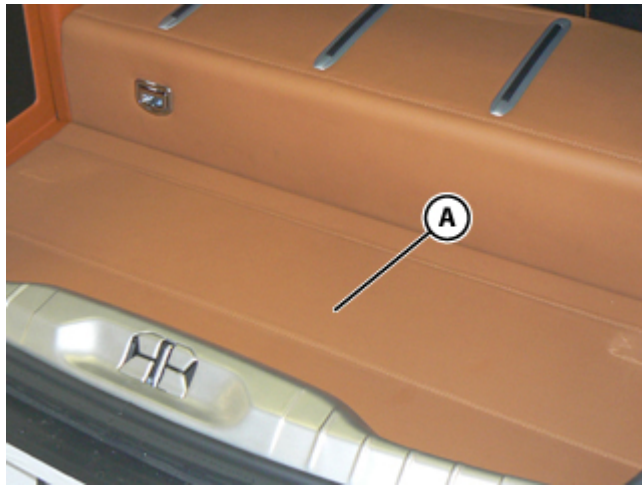

- Lift the removable floor trim **(A)**, pulling the relative tab.



- Detach and remove the wrench **(B)** from the tool kit tray.
- Prise out and remove the indicated plug.



- Fit the wrench **(B)** in the relative seat indicated and turn **ANTICLOCKWISE** by a quarter of a turn (without straining) until the Park Lock system audibly **DISENGAGES**.



- If the electrical system is functioning, activate **Key-ON** state and check that the letter "**N**" is shown on the gearbox display.



- Move the vehicle into a suitable place and **ENGAGE** the Park Lock by fitting the wrench in the relative seat and turning **ANTICLOCKWISE** by a quarter of a turn (without straining) until the Park Lock system audibly **ENGAGES**.

i If the Park Lock does not engage, the vehicle will function correctly but at the next **Key-OFF** the system will not activate and the vehicle will only be held in position by the electric parking brake, if engaged.


- Fit the plug in the indicated seat.



- Fit and secure the wrench (**B**) in the tool kit tray.
- Fit the indicated cap.



- If the electrical system is functioning, activate **Key-ON** state and check that the letter "**P**" is shown on the gearbox display.

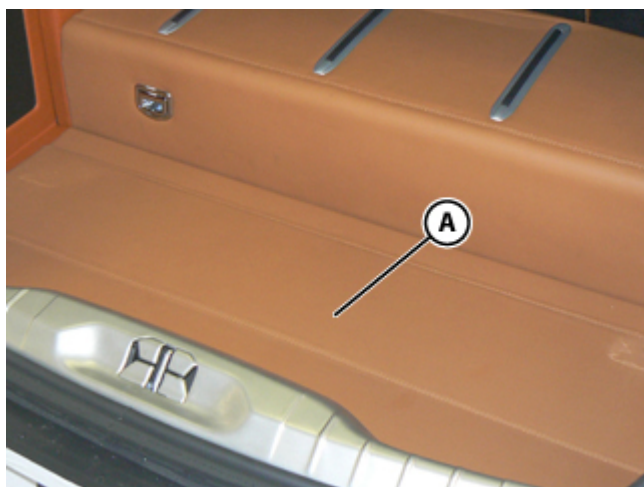

- Lower the removable floor trim (**A**).