



GTC4Lusso USA - Battery, disconnecting / reconnecting - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.01 Battery, disconnecting / reconnecting

Technical characteristics of battery

Brand: **FIAMM**

Type: **L5 AGM 12V 95 Ah 850A EN**

Removing the battery




Each time the battery is disconnected from the electrical system of the vehicle, all the self-acquisition parameters are cancelled from the injection ECU.

These parameters must be reacquired before reusing the vehicle.


➤ Remove the engine compartment cosmetic shields ( E3.14).

 Remove the right hand lateral cosmetic shield.


➤ Disconnect the battery ( F2.01).

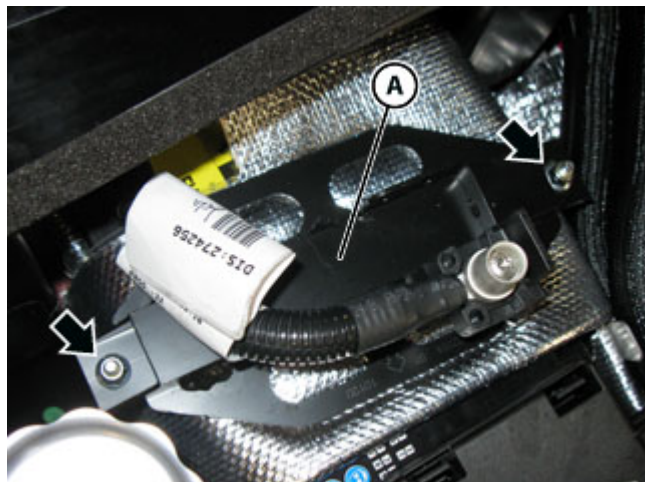

- Undo the nuts indicated.
- Remove the bracket (**A**) from the tie-rods.

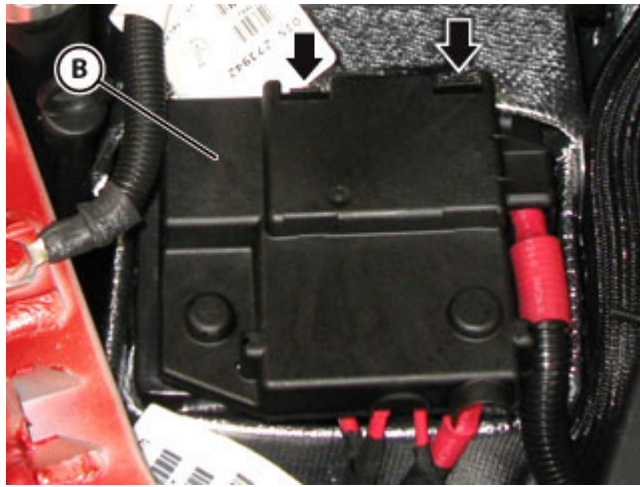


- Detach and remove the cover **(B)**, pressing on the indicated clips.

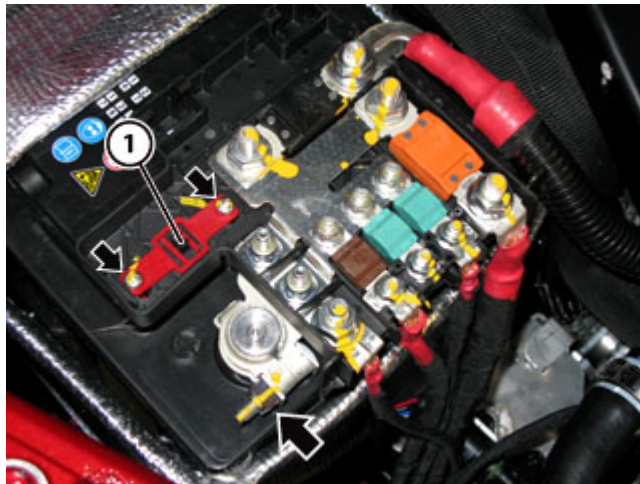

- Remove the bracket **(1)**, undoing the indicated screws.
- Disconnect the positive terminal clamp, loosening the respective nut indicated.

- Remove the battery from the battery mount, tipping to facilitate the operation.

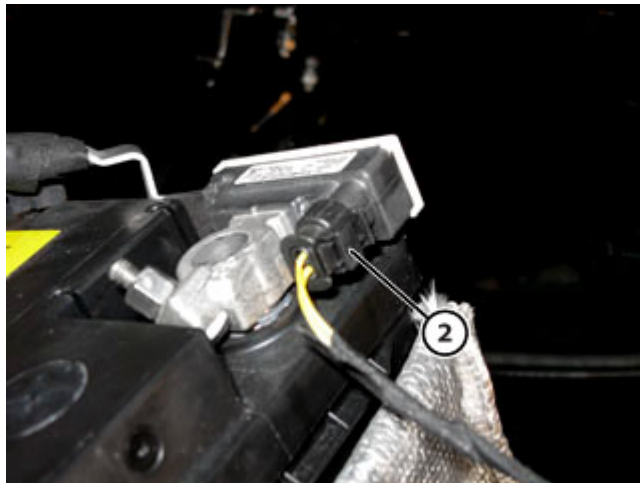

For vehicles with HELE

- Disconnect the connector **(2)**.

- Remove the battery.

Refitting the battery




ng torque	Nm	Class
		

Tightening torque		Nm	Class
Fastening positive terminal clamp	Nut	4.5 Nm	C
Fastening bracket to terminal block	Screw	1.2 Nm	B
Fastening battery bracket to tie-rods	Nut	6 Nm	B



Each time the battery is disconnected from the electrical system of the vehicle, all the self-acquisition parameters are cancelled from the injection ECU.


These parameters must be reacquired before reusing the vehicle.

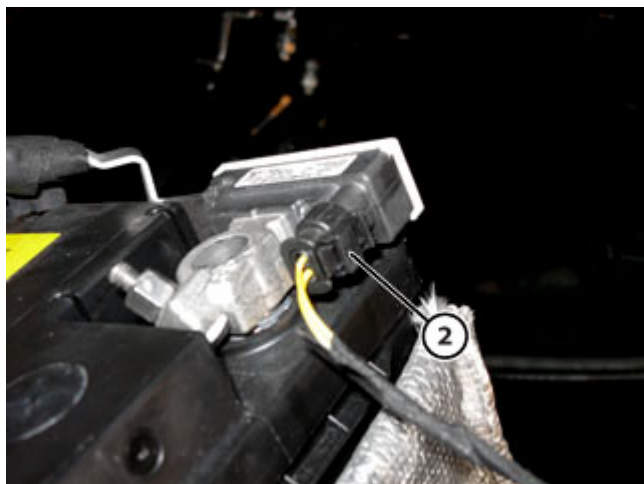

For vehicles with HELE

- Connect the connector (2).

- Fit the battery in the battery mount, tipping to facilitate the operation.

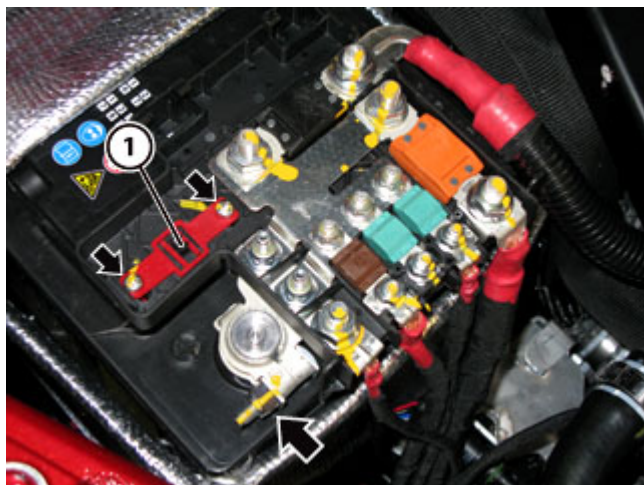


- Connect the positive pole terminal clamp and tighten the respective nut indicated.


		
Tightening torque	Nm	Class
Nut	4.5 Nm	C

- Fit the bracket (1) and tighten the indicated screws.

		
Tightening torque	Nm	Class
Screw	1.2 Nm	B

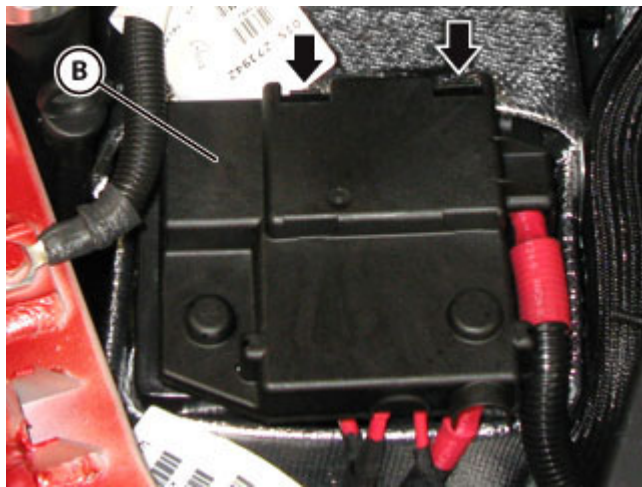

- Fit the cover **(B)**, pressing into place until the indicated clips fasten audibly.

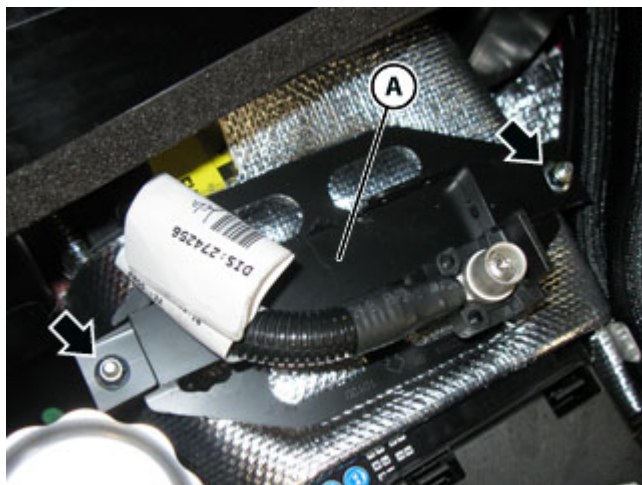

- Fit the bracket **(A)** on the tie-rods.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	6 Nm	B

- Connect the battery (🔧 F2.01).
- Refit the engine compartment cosmetic shields (🔧 E3.14).
 - Refit the right hand lateral cosmetic shield.
- For vehicles with HELE. Perform battery sensor calibration (🔧 F2.02).

Disconnecting the battery



Each time the battery is disconnected from the electrical system of the vehicle, all the self-acquisition parameters are cancelled from the injection ECU.

These parameters must be reacquired before reusing the vehicle.



Never disconnect the battery from the electrical system while the engine is running.

The quick release clamp is connected to the negative battery pole.


When performing any work on current consumers, always disconnect the quick release clamp from the negative battery pole to disconnect the battery from the electrical system.

- Open the engine compartment lid (🔧 E5.09).
- Use the power window controls to lower the door windows by 2-3 centimetres.
- Activate Key-OFF state (🔧 E5.06).
- Close both doors.
- Wait at least 20 minutes before starting the next steps in the procedure.

 During this period, do not open the doors and activate any vehicle device or system.

➤ Remove the engine compartment cosmetic shields ( E3.14).

 Remove the right hand cosmetic inspection shield.

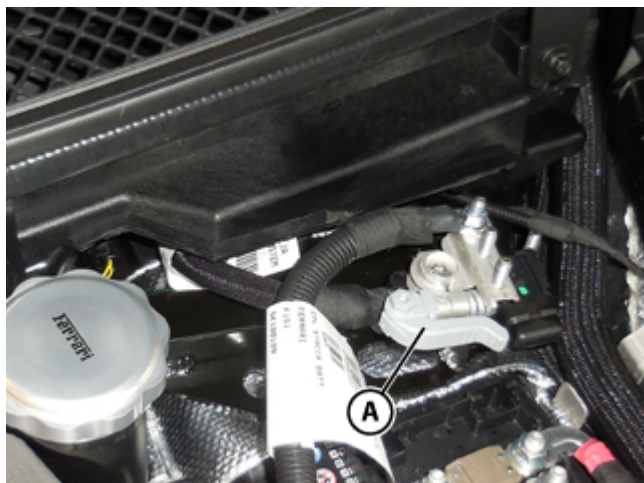

- Release the quick release clamp on the false negative pole of the battery using the lever (A).
- Disconnect the quick release clamp from the false negative battery pole.

Connecting the battery




Each time the battery is connected to the electrical system of the vehicle, keep the vehicle key OUTSIDE the passenger compartment for 1 MINUTE after reconnecting, and do not switch on any current consumers during this period.

After bringing the vehicle key into the passenger compartment, set the electronic system of the vehicle to Key-ON state and WAIT 1 MINUTE before starting the engine.

This procedure ensures that the ECUs in the vehicle are powered up and synchronised correctly, that all motorised valve aperture and closure travel parameters are self-acquired correctly and that AC ECU self-acquisition is performed correctly.

These self-acquisition procedures are initiated each time the battery is connected to the vehicle.

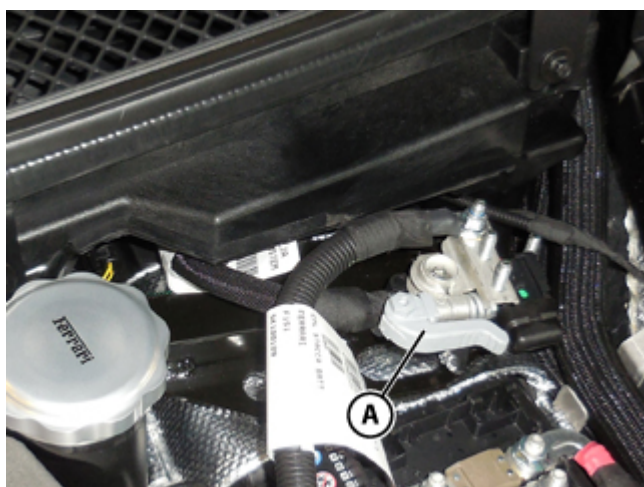

- Connect the quick release clamp to the false negative battery pole.
- Fasten the quick release clamp on the false negative pole of the battery using the lever (A).

➤ Refit the engine compartment cosmetic shields ( E3.14).

 Refit the right hand cosmetic inspection shield.

➤ Carry out the following operations before starting the engine: close both doors and the luggage compartment lid, unlock and lock the doors with the remote control, open the luggage compartment lid with the remote control, set the date and time on instrument panel, close both doors, raise the

driver and passenger side windows to the upper limit and check that the windows drop correctly to the target position when the doors are opened.

➤ Restore the self-adaptive parameters ( F2.01).

Restoring the self-adaptive parameters

Each time the battery is disconnected from the electrical system of the vehicle, all the self-acquisition parameters are cancelled from the ignition/injection ECU.

These parameters must be restored before the vehicle is used again, proceeding as follows.

The self-acquisition function of the Motronic ECUs will only be performed correctly at intake air temperatures above 5 °C. Ensure that the ambient air temperature is not below this value.

- Leave the engine stationary for approximately **10 minutes** in the following conditions:
- engine at idle speed;
- water temperature stabilised;
- current consumers switched off (lights, windscreen wipers etc.);
- air conditioner off.
- These preparations allow the ECU to optimise the self-adaptive parameters quickly by preventing irregular engine operation.