



GTC4Lusso USA - Alternator - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.03 Alternator

Removing the alternator


- Disconnect the battery ( F2.01).
- Remove the engine compartment cross-member ( E2.04).
- Remove the ancillary belt ( A3.14).
- Remove the complete wheels ( D2.01).
-  Remove the right hand front wheel.

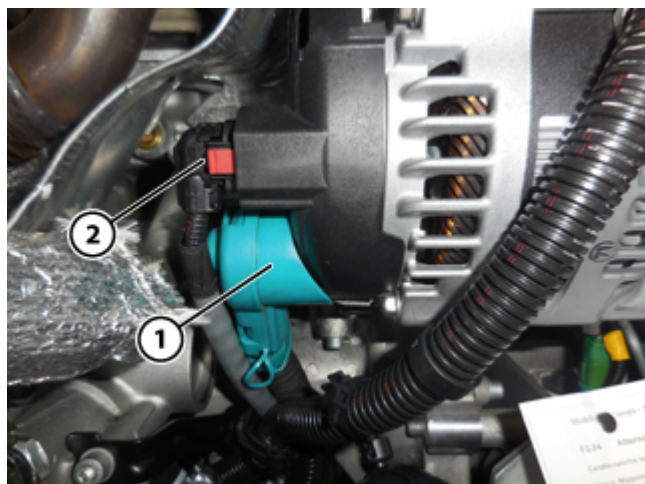

- Working from the wheel bay, prise the cover (1) off the back of the alternator.
- Disconnect the connector (2).




- Detach the engine services cable (3), undoing the indicated nut.

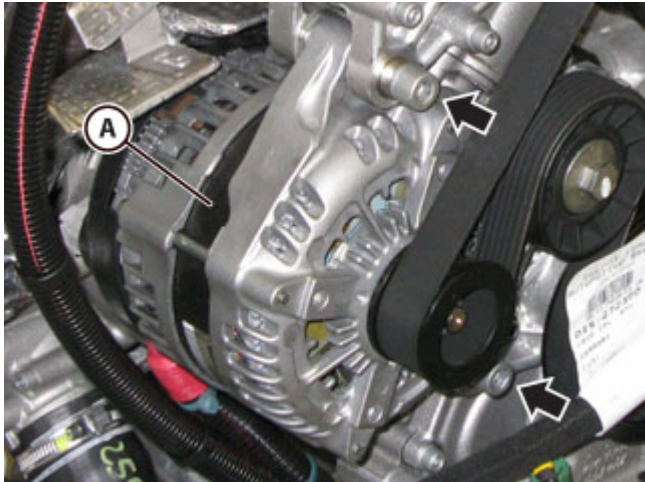

- From above, undo the two screws indicated then remove the alternator (A) from the engine.
- Note that the photo was taken on the workbench to illustrate the operation more clearly.

Refitting the alternator


			
Tightening torque		Nm	Class
Fastening alternator bushings to engine	Bushing	10 Nm	B
	Screw (pre-tightening)	5 Nm	B
Fastening alternator - engine	Screw	49 Nm	B
	Nut	14 Nm	A
	Nut	11 Nm	C
	Nut	7.9 ÷ 11.8 Nm	0

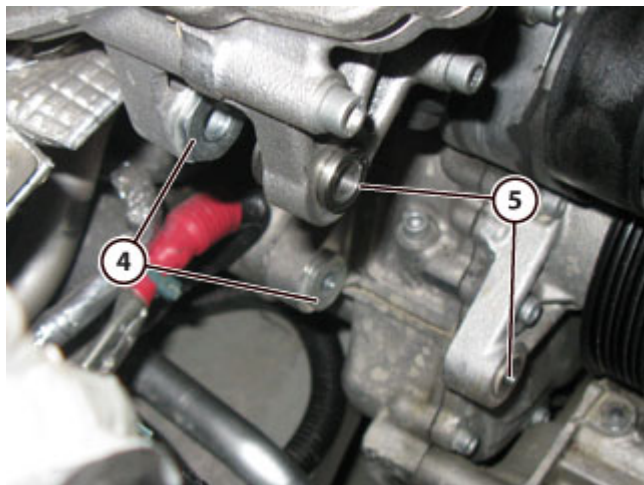

- Check that the bushings **(4)** on the cylinder head and crankcase are installed and tightened correctly.

		
Tightening torque	Nm	Class
Bushing	10 Nm	B

- Check that the sliding bushings **(5)** are correctly installed.

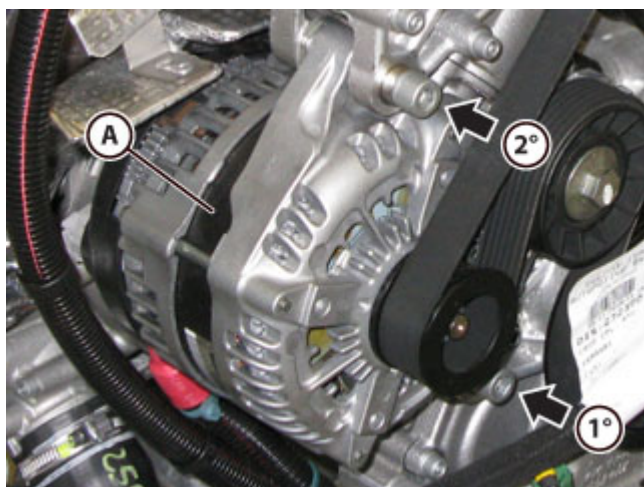


- Fit the alternator **(A)** in the relative seat and hand-tighten the two screws indicated after fitting the relative washers.
- Note that the photo was taken on the workbench to illustrate the operation more clearly.

- Pre-tighten the indicated screws in the sequence given in the photo aside.

		
Tightening torque	Nm	Class
Screw (pre-tightening)	5 Nm	B


- Tighten the screws indicated in the sequence given in the photo aside.

		
Tightening torque	Nm	Class
Screw	49 Nm	B

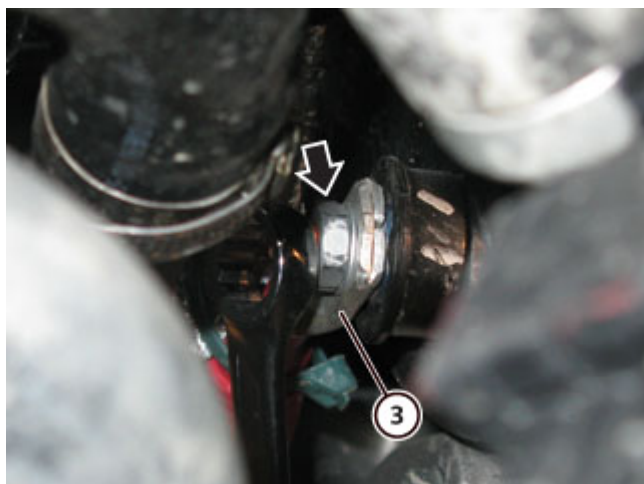

- Fasten the engine services cable **(3)**, tightening the indicated nut.

		
Tightening torque	Nm	Class
Nut	14 Nm	A

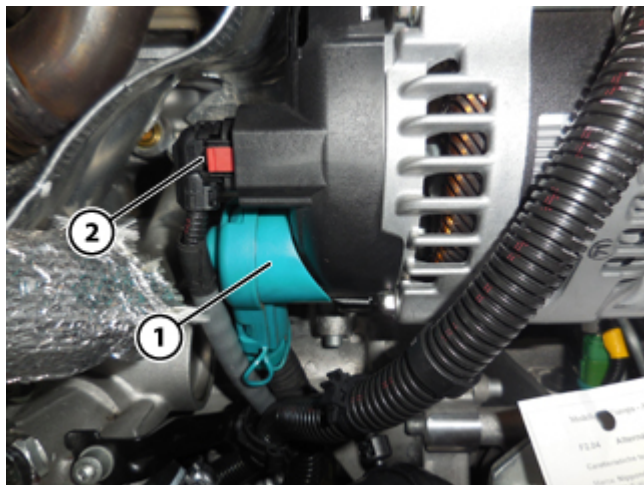

- Connect the connector (2).
- Fit the cover (1) at the back of the alternator.

➤ Refit the complete wheels (🔧 D2.01).

➤ Refit the right hand front wheel.

➤ Refit the ancillary belt (🔧 A3.14).

➤ Refit the engine compartment cross-member (🔧 E2.04).

➤ Connect the battery (🔧 F2.01).