



GTC4Lusso USA - Starter motor - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.04 Starter motor

Removing the starter motor


- Disconnect the battery (🔧 F2.01).
- Remove the catalytic converters (🔧 B7.03).
- Remove the left hand catalytic converter.

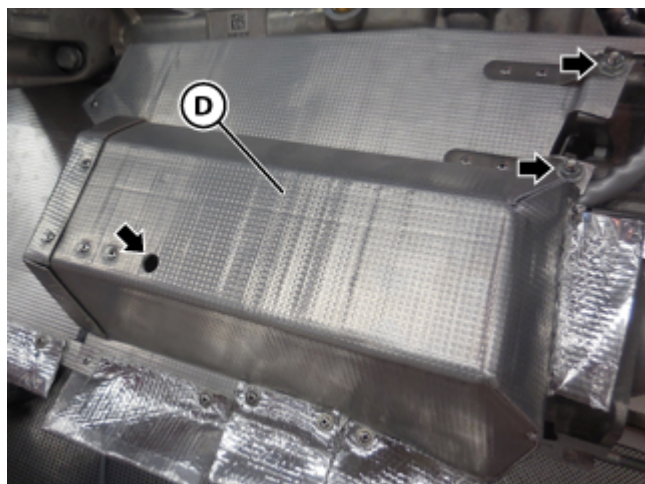


- Undo the nuts indicated.
- Move the heat shield (**D**) aside.



- Prise off the cover (1) and undo the indicated nut fastening the engine services cable.
- Disconnect the connector (2).

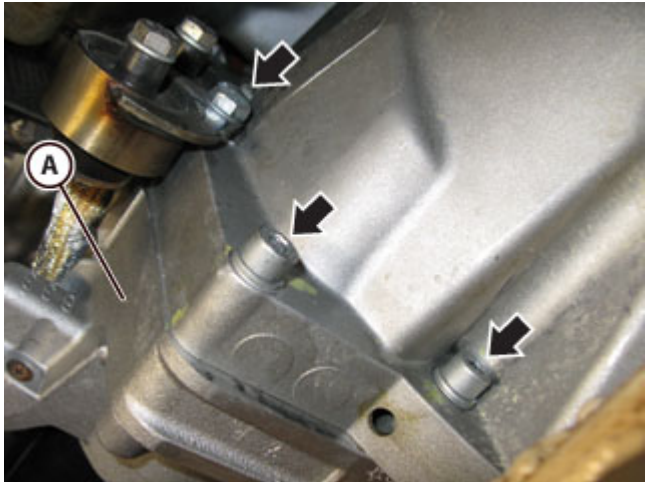

- Undo the indicated screws fastening the starter motor (A) to the lower crankcase shell.

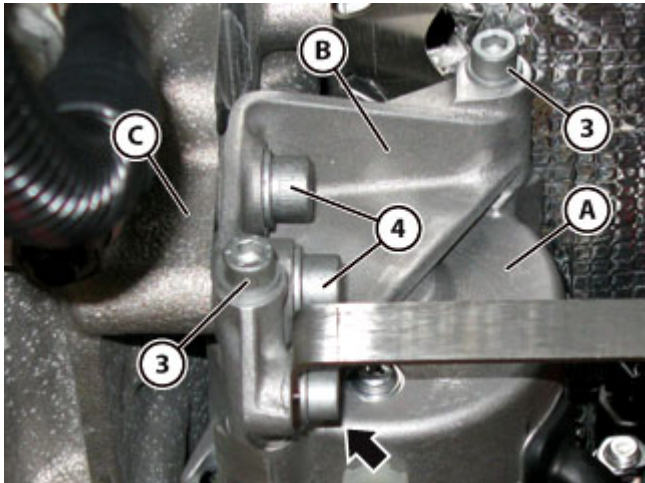

- Loosen the screws (3) fastening the bracket (B) to the starter motor (A).
- Undo the screws (4) fastening the bracket (B) to the lower crankcase shell (C).

- Remove the starter motor from the engine.

Refitting the starter motor


			
Tightening torque		Nm	Class
Fastening starter motor to transmission housing	Screw	25 Nm	A

			
Tightening torque		Nm	Class
Fastening starter motor mounting bracket	Screw	10 Nm	B
	Screw	25 Nm	B
Fastening heat shield - starter motor	Screw	10 Nm	B
	Nut	10 Nm	B
Fastening engine services cable	Nut	14 Nm	A
	Nut	11 Nm	C
	Nut	7.9 ÷ 11.8 Nm	0
Fastening heat shield to bracket on crankcase	Screw	10 Nm	B




Make sure the components are clean before fitting.


- Fit the starter motor in the relative seat on the engine.

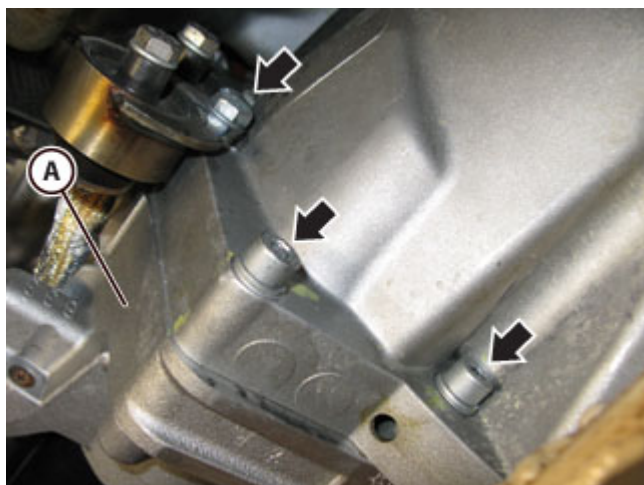

- Hand-tighten the indicated screws fastening the starter motor **(A)** to the lower crankcase shell.

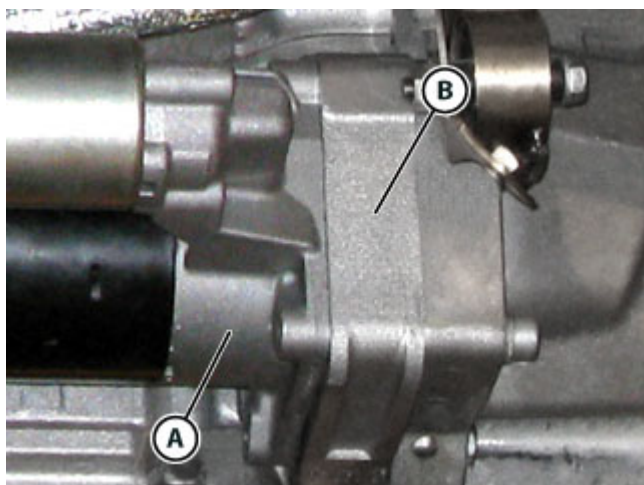


- Ensure that the starter motor **(A)** is correctly in contact with the respective mating surface on the lower crankcase shell **(B)**.

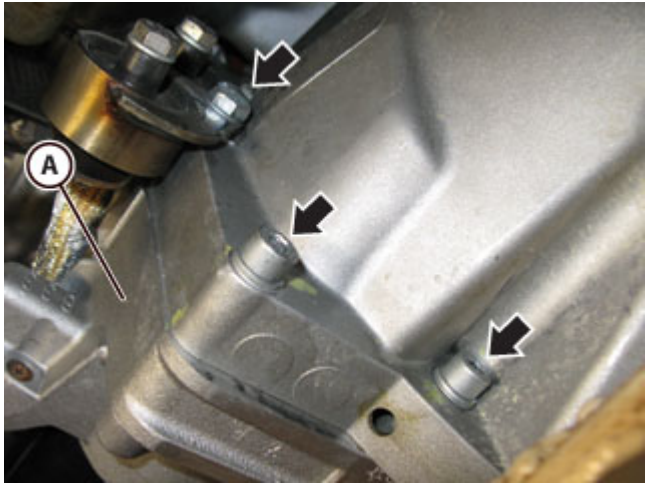

- Definitively tighten the indicated screws fastening the starter motor **(A)** to the lower crankcase shell.

		
Tightening torque	Nm	Class
Screw	25 Nm	A

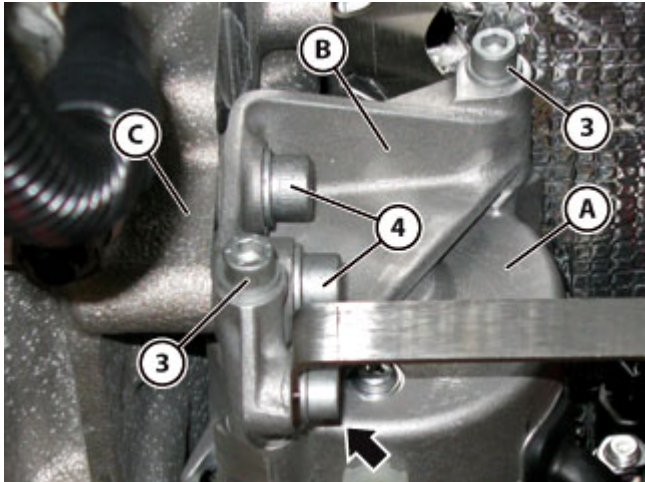

- Tighten the screws **(4)**.
- Ensure that the bracket **(B)** is correctly in contact with the respective mating surface on the lower crankcase shell **(C)**.
- Tighten the screws **(3)**.
- Ensure that the bracket **(B)** is correctly in contact with the respective mating surface on the starter motor **(A)**.
- Tighten the screws **(4)**.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

- Tighten the screws **(3)**.

		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	10 Nm	B



- Refitting in the original position, connect the engine services cable, tightening the respective nut, and fit the cover (1).

		
Tightening torque	Nm	Class
Nut	7.9 ÷ 11.8 Nm	0

- Connect the connector (2).

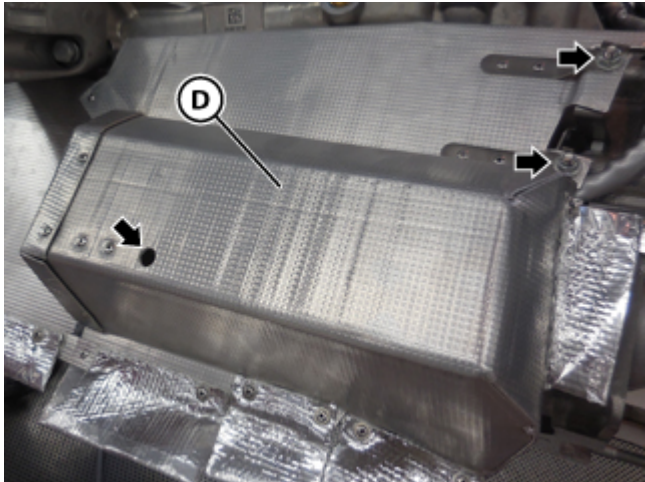

- Fit the heat shield (D).
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Refit the catalytic converters (🔧 B7.03).
 i Refit the left hand catalytic converter.
- Connect the battery (🔧 F2.01).