



GTC4Lusso USA - Lights - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.06 Lights

Diagnosing condensation in headlamps

Guide for headlamp moisture diagnosis

Visual check

- 1) Check that the lamps inspection cap is present and properly fitted to the ledge in its seat
(check cap position during checking operations)

lamps inspection cap



- 2) Check the absence of damages/cracks of the headlamp near both the headlamp body and the lens all along the perimeter (especially fixing brackets)



- 3) Check that the connector of opposite element is properly linked to the headlamp and that it is fitted to the ledge of the headlamp body (no free plays)

headlamp connector with opposite component



- 4) Check if the "cybar" cap and washer, that cover the front and rear ventilation, are present and properly mounted



ventilation cybar



ventilation washer

- 5) Check that all the carters are present and correctly assembled as per design specifications.

Test to be performed

- 1) Perform a dynamic test in order to eliminate the moisture following the further steps
 - a) engine on for 20 min
 - b) simultaneously switch on the headlamps (running light, low and high beams all on)
 - c) drive 30 km, speed 70 km/h
 - d) moisture must not be present at the end of test drive

Whenever condensation is found in a headlamp, please perform the checks and tests indicated above before starting any work.

Removing the headlights


- Remove the engine compartment cosmetic shields (🔧 E3.14).

 Remove lateral cosmetic shields.

- Disconnect the battery ( F2.01).
- Remove the front bumper ( E3.03).




- Disconnect the connector (1).

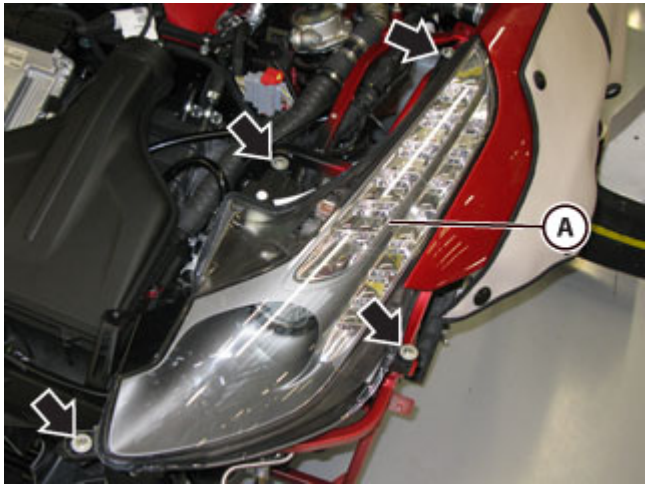

- Undo the screws indicated.
- Remove the headlight (A).

Refitting the headlight

			
Tightening torque		Nm	Class
Fastening headlight	Screw	8 Nm	B

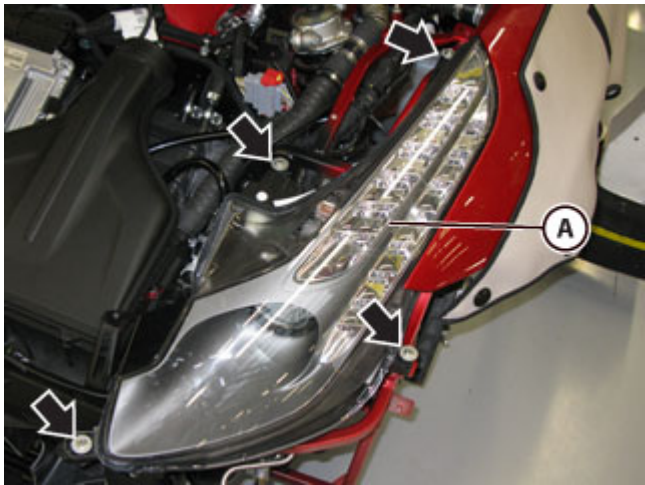


- Fit the headlight (A).
- Tighten the three screws indicated.

		
Tightening torque	Nm	Class
Screw	8 Nm	B



- Connect the connector (1).

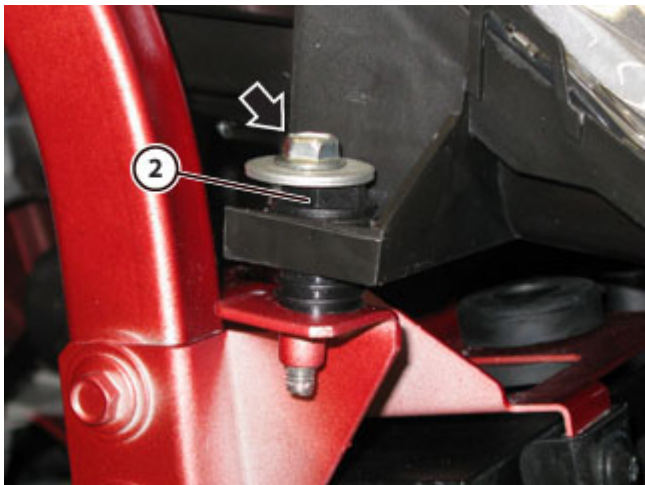

- Refit the front bumper (E3.03).
- Provisionally fasten the front bumper and check that the headlight is correctly aligned with the front bumper and the engine compartment lid.
- In the event of misalignment, loosen the indicated screws, adjust the adjusters (2) on each headlight fastener until the headlight is correctly aligned, then retighten the indicated screws.


		
Tightening torque	Nm	Class
Screw	8 Nm	B

- Refit the front bumper (E3.03).
- Connect the battery (F2.01).
- Refit the engine compartment cosmetic shields (E3.14).
- Refit the lateral shields.


Replacing side repeater turn indicator

The following procedure is for replacing the right hand side repeater turn indicator lamp. The procedure for the left hand lamp is the same.

- Disconnect the battery (🔌 F2.01).
- Remove the front wheelhouses (🔌 E3.05).
- ❗ Remove the front element of the front right hand wheelhouse.

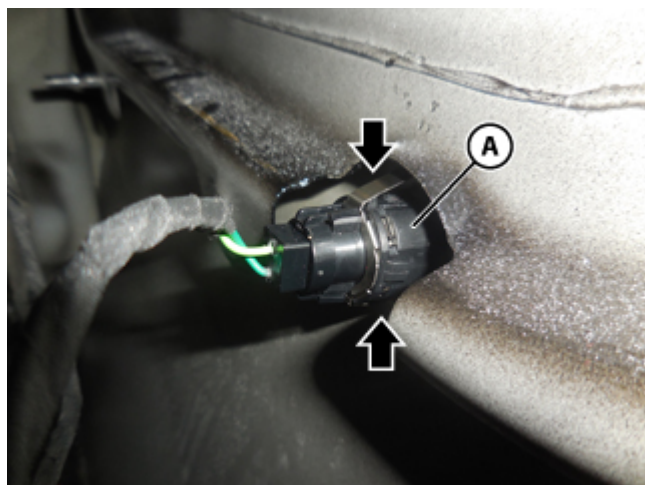

- Press the indicated tabs and detach the side repeater turn indicator (A).

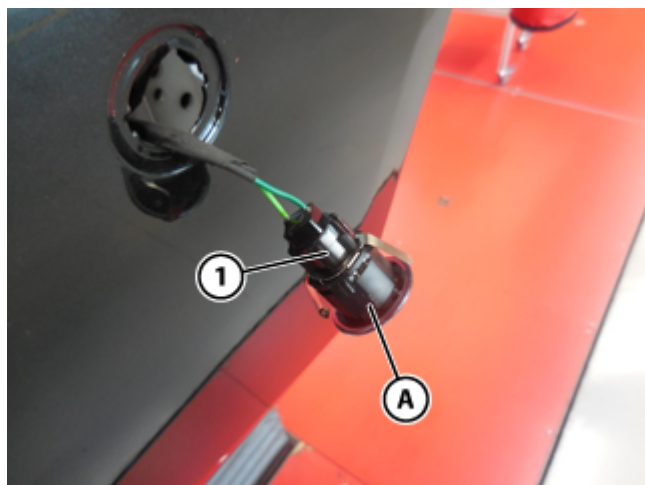

- Disconnect the connector (1).
- Replace the side repeater turn indicator (A).
- Connect the connector (1).
- Fit the side repeater turn indicator (A) in the front fender.


- Refit the front wheelhouses (🔌 E3.05).
- ❗ Refit the front element of the front right hand wheelhouse.

- Connect the battery (🔌 F2.01).


Removing the taillights

- Disconnect the battery (🔌 F2.01).
- Remove the luggage compartment trim panels (🔌 E4.06).
- ❗ Remove the taillight cover trim panels in the luggage compartment.

Passenger side

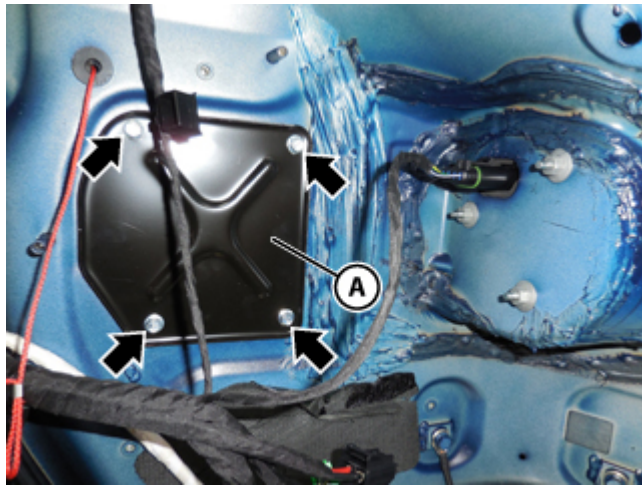


- Undo the screws indicated.
- Remove the access cover **(A)**.

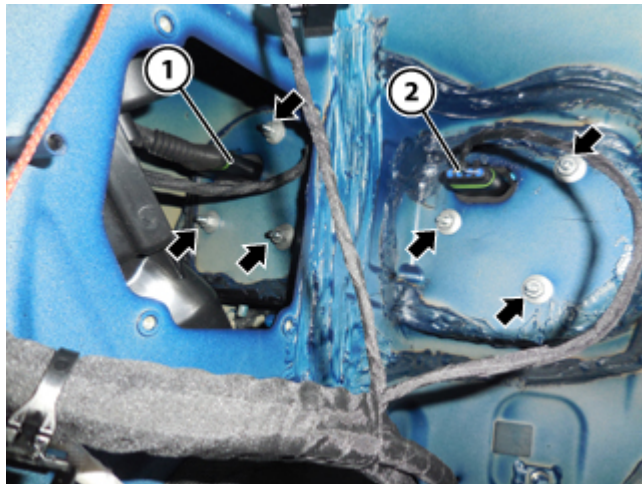

- Disconnect the connector **(1)**.
- Disconnect the connector **(2)**.
- Undo the nuts indicated.
- Remove the light unit.

Driver side

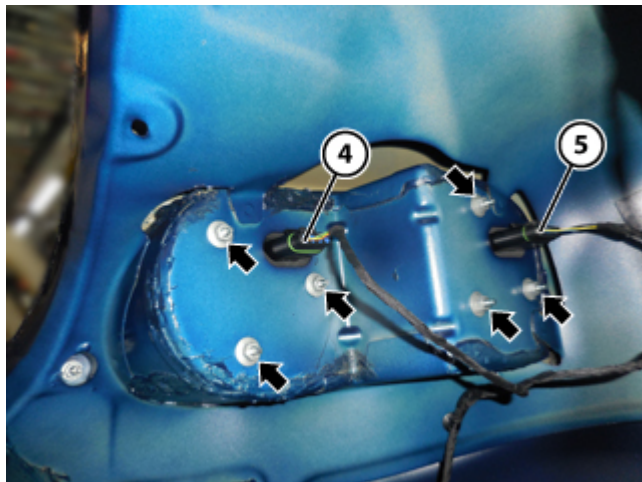


- Disconnect the connector **(4)**.
- Disconnect the connector **(5)**.
- Undo the nuts indicated.
- Remove the light unit.

Refitting the taillights



ng torque		Nm	Class
			
Tightening torque		Nm	Class
Fastening taillight	Nut	5 Nm	B
Fastening taillight access cover	Screw	5 Nm	B


Passenger side

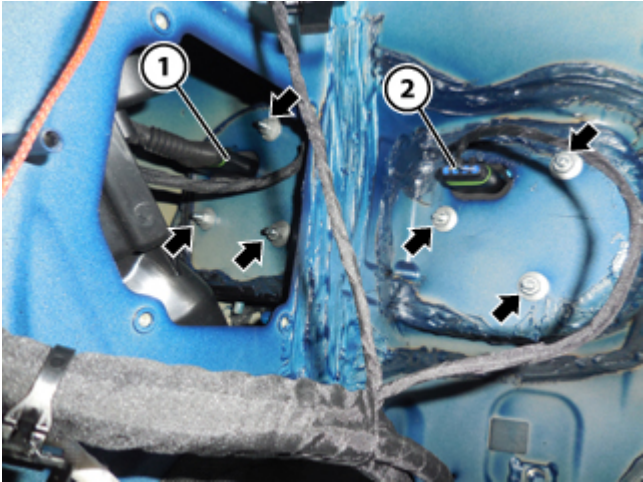

- Fit the light unit.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	5 Nm	B


- Connect the connector (1).
- Connect the connector (2).

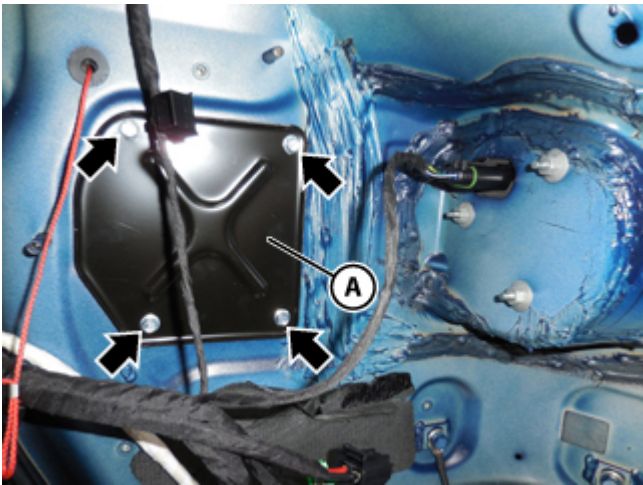

- Fit the access cover (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

Driver side

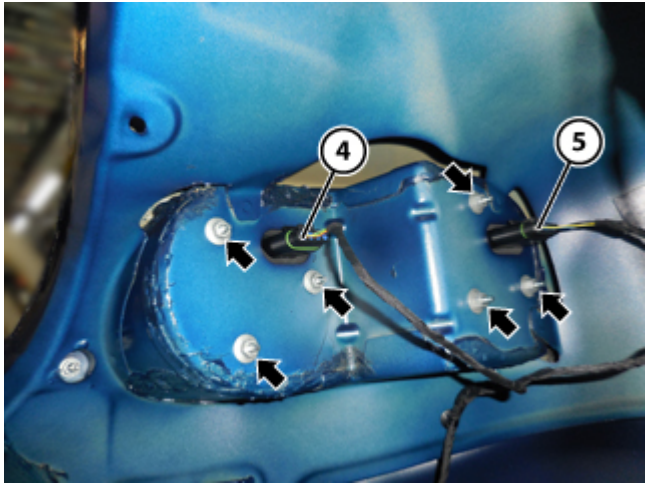

- Fit the light unit.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	5 Nm	B


- Connect the connector (4).
- Connect the connector (5).

- Refit the luggage compartment trim panels ( E4.06).
- Refit the taillight cover trim panels in the luggage compartment.
- Connect the battery ( F2.01).

Replacing the third stop light

			
Tightening torque		Nm	Class
Fastening third stop light	Screw	2 Nm	B

- Disconnect the battery ( F2.01).
- Remove the luggage compartment trim panels ( E4.06).
- Remove the upper luggage compartment lid trim panel.

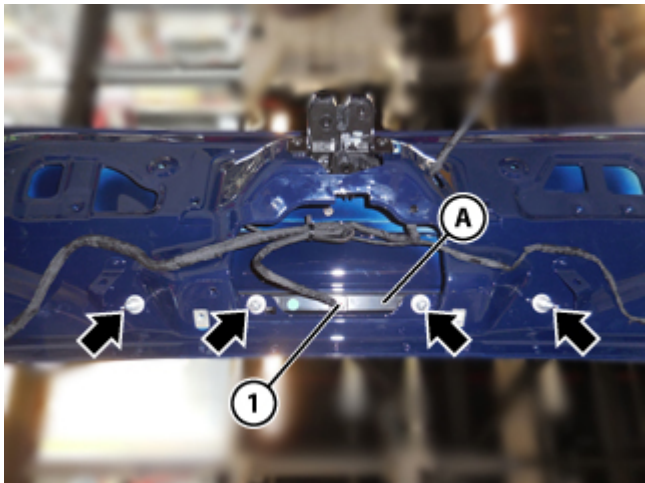

- Undo the nuts indicated.
- Disconnect the connector (1).
- Remove the third stop light (A) and replace.
- Fit the new third stop light (A).
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Screw	2 Nm	B


- Connect the connector (1).

- Refit the luggage compartment trim panels ( E4.06).
- Refit the upper luggage compartment lid trim panel, ensuring that the third stop light is aligned correctly.
- Connect the battery ( F2.01).

Replacing side markers

Replacing the front side markers

- Remove the front wheelhouses (🔧 E3.05).
- Remove the front element.

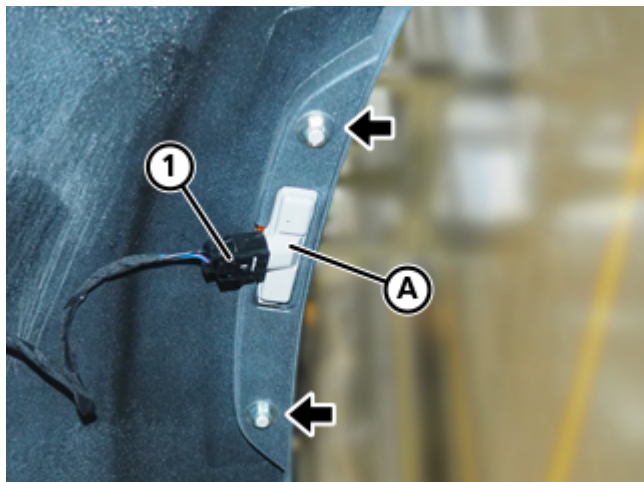


- Undo the nuts indicated.
- Disconnect the connector (1).
- Replace the side marker (A).
- Tighten the nuts indicated.

- Refit the front wheelhouses (🔧 E3.05).
- Refit the front element.

Replacing the rear side markers

- Remove the rear wheelhouses (🔧 E3.05).
- Remove the rear element.

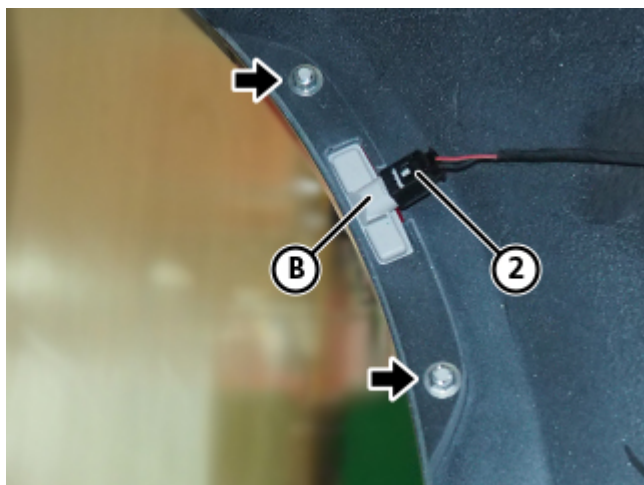

- Undo the nuts indicated.
- Disconnect the connector (2).
- Replace the side marker (B).
- Tighten the nuts indicated.

- Refit the rear wheelhouses (🔧 E3.05).
- Refit the rear element.

