




GTC4Lusso USA - Fuses and relays - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.07 Fuses and relays

Fuse box locations

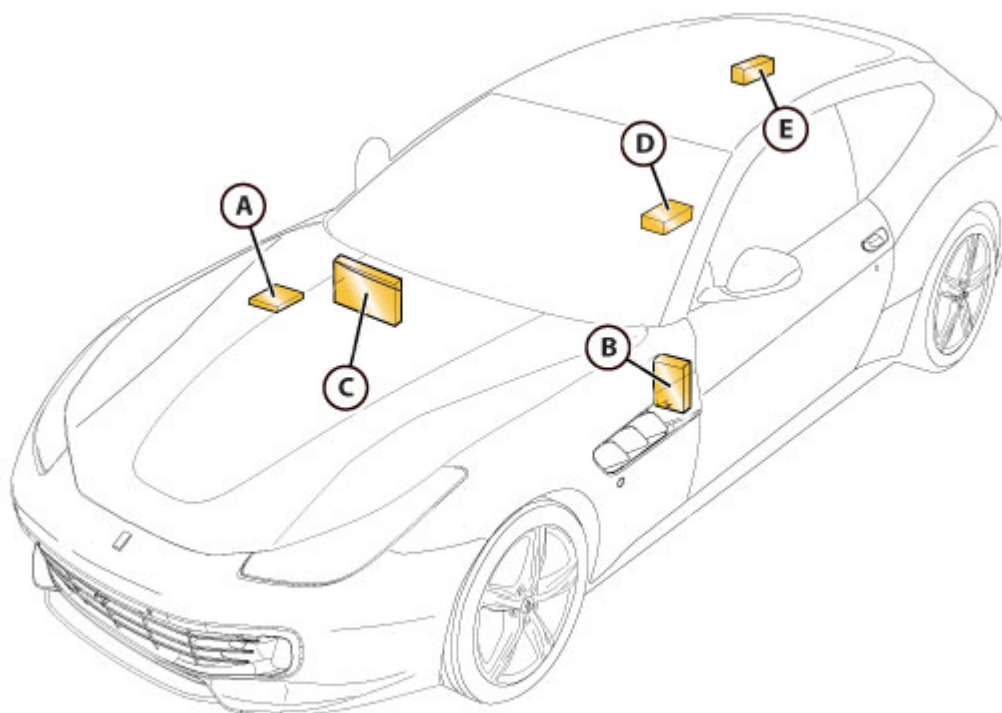

- A** - Fuses and relays in engine compartment (on battery)
- B** - Fuses and relays on dashboard (on Body computer)
- C** - Passenger compartment fuses and relays (passenger side)
- D** - Passenger compartment fuses and relays (on centre tunnel console)
- E** - Luggage compartment fuses and relays (passenger side)

Replacing fuses and relays in engine compartment

➤ Disconnect the battery ( F2.01).



- Detach and remove the cover (A), pressing on the indicated clips.




- Replace the fuses and/or relays using the following diagram as reference.



- Fit and secure the cover (A), pressing on the indicated clips.

➤ Connect the battery ( F2.01).


Fuses in engine compartment (on battery)

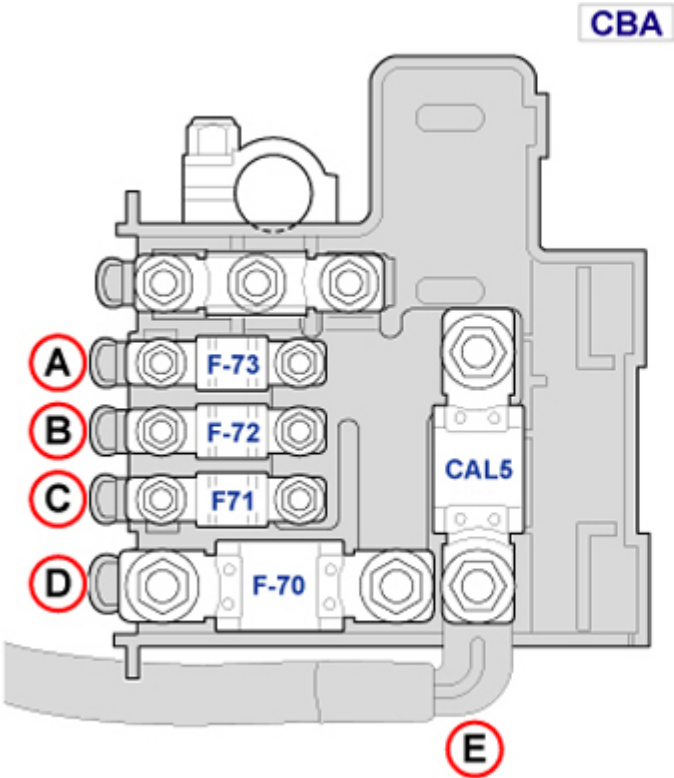

Ref	Amp.	Use	Specifications
CAL5	CAL5	CAL fuse for power supply (starter motor and alternator)	
F-70	150	MEGA ANL fuse for power supply to engine fuse and relay ECU (SCM)	
F-71	50	MEGA fuse for power supply to lifter system	
F-72	70	MEGA fuse for power supply to parking brake node (NPB)	
F-73	125	MEGA fuse for power supply to dashboard ECU (CPL-1)	UP TO Assembly No. 143396
F-73	100	MEGA fuse for power supply to dashboard ECU (CPL-1)	FROM Assembly No. 143397

Replacing passenger side fuses and relays


- Disconnect the battery (🔧 F2.01).
- Remove covers and mats (🔧 E4.05).
- Remove the passenger side footrest mat.

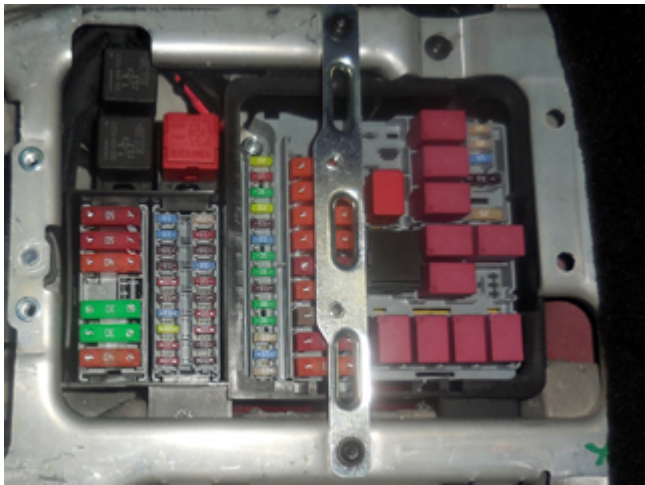

- Replace the fuses and/or relays using the following diagram as reference.

- Refit covers and mats (🔧 E4.05).
- Refit the passenger side footrest mat.
- Connect the battery (🔧 F2.01).

Passenger compartment fuses and relays (passenger side)

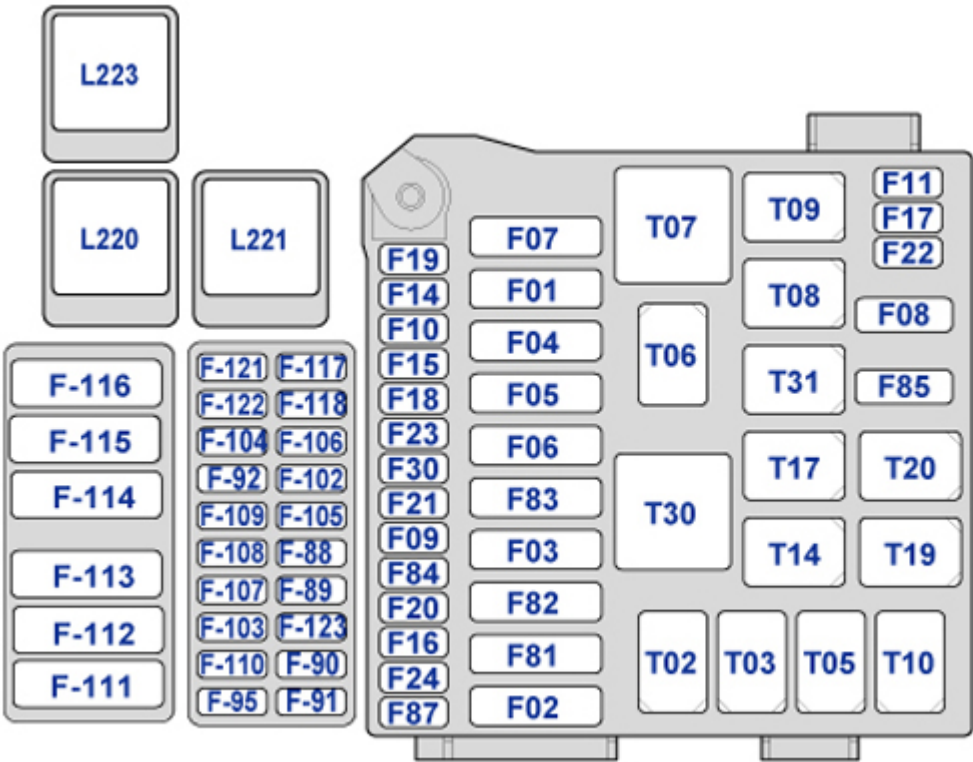

Ref	Amp.	Use	Specifications
F-01	40	+30 MAXI fuse for engine cooling electric fan - 2 - RH	
F-02	40	+30 ESP9 Pump	For vehicles with HELE: +30 DC-DC front converter KL30_1
F-03	40	+30 MAXI fuse, power feed, BUS-BAR for fuses CS-SCM2	
F-04	40	+30 MAXI fuse, ESP9 hydraulics	


Ref	Amp.	Use	Specifications
F-05	40	+30 MAXI fuse, AC node (NCL)	
F-06	40	+30 MAXI fuse for engine cooling electric fan - 1 - LH condenser	
F-07	20	+30 MAXI fuse, relay (T07) for horns	
F-08	7.5	Midi fuse for AC compressor (from T08)	
F-09	7.5	+30 Mini fuse, third brake light	
F-10	30	+30 Mini fuse, BUS-BAR for CS-SCM2 fuses	For vehicles with HELE: +30 DC-DC front converter KL30_2
F-11	25	Mini fuse for LH cylinder bank oxygen sensors (from T09) + utilities	
F-14	10	+30 Mini fuse, headlamps relay	
F-15	20	+30 Mini fuse, vacuum pump	
F-16	25	Mini fuse, power supply for RH cylinder bank engine control Node (NCM) (from T10)	
F-17	25	Mini fuse, power supply for LH cylinder bank engine control Node (NCM) (from T09)	
F-18	7.5	+30 Mini fuse, left hand cylinder bank + 86T9	
F-19	7.5	Mini fuse, start button	
F-20	30	+30 Mini fuse, main relay (T10) for RH cylinder bank injection system (main 2)	
F-21	30	+30 Mini fuse, 4WD system hydraulic pump	
F-22	15	Mini fuse for LH cylinder bank [ignition coils + other LH cylinder bank services] (from T09)	
F-23	15	Mini fuse, NPE, KIN	
F-24	15	Mini fuse for RH cylinder bank (from T10 for ignition coils + other RH cylinder bank utilities + T30 relay coils + secondary air system solenoid valve)	
F-30	30	+30 Mini fuse, starter relay (T20)	For vehicles with HELE: +30 starter relay 2 (L220)
F-81	50	+30 MAXI fuse, ESD ECU for fuel pumps	
F-82	70	+30 MAXI fuse, power feed, NBC part AA Pin 8	
F-83	50	+30 MAXI fuse, air pump relay	
F-84	30	+30 Mini fuse, suspension control node (NCS)	
F-85	25	Midi fuse, headlight washer (from T31)	
F-87	25	Mini fuse for RH cylinder bank oxygen sensors (from T10)	
F-88	10	Mini INT fuse for LH IE, converter	
F-89	10	+15 Mini fuse, RH cylinder bank injection system	

Ref	Amp.	Use	Specifications
F-90	15	Mini fuse for USB Splitter, NDC, Centre display, NIT controls	
F-91	10	Mini fuse for ATS, Clock spring connector, Passenger display, VICS, DVD, cabin light unit, NAV JAPAN	
F-92	10	Mini fuse for relay (T20) Pin 30 and 86	
F-93	-	Not used	
F-95	10	Mini fuse for instrument panel node (NQS)	
F-102	7.5	Mini fuse, ABS (electronics), LH headlamp	
F-103	20	Mini fuse, front differential ECU - 4WD	
F-104	15	Mini fuse, 4WD relay (T14)	
F-105	7.5	Mini fuse, RH headlamp	
F-106	7.5	Mini fuse, switches/buttons lighting	
F-107	15	Mini fuse, power for RH cylinder bank injection system	
F-108	15	Mini fuse, power for LH cylinder bank injection system	
F-109	7.5	Mini fuse, power for RH cylinder bank injection system (pin 86)	
F-110	25	Mini fuse, power feed for NIT	
F-111	40	+30 Maxi fuse, NPB	
F-112	30	+30 MAXI fuse, seat heating	
F-113	30	+30 MAXI fuse, electric tailgate	
F-114	30	+30 MAXI fuse, 12 channel amplifier	
F-115	50	+30 MAXI fuse, LH RWS	
F-116	50	+30 MAXI fuse, RH RWS	
F-117	10	Mini fuse, driver seat heating	
F-118	10	Mini fuse, passenger seat heating	
T02	30	Micro relay, headlights	
T03	30	Micro relay, switch and button lighting	
T05	30	Micro relay, glove box actuator	
T06	-	Not used	
T07	50	MAXI relay, horns	
T08	30	Micro relay, AC compressor	
T09	30	Main Micro relay, LH cylinder bank injection system (main 1)	
T10	30	Main Micro relay, RH cylinder bank injection system (main 2)	
T14	30	Micro relay, 4WD system electric cooling fan	
T17	30	Micro relay, vacuum pump	
T19	-	Not used	
T20	30	Micro relay, fuel filler flap	
T30	50	MAXI relay, air pump	
T31	30	Micro relay, headlight washer pump	
T36-L223	-	Relay, hydraulic pump for 4WD system	

Ref	Amp.	Use	Specifications
R2-L220	-	Bosch starter relay 2	For vehicles with HELE
R3-L221	-	Bosch starter relay 3	For vehicles with HELE

Replacing fuses and relays on dashboard (Body computer)


- Disconnect the battery (🔧 F2.01).
- Remove the dashboard trim panels (🔧 E4.02).
- ❗ Remove the Body computer trim panel from the dashboard.

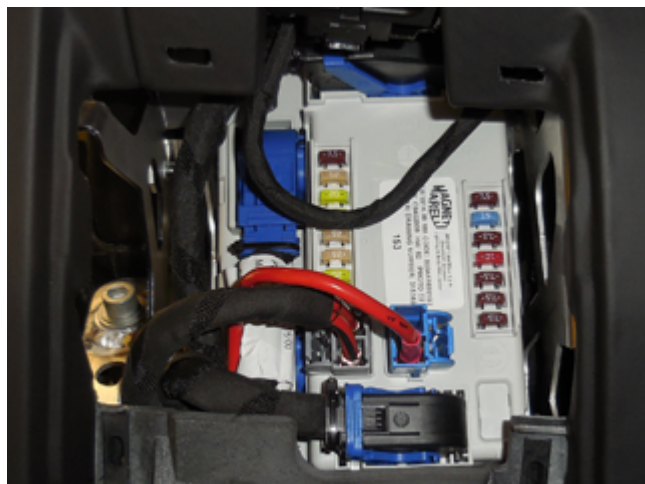

- Replace the fuses and/or relays using the following diagram as reference.

- Refit the dashboard trim panels (🔧 E4.02).
- ❗ Refit the Body computer trim panel on the dashboard.
- Connect the battery (🔧 F2.01).

Fuses and relays on dashboard (on Body computer)

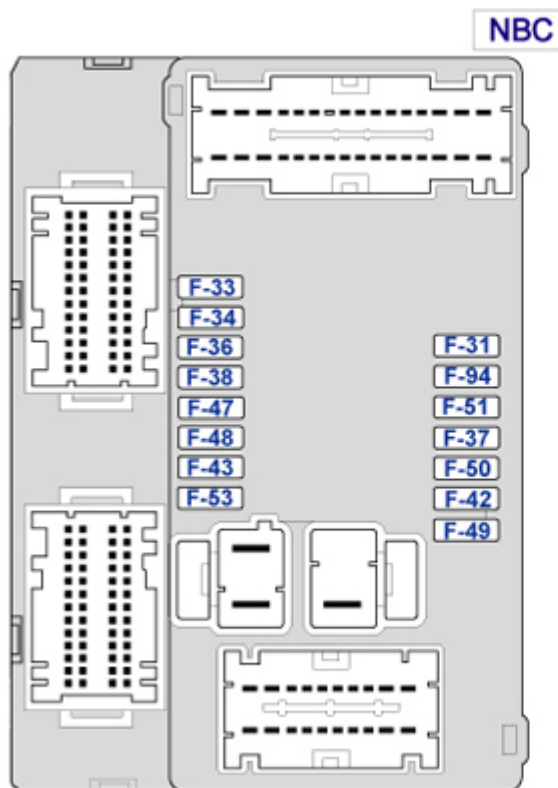

Ref	Amp.	Use
F-31	-	Not used
F-33	-	Not used
F-34	-	Not used
F-36	20	Fuse, left hand low beam light
F-37	10	INT/A fuse for AC system, NBC
F-38	20	Fuse, puddle lights and footwell lights, luggage compartment lights, side marker relay, glove compartment relay coil
F-42	7.5	NBC fuse
F-43	20	Fuse, relay coil for low beam lights, headlight washer, button lighting, NFA ECU, headlights, power steering and entertainment system
F-47	25	Fuse, parking sensors, fuel filler flap relay coil
F-48	7.5	NQS fuse
F-49	7.5	Fuses, luggage compartment motor actuator, wiper control unit
F-50	7.5	Fuse, EOBD diagnostic port, alarm siren, AC system node.
F-51	7.5	Fuse, heated rear screen
F-53	7.5	Power feed, windscreen washer nozzle defroster
F-94	-	Not used

Replacing passenger compartment fuses and relays (on centre tunnel console)

➤ Disconnect the battery (🔌 F2.01).



- Remove the rear cup holder (A).




- Replace the fuses and/or relays using the following diagram as reference.



- Fit the rear cup holder (A).

➤ Connect the battery (🔌 F2.01).

Passenger compartment fuses and relays (on centre tunnel console)

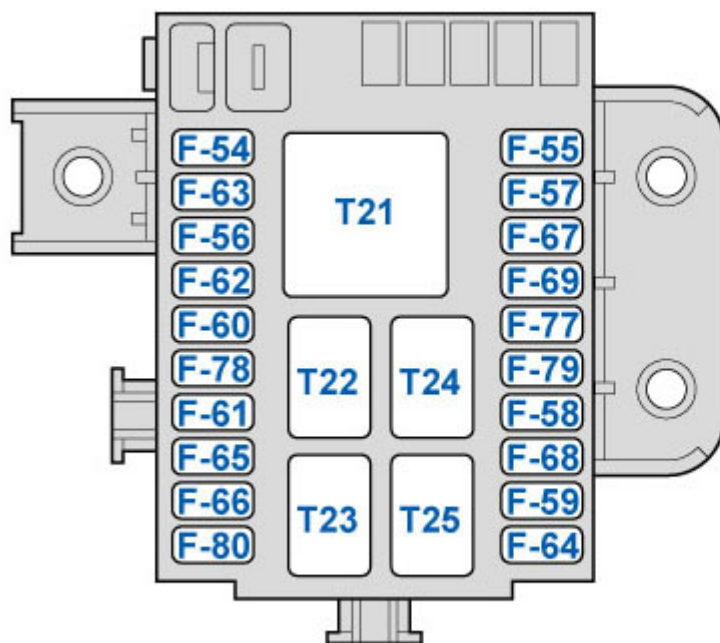

Ref	Amp.	Use
F-54	30	+30 Mini fuse, HiFi amplifier
F-55	-	Not used
F-56	30	+30 Mini fuse, driver position set-up node (NAG)
F-57	-	Not used
F-58	15	Mini fuse, heated spray nozzles
F-59	30	Mini fuse, heated rear screen
F-60	25	+30 mini fuse, passenger position set-up node (NAP)
F-61	-	Not used
F-62	7.5	+30 mini fuse, NCR
F-63	20	+30 mini fuse, main relay (T25) for electronically controlled gearbox node
F-64	-	Not used
F-65	20	+30 Mini fuse, active aero ECU
F-66	30	+30 Mini fuse, BUS-BAR power feed for fuses: F-96, F-100, F-101, F119
F-67	20	+30 Mini fuse, centre tunnel power socket
F-68	-	Not used
F-69	20	+15 Mini fuse, centre tunnel cigarette lighter
F-77	-	Not used
F-78	7.5	+30 mini fuse, NTP
F-79	-	Not used
F-80	30	+30 Mini fuse, BUS-BAR power feed for fuses: F-97, F-98, F-99, F-120
T21	50	+15 MAXI relay for utilities on rear cable

Ref	Amp.	Use
T22	30	Heated rear screen micro relay
T23	-	Not used
T24	30	Micro relay for NPE
T25	30	Main Micro relay, electronically controlled gearbox node (NCR)

Replacing fuses and relays in luggage compartment


- Disconnect the battery (🔌 F2.01).
- Remove the luggage compartment trim panels (🔌 E4.06).
- Remove the tool kit compartment tray.



- Replace the fuses - relays using the following layout as reference.

- Refit the luggage compartment trim panels (🔌 E4.06).
- Refit the tool kit compartment trim.
- Connect the battery (🔌 F2.01).

Luggage compartment fuses and relays (passenger side)

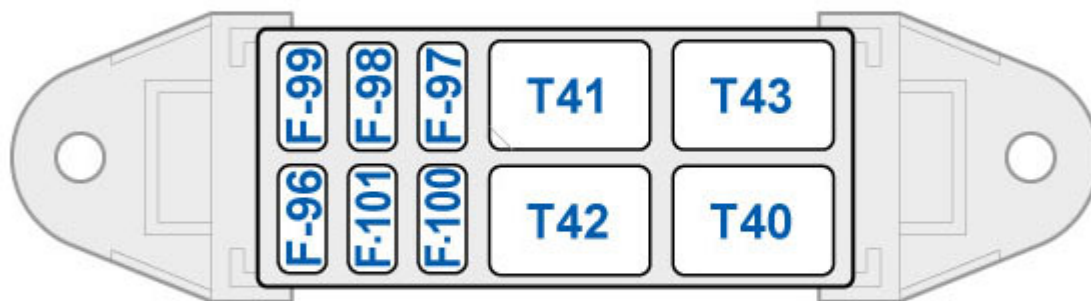

Ref	Amp.	Use
F-96	10	+30 fuse, relay (T41 Pin 30 and 86)
F-97	10	+30 fuse, passenger position set-up node (NAP) (electronics), luggage compartment lid release striker
F-98	15	+30 fuse, battery charger socket
F-99	10	+30 mini fuse, NSP
F-100	7.5	+30 fuse, driver position set-up node (NAG) (electronics), vehicle lifter ECU
F-101	-	Not used
F-119	10	+30 Mini fuse, Electrochromic roof
F-120	7.5	+30 Mini fuse, External mirrors
T40	-	Not used
T41	30	Luggage compartment lock actuator relay
T42	-	Not used
T43	-	Not used