



GTC4Lusso USA - Rain/twilight sensor - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F2.11 Rain/twilight sensor

Rain sensor

The rain sensor (part of a single unit with the twilight sensor) operates in the infrared range and measures the refraction caused by raindrops of a beam of light passing through the windscreen to automatically adjust the windscreen wiper frequency in proportion with rain intensity.

The rain sensor is activated by selecting "AUTO" windscreen wiper mode with the relative control on the steering wheel.

Twilight sensor

When the external lights are set to "AUTO" with the light control dial, the twilight sensor (part of a single unit with the rain sensor) switches the low beam lights and the running lights on and off automatically.

The running lights and low beam lights are switched off by the twilight sensor (with the external light dial set to "AUTO") according to the following logic:

- low beam lights off: upon reception of the relative command from the twilight sensor;
- running lights off: 10 seconds after low beam lights are switched off.

The sensitivity of the sensor may be set via the instrument panel.

Checking rain sensor operation

Perform on vehicle fitted with battery.

- Using the relative control on the steering wheel, turn the windscreen wiper from off to "AUTO".
 - Check that the windscreen wiper functions automatically, commanded by the rain sensor (with a dry screen, the system will still perform a wash cycle approximately every 5 seconds).
 - Wet the windscreen slightly in the area over the sensor (with a spray bottle or sponge) and check that the windscreen wiper activates and then stops when the area over the sensor is dry again.
-  A rain sensor fault is indicated by a specific indicator light on the instrument panel.

Checking twilight sensor operation


Perform on vehicle fitted with battery.

- Place the vehicle in a brightly lit area (for example, with a halogen lamp shining directly onto the windscreen in the area over the twilight sensor).
- Turn the dial to "AUTO" and check that the lights remain off.
- Cover the sensor with a black screen and check that the lights switch on with no noticeable delay.
- Remove the black screen from the sensor and check that the lights switch off after a delay of a few seconds.

 A twilight sensor fault is indicated by a specific indicator light on the instrument panel.


Removing the rain/twilight sensor

➤ Remove the interior rear view mirror ( E5.07).

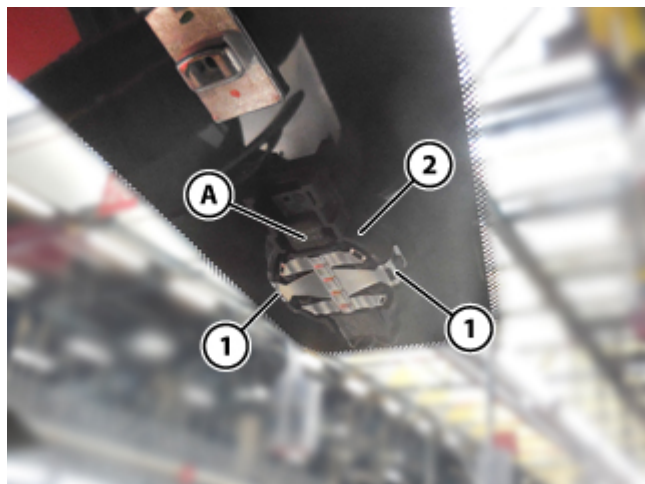

- Lift the two side tabs **(1)** at the same time, then remove the rain sensor **(A)** from its base **(2)** on the windscreen.
- Place the sensor **(A)** into a closed box or use the special cover for the sensing area included in the sensor package.

Refitting the rain/twilight sensor

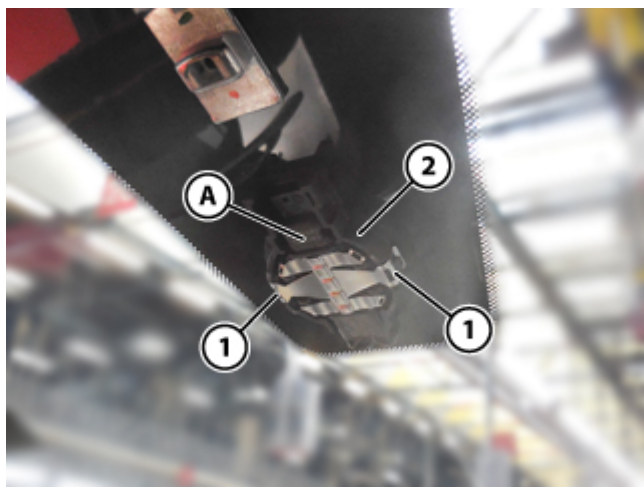

- Check that the sensor mating area on the windscreen is perfectly clean.
- Fit the rain/twilight sensor (**A**) onto the base (**2**) and fasten it by attaching the two side tabs (**1**) at the same time.
- Press onto the sensor with the palm of the hand to ensure that it adheres fully to the windscreen.

➤ Refit the interior rear view mirror (🔧 E5.07).