



GTC4Lusso USA - Engine services cable - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F2.12 Engine services cable

Removing the engine services cable

- Disconnect the battery ( F2.01).
- Remove the flat undertray sections ( E3.13).
-  Remove the central flat undertray section.

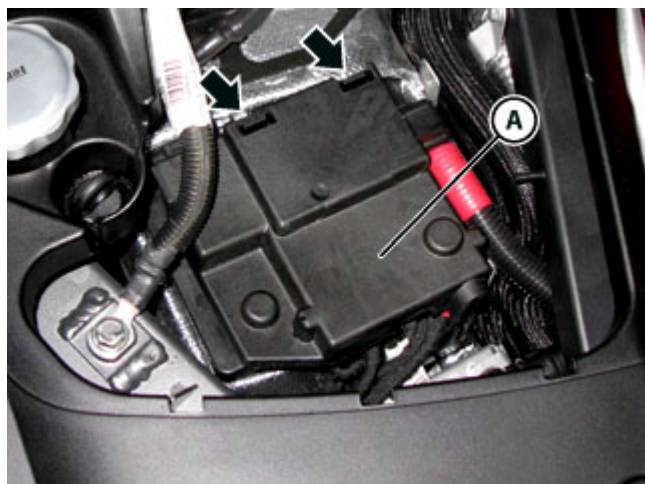


- Detach and remove the cover (A), pressing on the indicated clips.

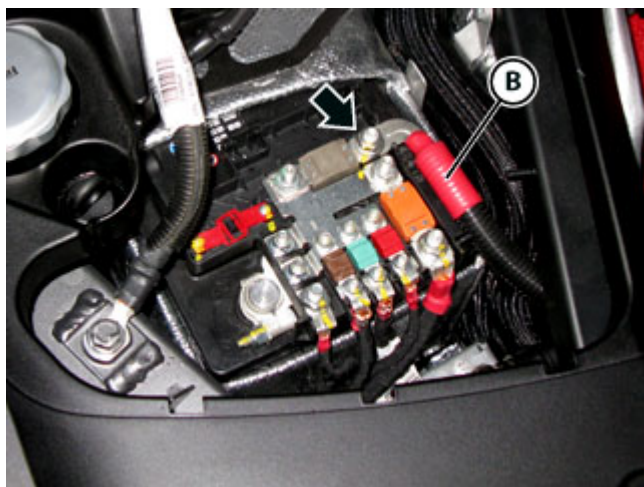


- Disconnect the engine services cable (B), undoing the indicated nut.



- Undo the screws indicated.

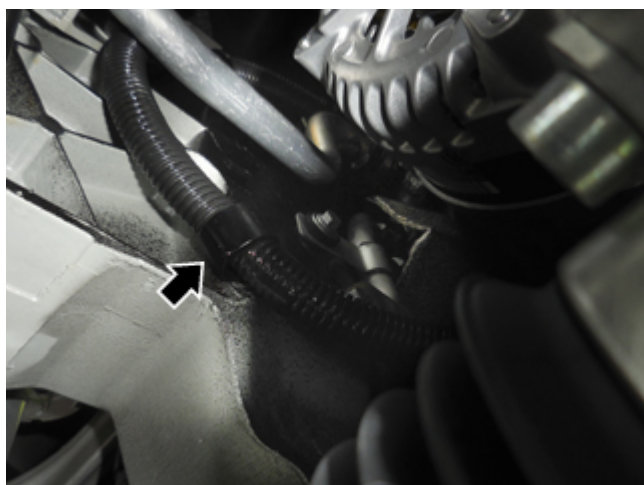

- Open the indicated clip.

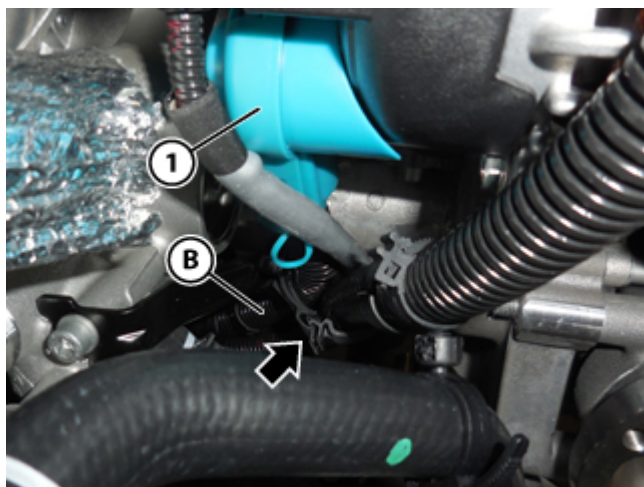


- Open the indicated clip.
- Disconnect the engine services cable (**B**) from the alternator, opening the cover (**1**) and undoing the nut underneath.



- Open the indicated clips.



- Open the indicated clip.

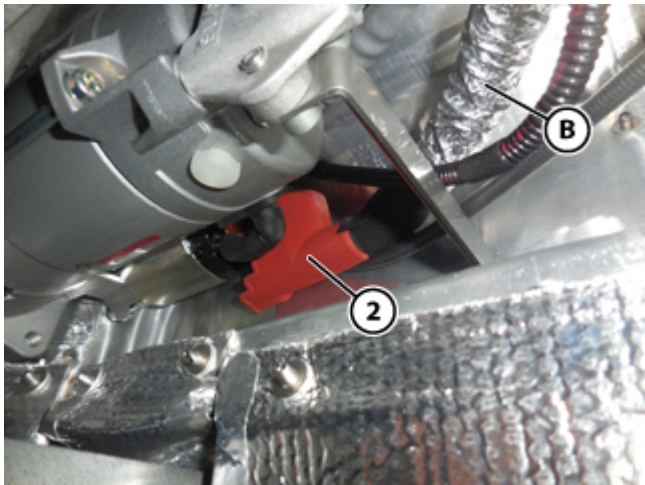


- Disconnect the engine services cable (B) from the starter motor, opening the cover (2) and undoing the nut underneath.

- Remove the engine services cable from underneath.

Refitting the engine services cable

			
Tightening torque		Nm	Class
Fastening engine services cable	Nut	14 Nm	A
	Nut	11 Nm	C
	Nut	7.9 ÷ 11.8 Nm	0

- Fit the engine services cable from underneath.

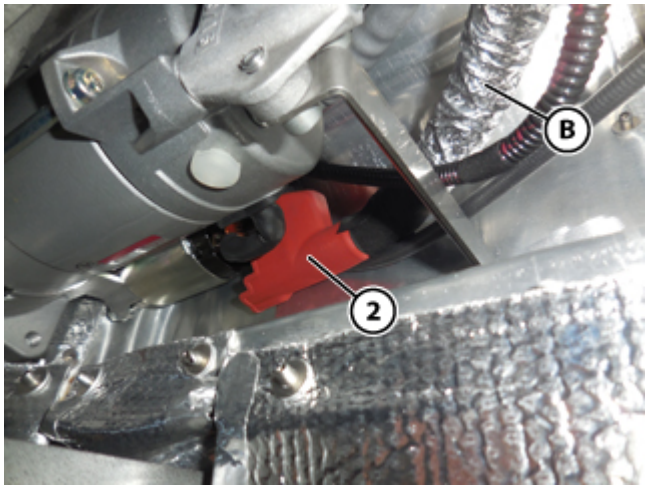

- Connect the engine services cable (B) to the starter motor, tightening the indicated nut, then fit the respective cover (2).


		
Tightening torque	Nm	Class
Nut	7.9 ÷ 11.8 Nm	0



- Fasten the indicated clip to secure the engine services cable.




- Fastening the indicated clips to secure the engine services cable.

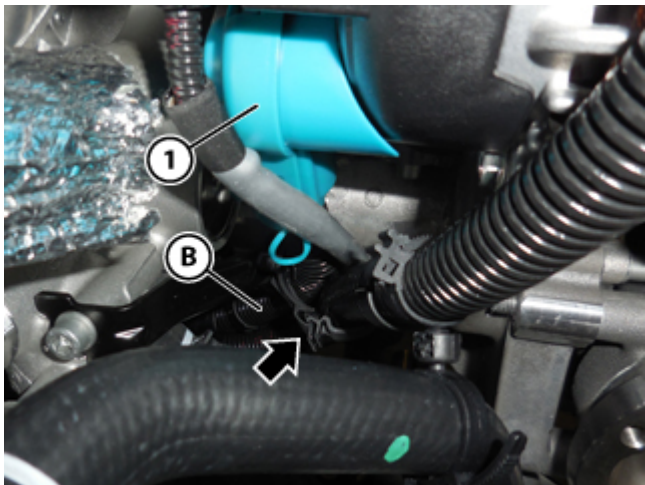

- Connect the engine services cable (**B**) to the alternator, tightening the nut, then fit the respective cover (**1**).

		
Tightening torque	Nm	Class
Nut	14 Nm	A


- Fasten the indicated clip to secure the engine services cable (**B**).

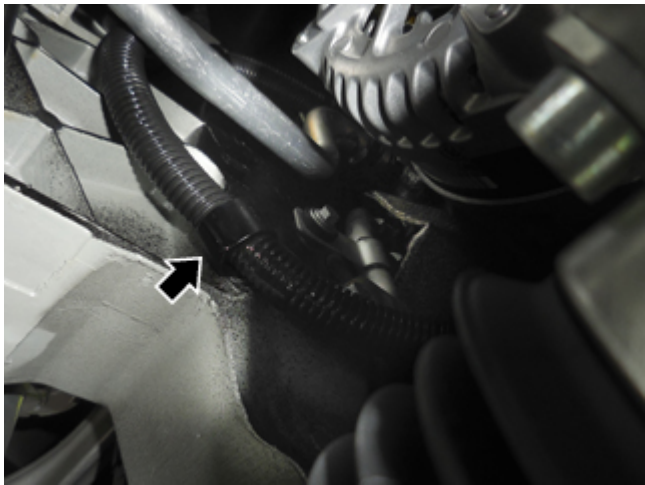

- Fasten the indicated clip to secure the engine services cable.




- Tighten the indicated screws, fitting the respective rubber-lined brackets.

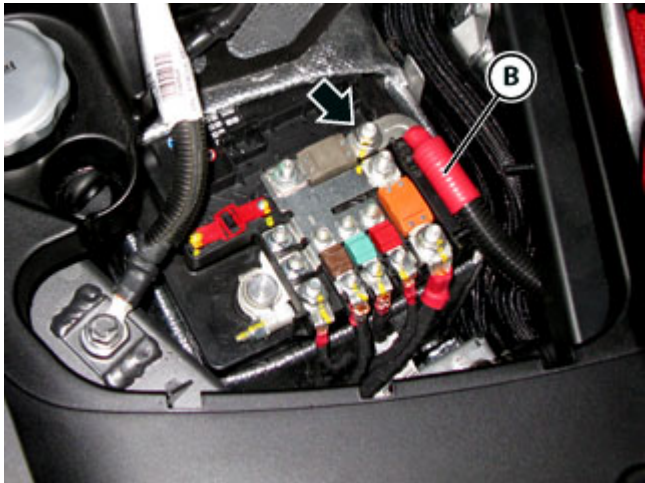

- Connect the engine services cable (**B**), tightening the indicated nut.

		
Tightening torque	Nm	Class
Nut	11 Nm	C

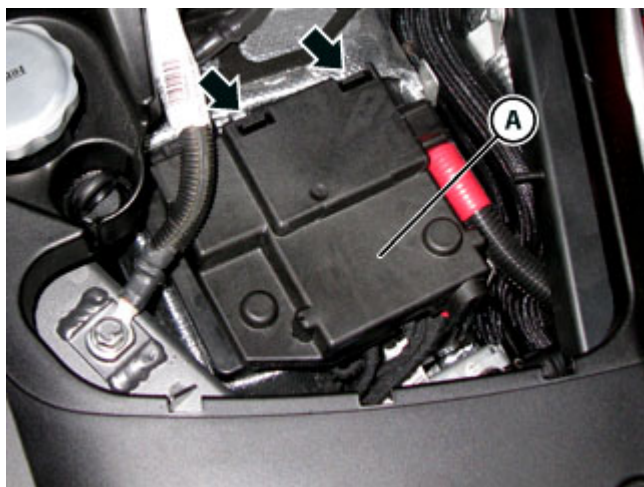

- Fit and secure the cover **(A)**, pressing on the indicated clips.

- Refit the flat undertray sections ( **E3.13**).
 - Refit the central flat undertray section.
- Connect the battery ( **F2.01**).