



GTC4Lusso USA - Timing sensors - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F3.02 Timing sensors

Replacing the timing sensors

			
Tightening torque		Nm	Class
Fastening the timing sensors	Screw	8 Nm	A
Fastening GDI injection pump soundproofing cover	Screw	10 Nm	B
Fastening passenger compartment air intake	Screw	4 Nm	B

- Disconnect the battery ( F2.01).
- Remove the engine compartment cosmetic shields ( E3.14).
-  Remove the lateral underwindscreen cosmetic shields.

Intake, right hand cylinder bank

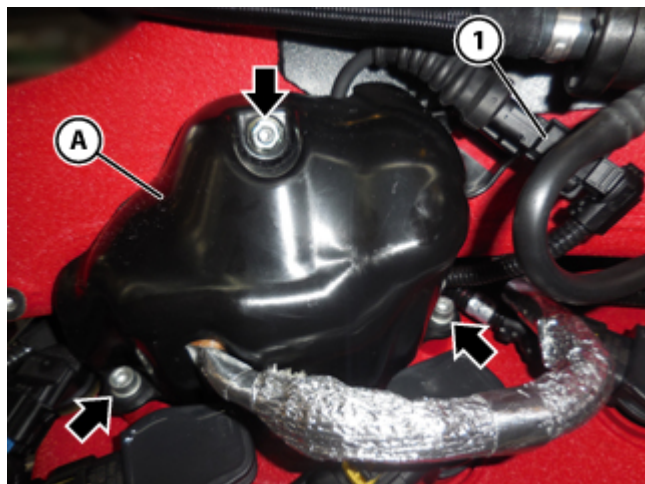


- Detach the connector (1) from the respective bracket.
- Undo the screws indicated.
- Remove the soundproofing cover (A).



- Disconnect the connector (2).
- Undo the indicated screw.
- Remove the sensor (B) and replace.
- Fit the new sensor (B), orienting correctly.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	A

- Connect the connector (2).

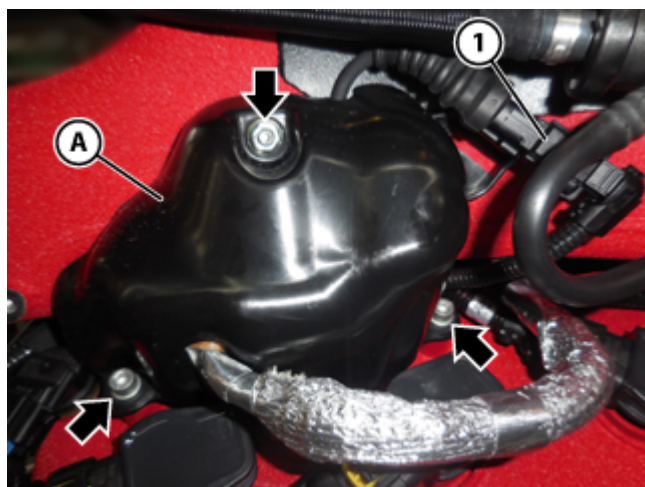


- Fit the soundproofing cover (A).
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Fasten the connector (1) to the respective bracket.

Exhaust, right hand cylinder bank

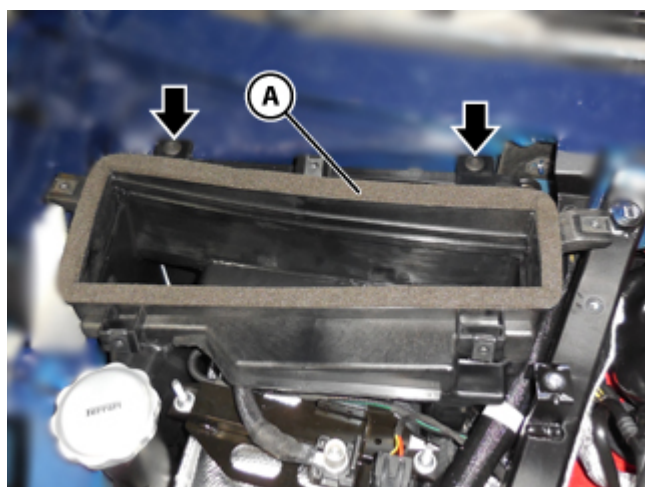

- Undo the screws indicated.
- Remove the duct (A).

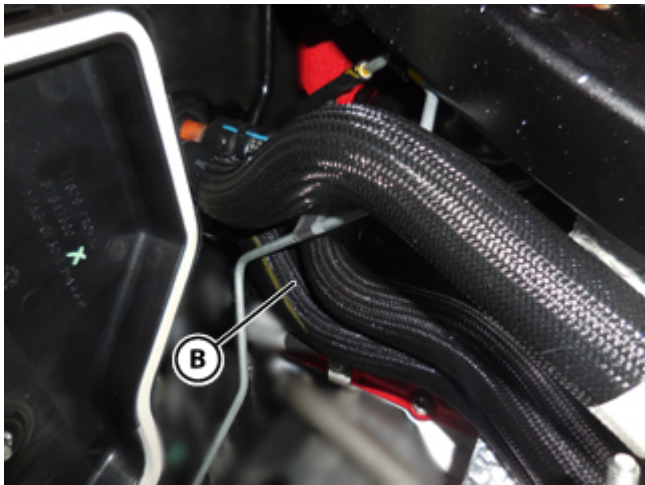


- Move the pipe **(B)** out of the way as far as possible.




- Disconnect the connector **(1)**.
- Undo the indicated screw.
- Remove the sensor **(C)** and replace.
- Fit the new sensor **(C)**, orienting correctly.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	A

- Connect the connector **(1)**.

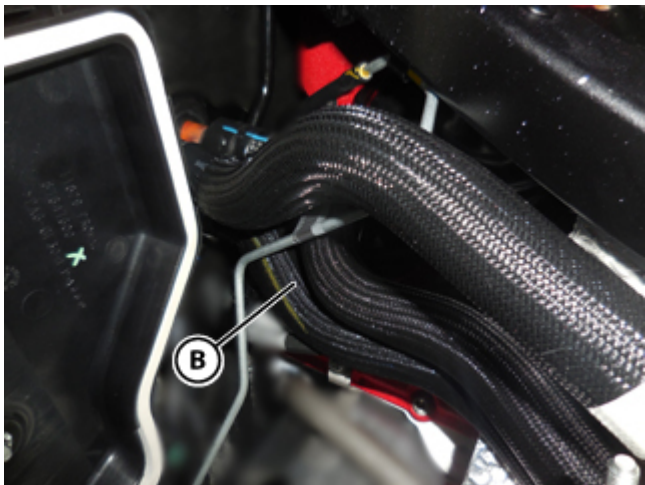

- Fit the pipe **(B)**.

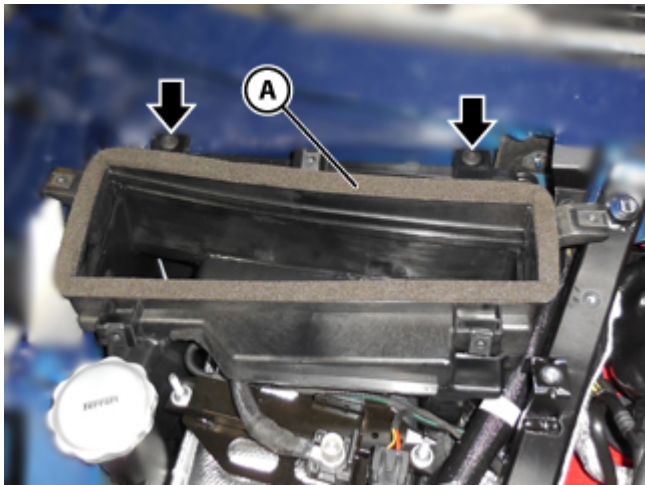


- Fit the duct (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Check the engine cooling system fluid level ( A3.07).

Intake, left hand cylinder bank

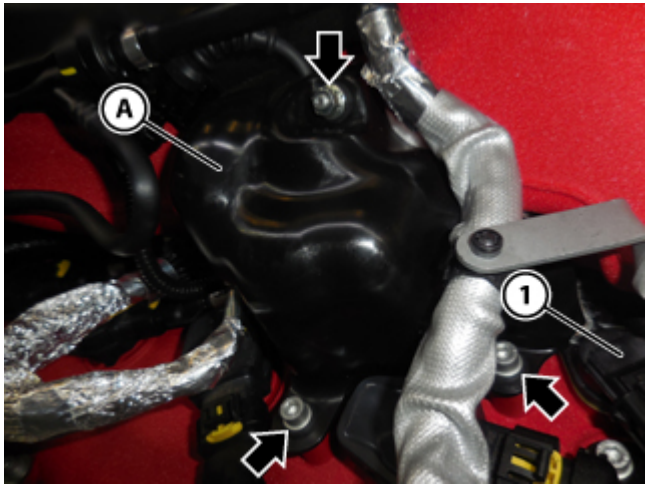


- Detach the connector (1) from the respective bracket.
- Undo the screws indicated.
- Remove the soundproofing cover (A).



- Disconnect the connector (2).
- Undo the indicated screw.
- Remove the sensor (B) and replace.
- Fit the new sensor (B), orienting correctly.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	A

- Connect the connector (2).

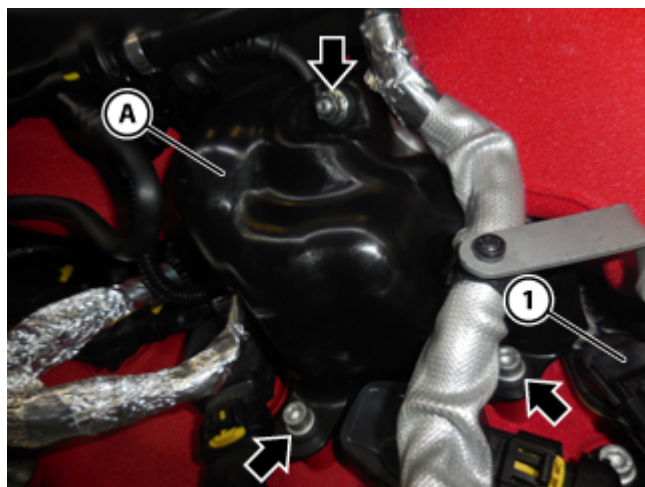


- Fit the soundproofing cover (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Fasten the connector (1) to the respective bracket.

Exhaust, left hand cylinder bank

- Remove the windscreen wiper unit ( E3.10).

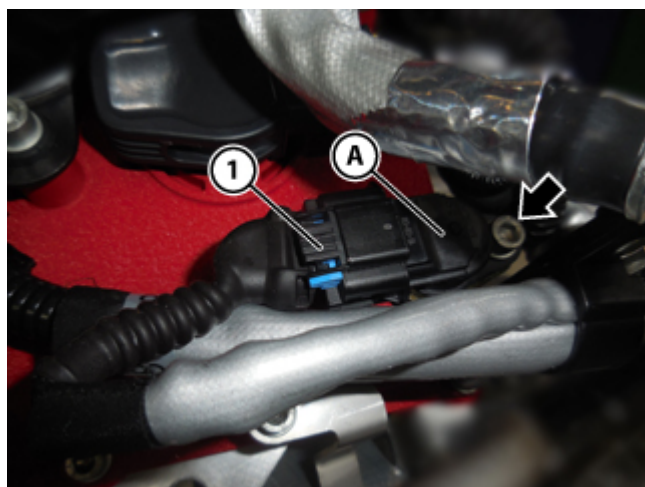

- Disconnect the connector (1).
- Undo the indicated screw.
- Remove the sensor (A) and replace.
- Fit the new sensor (A), orienting correctly.
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	A

- Connect the connector (1).

- Refit the windscreen wiper unit ( E3.10).

➤ Refit the engine compartment cosmetic shields ( E3.14).

 Refit the lateral underwindscreen cosmetic shields.

➤ Connect the battery ( F2.01).