



GTC4Lusso USA - RPM sensor - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.03 RPM sensor

Replacing the RPM sensor

			
Tightening torque		Nm	Class
Fastening RPM sensor	Sensor	8 Nm	A

- Disconnect the battery ( F2.01).
- Remove the transmission housing ( C5.03).

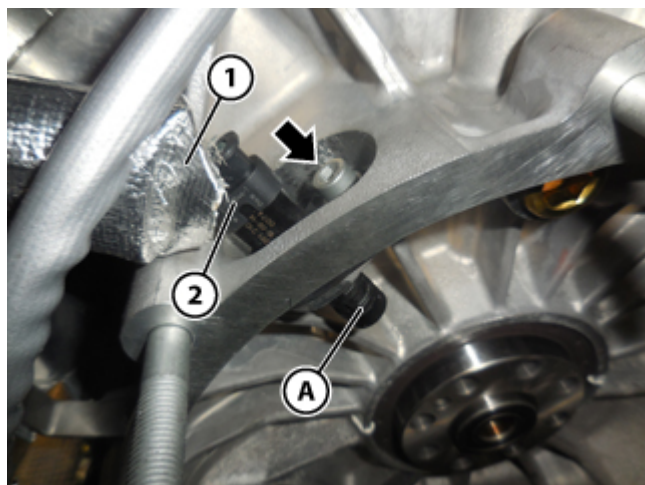

- Lift the heat shield (1).
- Disconnect the connector (2).
- Undo the indicated screw.
- Remove the angular speed sensor (A) and replace.
- Fit the new angular speed sensor (A).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Sensor	8 Nm	A

- Connect the connector (2).
- Fit the heat shield (1).

- Refit the transmission housing ( C5.03).
- Connect the battery ( F2.01).

