



GTC4Lusso USA - Engine coolant temperature sensors - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.04 Engine coolant temperature sensors

Replacing the coolant temperature sensor on the pressure switch/thermostat

- Disconnect the battery ( F2.01).
- Remove the flat undertray sections ( E3.13).
-  Remove the front flat undertray section.

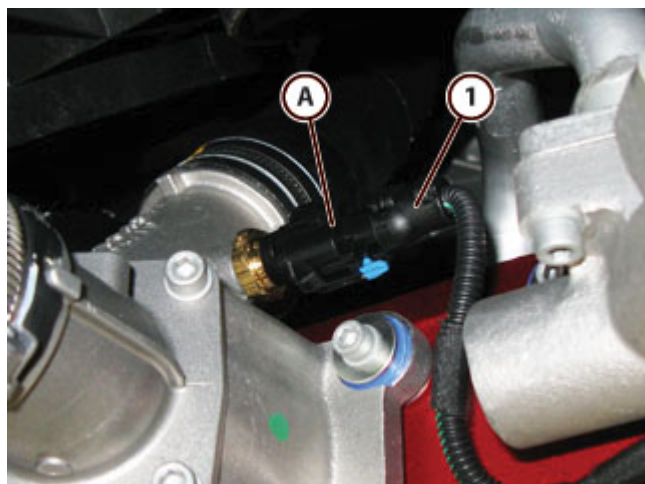


- Disconnect the connector (1).
- Unscrew and remove the coolant temperature sensor (A), plugging the orifice immediately to prevent leakage.
- Remove the plug and screw in the coolant temperature sensor (A), replacing the relative seal.
- Connect the connector (1).

- Check the engine cooling system fluid level ( A3.07).
- Refit the flat undertray sections ( E3.13).
- Connect the battery ( F2.01).

Replacing the coolant temperature sensor on the radiator

- Disconnect the battery ( F2.01).
- Remove the flat undertray sections ( E3.13).
-  Remove the front flat undertray section.

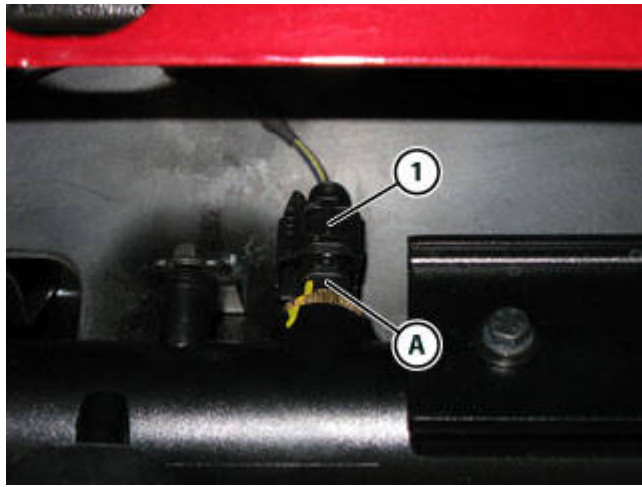

- Disconnect the connector **(1)**.
- Unscrew and remove the coolant temperature sensor **(A)**, plugging the orifice immediately to prevent leakage.
- Remove the plug and screw in the coolant temperature sensor **(A)**, replacing the relative seal.
- Connect the connector **(1)**.

- Check the engine cooling system fluid level (🔧 A3.07).
- Refit the flat undertray sections (🔧 E3.13).
- Connect the battery (🔧 F2.01).