



GTC4Lusso USA - Engine oil temperature sensor - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F3.05 Engine oil temperature sensor

Replacing the engine oil temperature sensor

			
Tightening torque		Nm	Class
Fastening engine oil temperature sensor	Sensor	16 Nm	B
Fastening engine oil tank drain plug	Plug	50 Nm	B

 Pour the oil drained from the system into a container and seal it. DO NOT dispose of used oil in the environment.

- Disconnect the battery ( F2.01).
- Remove the flat undertray sections ( E3.13).
-  Remove the central flat undertray section.

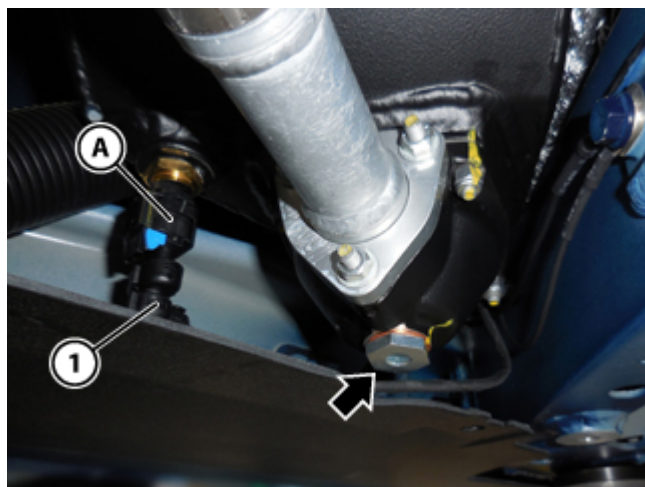

- Place a container for collecting oil under the engine oil tank.
- Unscrew the indicated plug.
- Wait for the oil to drain completely.
- Disconnect the connector (1).
- Unscrew the engine oil temperature sensor (A) and replace.
- Tighten the new engine oil temperature sensor (A).

		
Tightening torque	Nm	Class
Sensor	16 Nm	B

- Connect the connector (1).
- Tighten the indicated plug.

		
Tightening torque	Nm	Class
Plug	50 Nm	B

- Refit the flat undertray sections ( E3.13).
- Refit the central flat undertray section.
- Connect the battery ( F2.01).
- Fill the engine lubrication system ( A3.01).