



GTC4Lusso USA - Engine oil pressure sensor - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.06 Engine oil pressure sensor

Replacing the engine oil pressure sensor

			
Tightening torque		Nm	Class
Fastening engine oil pressure sensor	Sensor	36 Nm	B

- Disconnect the battery ( F2.01).
- Remove the transmission housing ( C5.03).

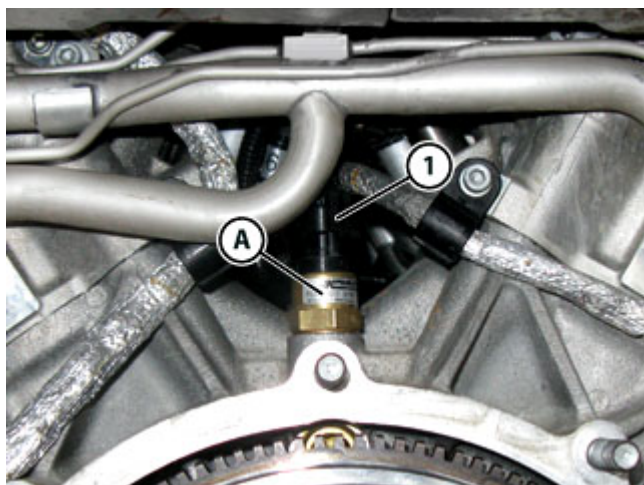

- Disconnect the connector (1).
- Unscrew the engine oil pressure sensor (A) and replace.
- Plug the seat of the engine oil pressure sensor (A) to prevent engine oil spillage.
- Replace the respective O-ring and tighten the engine oil pressure sensor (A).

		
Tightening torque	Nm	Class
Sensor	36 Nm	B

- Connect the connector (1).

- Refit the transmission housing ( C5.03).
- Connect the battery ( F2.01).
- Check the engine lubrication oil level ( A3.01).
- Perform in the case of engine oil spillage.

