



GTC4Lusso USA - Variable timing adjuster control solenoid valves - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.07 Variable timing adjuster control solenoid valves

Applying UNIFLOR 8917 grease to variable timing adjuster control solenoid valve connectors



In the event of a variable timing adjuster actuator solenoid valve malfunction, before replacing the component, perform the procedure "Applying UNIFLOR 8917 grease to variable timing adjuster actuator solenoid valve connectors" and check if normal function is restored.

If the fault persists, the variable timing adjuster control solenoid valve must be replaced.


The following procedure must be performed whenever replacing a variable timing adjuster control solenoid valve and, therefore, whenever the relative connector is disconnected.

➤ Disconnect the battery ( F2.01).



DO not use blunt objects to disconnect the connectors.

- Disconnect the connectors (1).

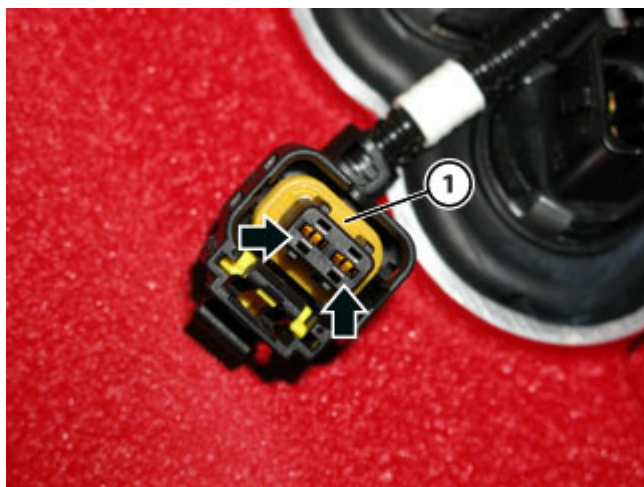

- Apply **UNIFLOR 8917 Code 70001410** grease at the indicated points on the connectors (wiring harness side).



- Connect the connectors (1).

➤ Connect the battery (🔌 F2.01).

Replacing the variable timing adjuster control solenoid valves


			
Tightening torque		Nm	Class
Fastening variable timing adjuster solenoid valve	Screw	6 Nm	B



In the event of a variable timing adjuster actuator solenoid valve malfunction, before replacing the component, perform the procedure "Applying UNIFLOR 8917 grease to variable timing adjuster actuator solenoid valve connectors" and check if normal function is restored.

If the fault persists, the variable timing adjuster control solenoid valve must be replaced.


- Disconnect the battery (🔌 F2.01).
- Remove the head covers (🔌 B2.03).

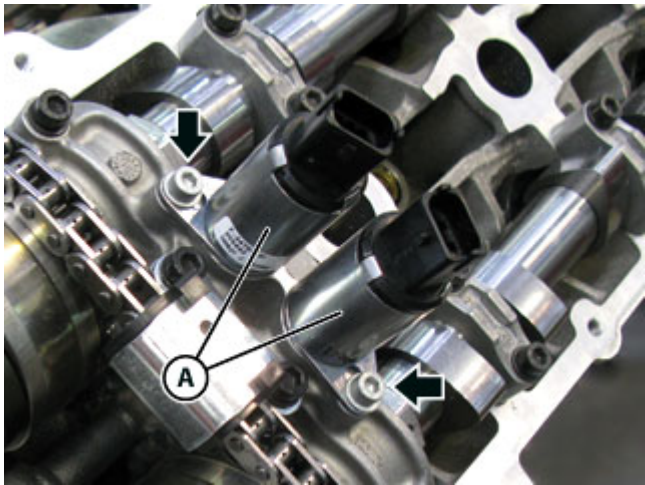

- Undo the screws indicated.
- Remove the variable timing adjuster actuator solenoid valves (A) and replace.



- Lubricate the front cap seats and the variable timing adjuster solenoid valve seal (1) with the prescribed engine oil.

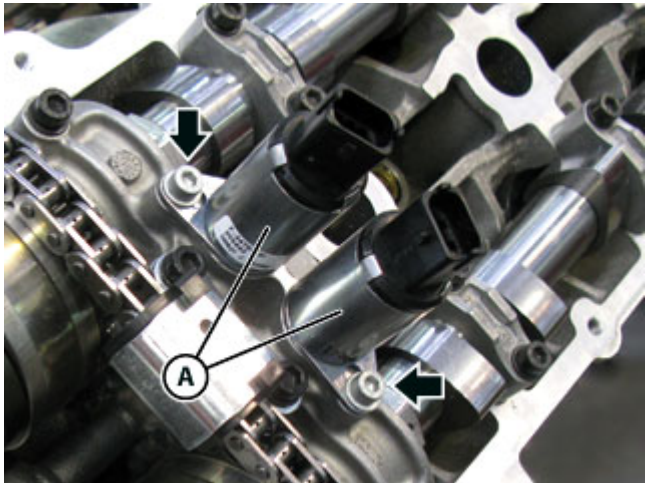

- Install the variable timing adjuster actuator solenoid valves (A) in the respective seats
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	6 Nm	B

- Refit the head covers ( B2.05).
- Connect the battery ( F2.01).