



GTC4Lusso USA - Air flow meters - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.08 Air flow meters


Removing the air flow meters

➤ Disconnect the battery ( F2.01).

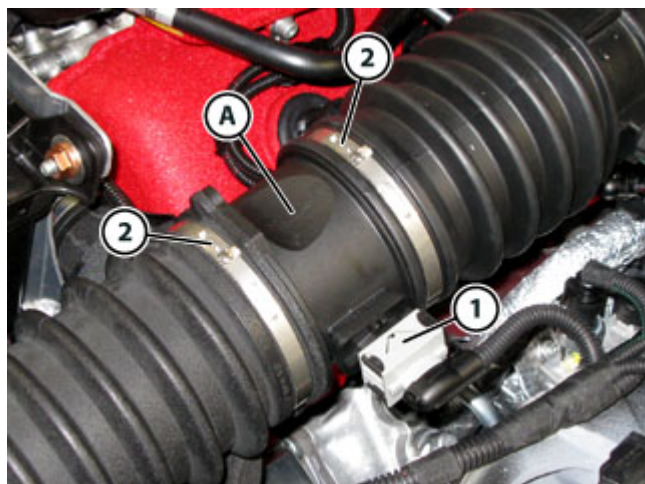

- Disconnect the connector (1).
- Remove the clamps (2).
- Disconnect and remove the air flow meter (A).

Refitting the air flow meters

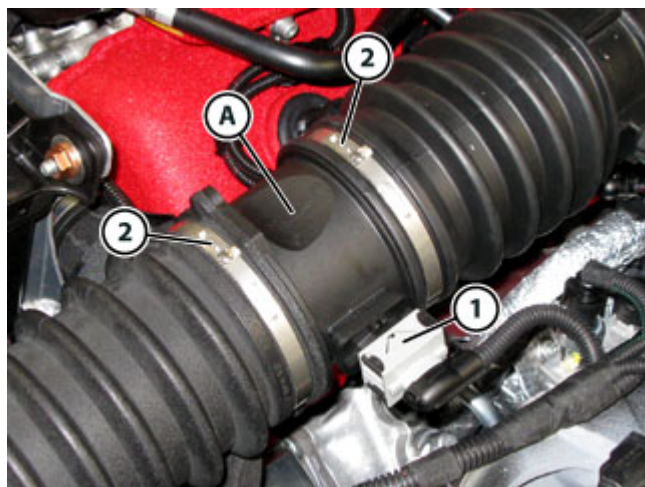

- Fit and connect the air flow meter **(A)**, orienting correctly
- The correct orientation of the air flow meter **(A)** is indicated by the arrow on the component itself.
- Fit and tighten new clamps **(2)**.
- Connect the connector **(1)**.

- Connect the battery (🔧 F2.01).
- Connect the DEIS tester to the diagnostic socket (🔧 F2.09).
- Perform the respective cycle with the DEIS diagnostic tester.