



GTC4Lusso USA - Motorised throttle bodies - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.


Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.09 Motorised throttle bodies

Removing the motorised throttle bodies


➤ Disconnect the battery ( F2.01).

Right hand motorised throttle body

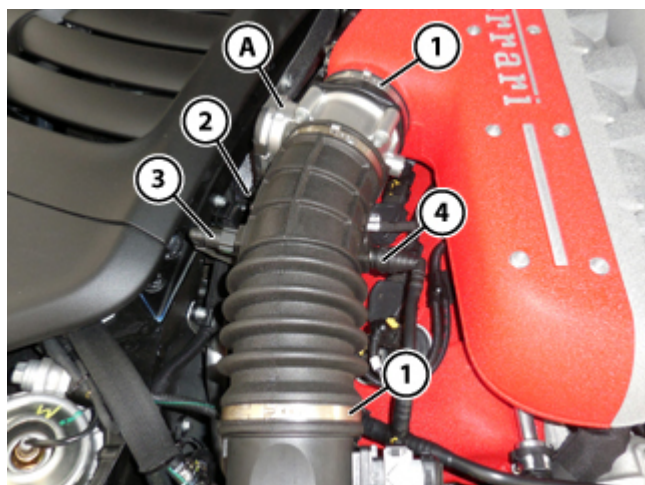

- Remove the collars (1).
- Disconnect the connector (2).
- Disconnect the quick connector pipe (3).
- Disconnect the quick connector pipe (4).
- Disconnect and remove the motorised throttle body (A) complete with bellow.

Left hand motorised throttle body

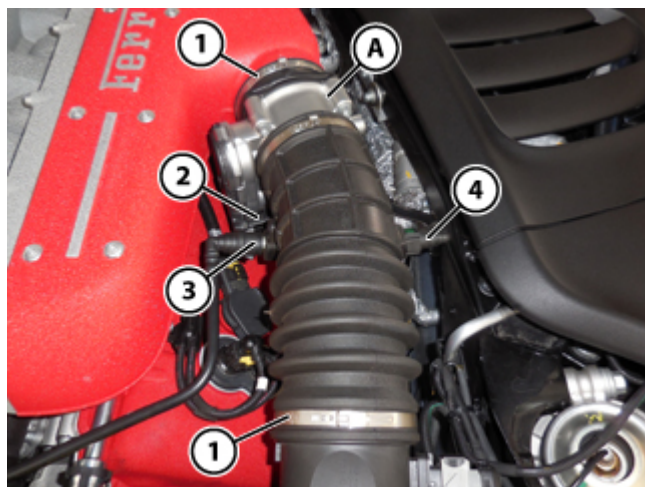


- Remove the collars (1).
- Disconnect the connector (2).
- Disconnect the quick connector pipe (3).
- Disconnect the quick connector pipe (4).
- Disconnect and remove the motorised throttle body (A) complete with bellow.

Refitting the motorised throttle bodies

Right hand motorised throttle body




- Fit and connect the motorised throttle body (A) complete with bellow.
- Check that the indicated references on the motorised throttle body (A) and intake plenum (B) are correctly aligned.

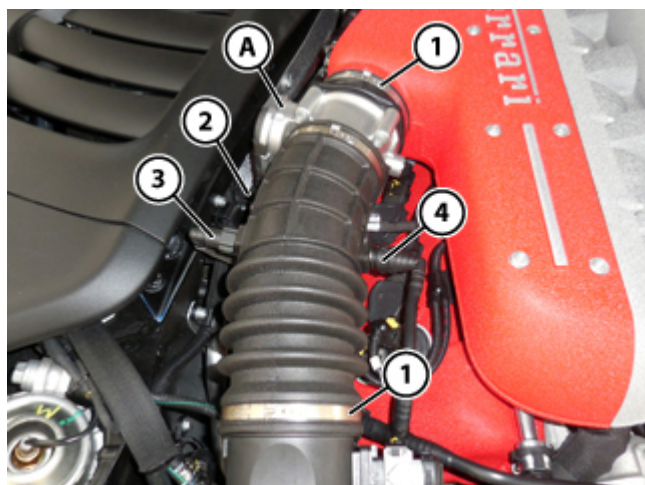


- Connect the quick connector pipe (4).
- Connect the quick connector pipe (3).
- Connect the connector (2).
- Fit and tighten new collars (1).

Left hand motorised throttle body

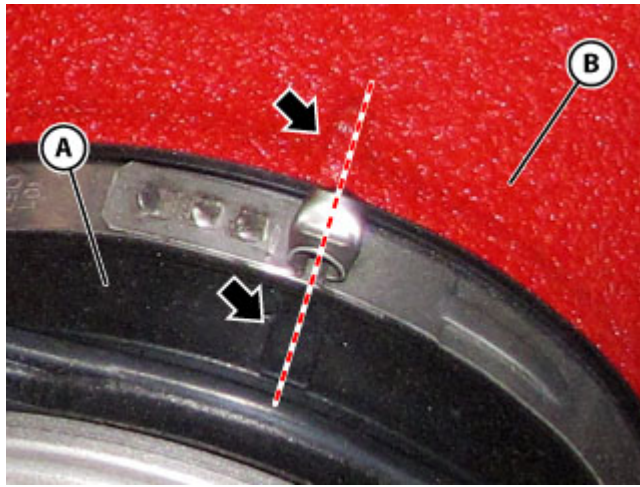

- Fit and connect the motorised throttle body (A) complete with bellow.
- Check that the indicated references on the motorised throttle body (A) and intake plenum (B) are correctly aligned.

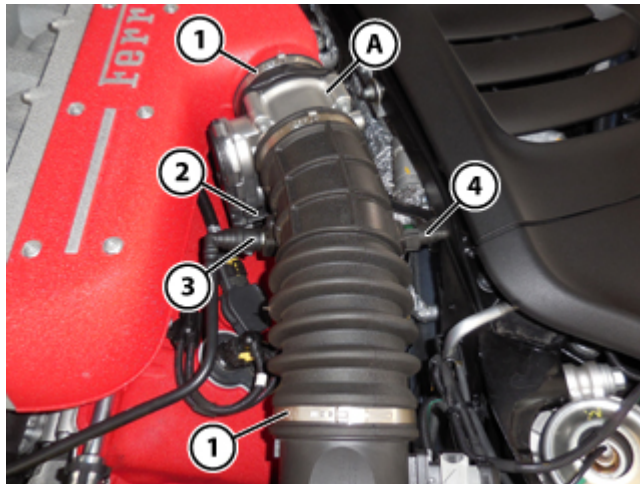

- Connect the quick connector pipe (4).
- Connect the quick connector pipe (3).
- Connect the connector (2).
- Fit and tighten new collars (1).

➤ Connect the battery (🔌 F2.01).

➤ In case of replacement only. Connect the DEIS tester to the diagnostic socket (🔌 F2.09).

🔧 Perform the respective cycle with the DEIS diagnostic tester.