



GTC4Lusso USA - Evaporative emissions control system solenoid valves - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


## F3.11 Evaporative emissions control system solenoid valves

### Replacing the evaporative emissions control system solenoid valve

There are two valves. The left hand valve is located in front of the ABS ECU, the right hand valve is located above the TKG valves.

The following procedure is for replacing the left hand evaporative emissions control system solenoid valve. Use the same procedure for the right hand valve.

- Disconnect the battery (  F2.01).
- Remove the engine compartment cosmetic shields (  E3.14).
- Remove lateral cosmetic shields.

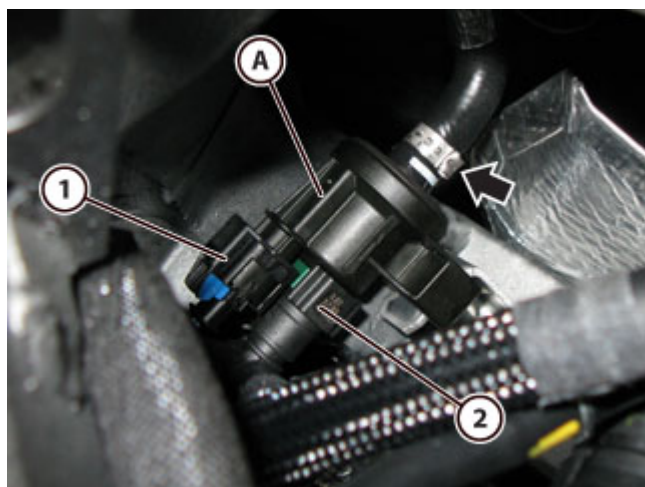

- Disconnect the connector (1).
- Disconnect the union (2) from the evaporative emissions control system solenoid valve (A) and remove the indicated clamp.
- Remove the evaporative emissions control system solenoid valve (A) from its mounting bracket and replace.
- Fit the evaporative emissions control system solenoid valve (A) as originally installed.
- Fit the solenoid valve in the relative retainer bracket, connect the union (2) and fasten the respective pipe, fitting and tightening a new clamp as indicated.
- Connect the connector (1).

- Connect the battery (  F2.01).
- Refit the engine compartment cosmetic shields (  E3.14).
- Connect the DEIS tester to the diagnostic socket (  F2.09).
- Perform the respective cycle with the DEIS diagnostic tester.

