




GTC4Lusso USA - Secondary air system - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F3.12 Secondary air system


Secondary air system layout

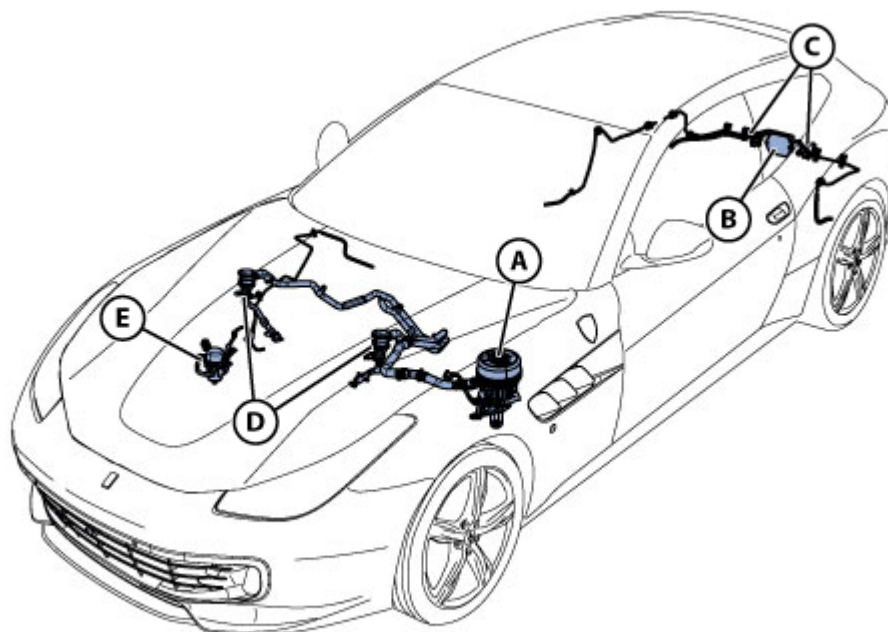

- A** - Secondary air pump
- B** - Vacuum accumulator tank
- C** - Pneumatic actuator system ON/OFF solenoid valves
- D** - Secondary air valves
- E** - Vacuum pump

Removing the secondary air pump


- Disconnect the battery ( F2.01).
- Remove the engine compartment cosmetic shields ( E3.14).
 -  Remove the left hand lateral cosmetic shield.
- Remove the front wheelhouses ( E3.05).
 -  Remove the rear element of the front left hand wheelhouse.

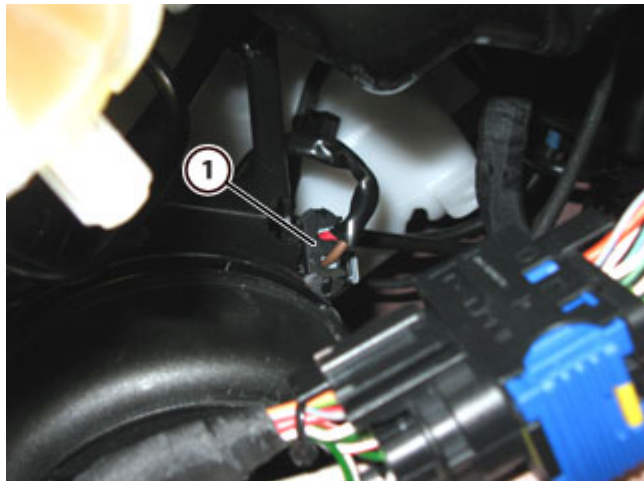

- Disconnect the connector **(1)**.




- Undo the indicated nut.

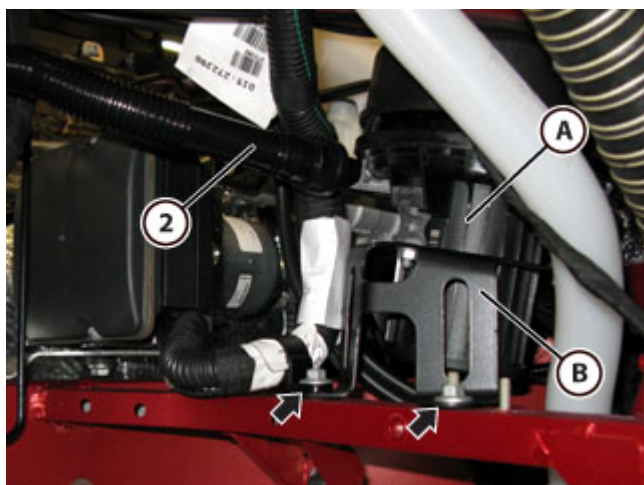

- Undo the nuts indicated.
- Disconnect the pipe **(2)**, detaching the respective quick release coupling.
- Remove the secondary air pump **(A)** complete with bracket **(B)**.

Refitting the secondary air pump

			
Tightening torque		Nm	Class
Fastening secondary air pump bracket to chassis	Screw	9 Nm	B

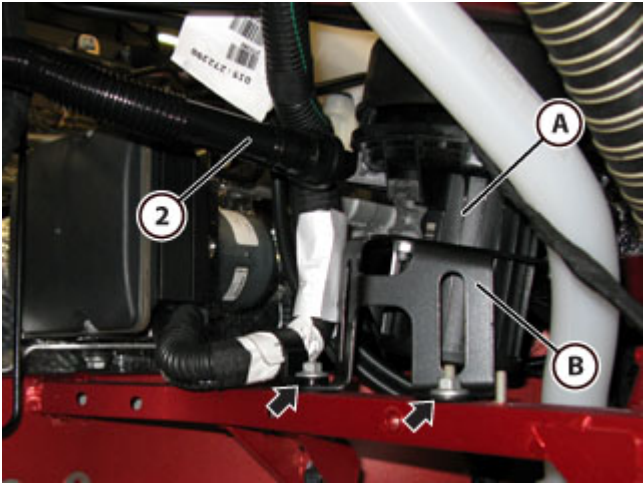


- Fit the secondary air pump (A) complete with bracket (B).
- Connect the pipe (2), connecting the respective quick release coupling.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B



- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

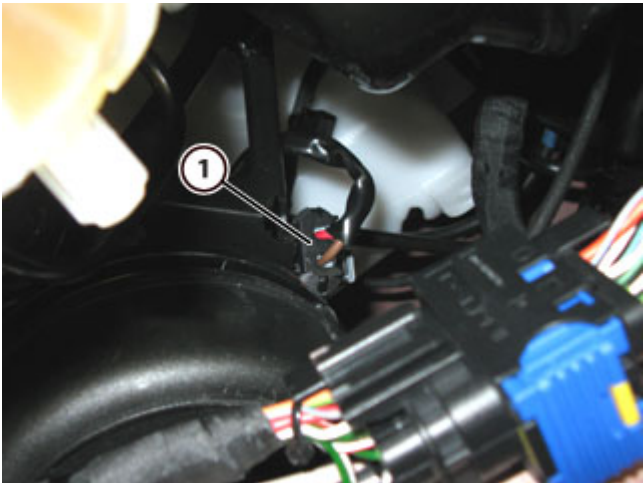

- Connect the connector (1).

- Refit the front wheelhouses ( E3.05).
- Refit the rear element of the front left hand wheelhouse.
- Refit the engine compartment cosmetic shields ( E3.14).


 Refit the left hand lateral cosmetic shield.

Replacing the accumulator tanks

			
Tightening torque		Nm	Class
Fastening rear secondary air accumulator tank to chassis	Nut	4 Nm	B

Front tank

- Remove the front wheelhouses ( E3.05).
-  Remove the rear element of the front right hand wheelhouse.

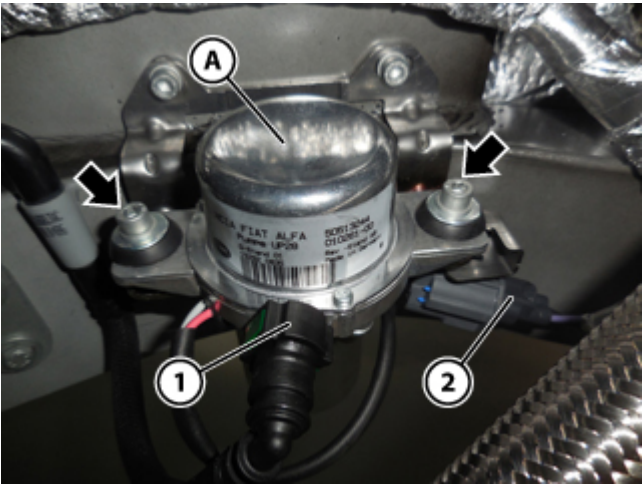


- Disconnect the connector (1).
- Disconnect the connector (2).
- Undo the screws indicated.
- Remove the front accumulator tank (A) and replace.
- Fit the new front accumulator tank (A).
- Tighten the screws indicated.
- Connect the connector (1).
- Connect the connector (2).

- Refit the front wheelhouses ( E3.05).
-  Refit the rear element of the front right hand wheelhouse.

Rear tank

- Remove the rear bumper ( E3.04).

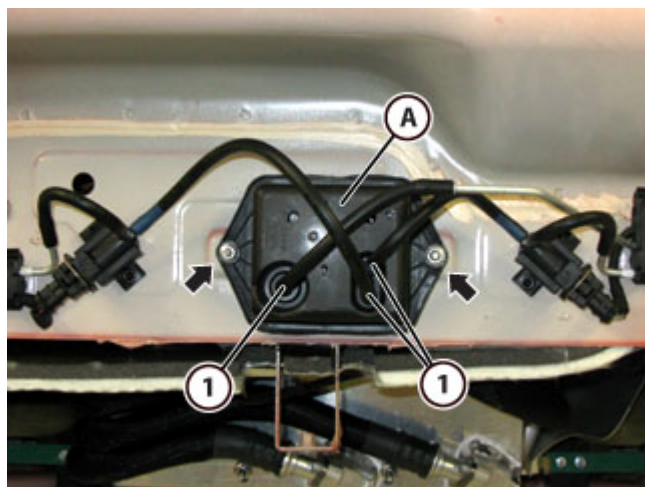

- Disconnect the pipes (1).
- Undo the nuts indicated.
- Remove the rear accumulator tank (A) and replace.
- Fit the new rear accumulator tank (A).
- Tighten the nuts indicated.



Tightening torque	Nm	Class
Nut	4 Nm	B

- Connect the pipes (1).

- Refit the rear bumper (E3.04).


Replacing the solenoid valves



Tightening torque		Nm	Class
Fastening rear solenoid valves to chassis	Screw	4 Nm	B

Rear solenoid valve

- Disconnect the battery (F2.01).
- Remove the rear bumper (E3.04).

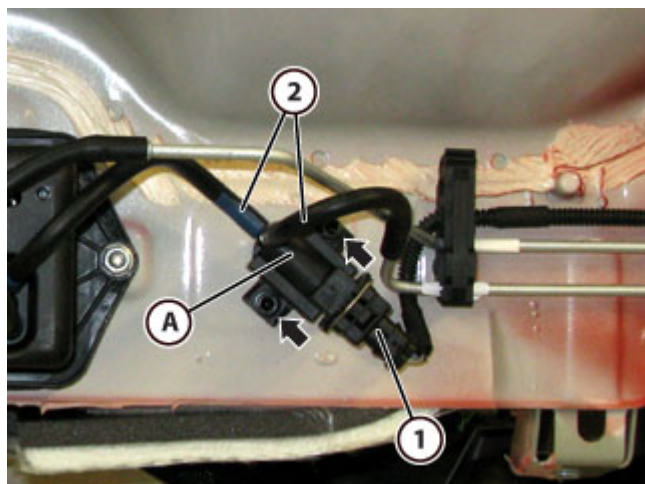

- Disconnect the pipes (1).
- Undo the screws indicated.
- Remove the rear solenoid valve (A) and replace.
- Fit the new rear solenoid valve (A).
- Tighten the screws indicated.



Tightening torque	Nm	Class
Screw	4 Nm	B

- Connect the pipes (1).


- Remove the rear bumper (E3.04).
- Connect the battery (F2.01).

Replacing the secondary air valves

			
Tightening torque		Nm	Class
Fastening secondary air valves	Screw	10 Nm	B

- Remove the engine compartment cosmetic shields ( E3.14).
 - Remove lateral cosmetic shields.
- Remove the engine compartment diagonal braces ( E2.04).

Right hand valve

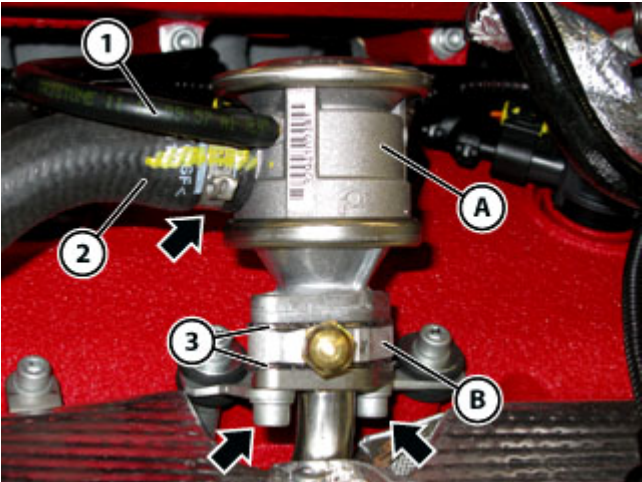


- Disconnect the pipe (1).
- Disconnect the pipe (2), removing the respective collar indicated.
- Undo the screws indicated.
- Remove the valve (A) and replace.
- Remove the spacer (B) and replace the gaskets (3).
- Fit the spacer (B) with new gaskets (3).
- Fit the new valve (A).
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	10 Nm	B

- Connect the pipe (2) fitting and tightening the respective collar indicated.
- Connect pipe (1).

Left hand valve

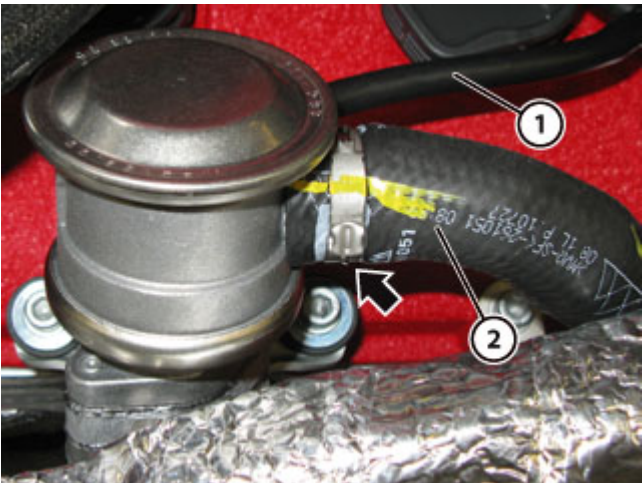


- Disconnect the pipe (1).
- Disconnect the pipe (2), removing the respective collar indicated.

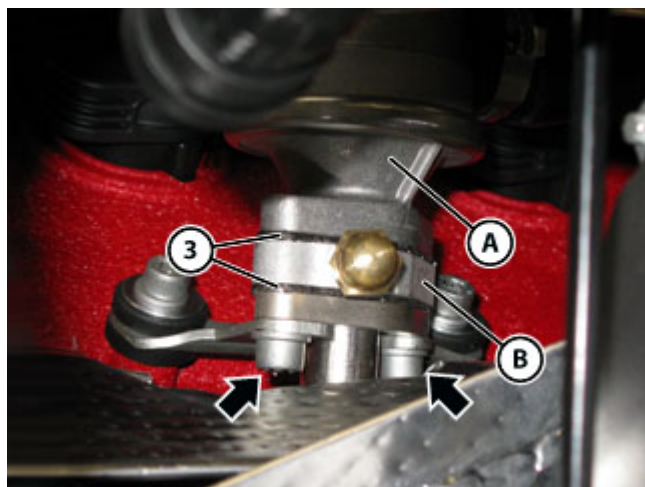

- Undo the screws indicated.
- Remove the valve (**A**) and replace.
- Fit the spacer (**B**) with new gaskets (**3**).
- Fit the new valve (**A**).
- Tighten the screws indicated.



Tightening torque	Nm	Class
Screw	10 Nm	B

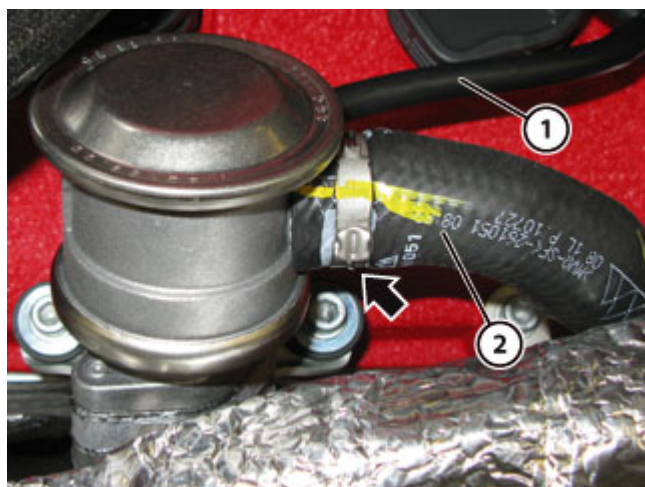

- Connect the pipe (**2**) fitting and tightening the respective collar indicated.
- Connect pipe (**1**).

- Refit the engine compartment diagonal braces (🔧 E2.04).
- Refit the engine compartment cosmetic shields (🔧 E3.14).
- Refit the lateral cosmetic shields.