



GTC4Lusso USA - Ignition coils - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F3.13 Ignition coils

Removing the ignition coils


- Disconnect the battery ( F2.01).
- Remove the motorised throttle bodies ( F3.09).
- Remove the windscreen wiper unit ( E3.10).

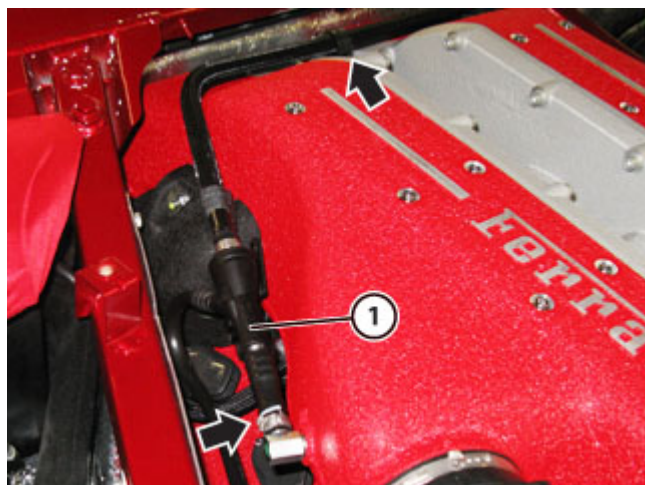


- Detach the vacuum pipe (1) from the engine, removing the indicated clamps.
- Repeat the procedure on the left side of the plenum.

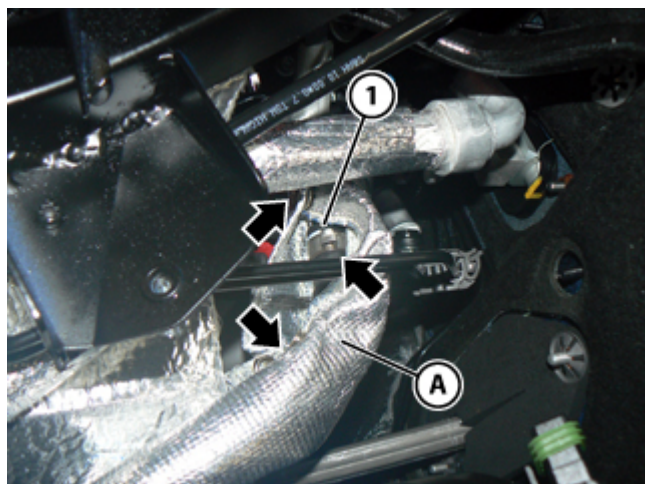

- Open the indicated clips and remove the heat shield (A).
- Remove the vacuum pipe (1), loosening the indicated collar.

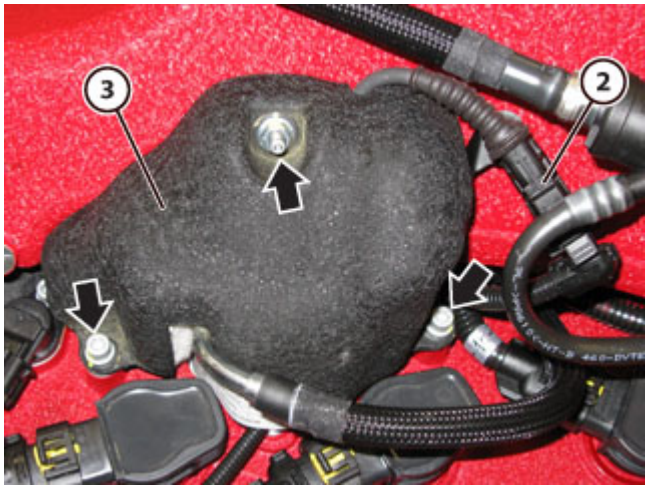

- Detach the connector **(2)** from the mounting bracket.
- Remove the cover **(3)** by undoing the indicated screws.
- i* Repeat the procedure on the left hand side of the plenum.
- i* Note that the photo was taken on the workbench to illustrate the operation more clearly.

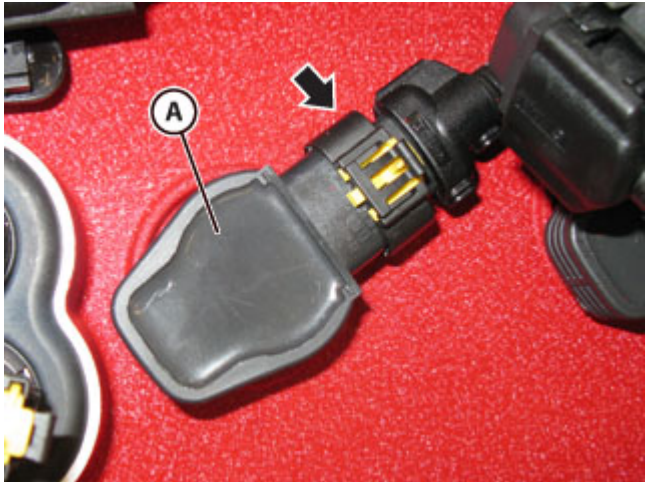


- Disconnect the indicated connectors.
- Remove the ignition coils **(A)**.


Refitting the ignition coils

			
Tightening torque		Nm	Class
Fastening GDI injection pump soundproofing cover	Screw	10 Nm	B

- When refitting the original coils, clean with compressed air to remove any dirt.

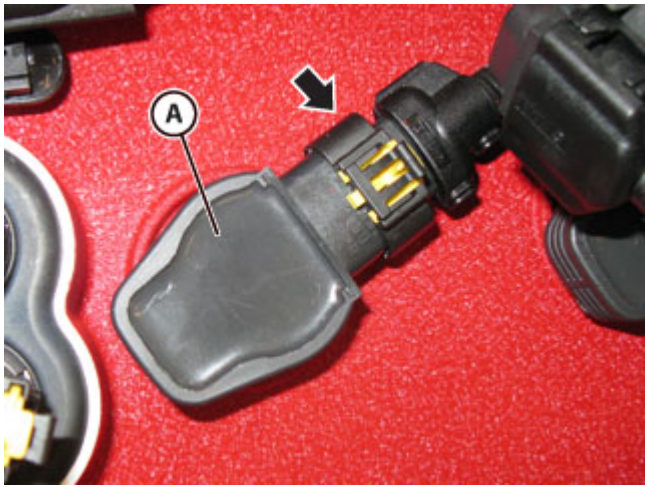


- Check that the seats of the coils are clean.
- Fit the coils **(A)**, orienting correctly.
- Fasten the coils **(A)**, pressing manually until they snap audibly into place.
- Check that the coils are fastened correctly.
- Connect the indicated connectors.

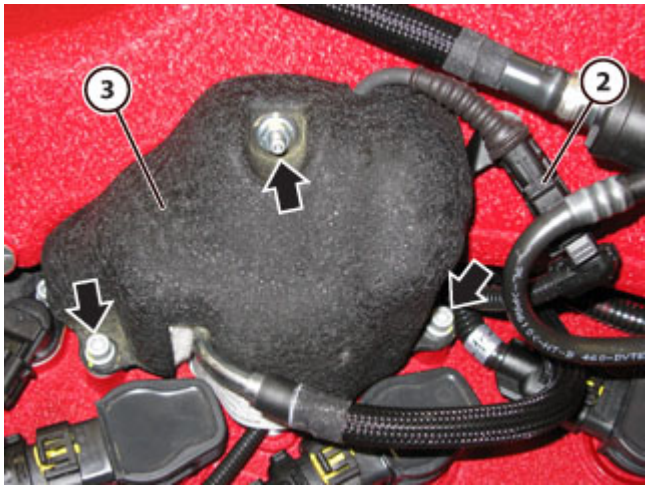


- Fasten the cover **(3)**, tightening the indicated screws.
- Repeat the procedure on the left hand side of the plenum.
- Note that the photo was taken on the workbench to illustrate the operation more clearly.

		
Tightening torque	Nm	Class
Screw	10 Nm	B

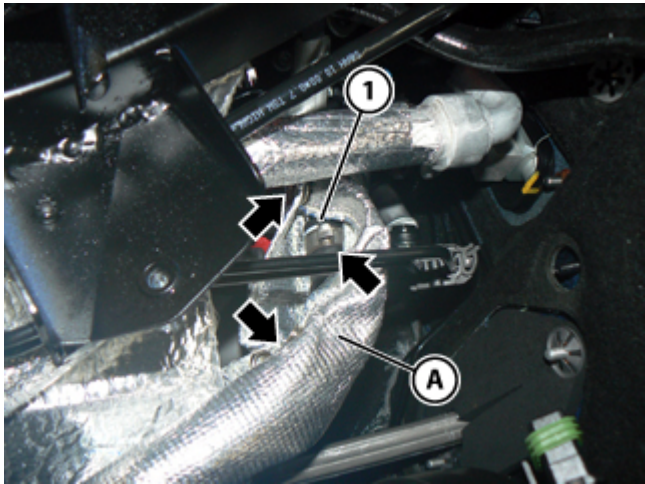

- Fasten the connector **(2)** to the mounting bracket.
- Fit the vacuum pipe **(1)** in the relative seat on the engine.
- Connect the vacuum pipe **(1)**, fitting and tightening the collar indicated.
- Fit and fasten the heat shield **(A)**, fastening the indicated clips.

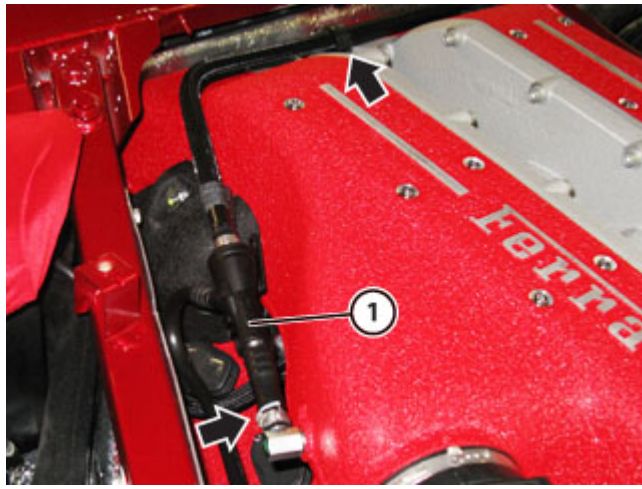

- Fasten the vacuum pipe **(1)** to the engine, securing with the indicated clamps.
- i* Repeat the procedure on the left side of the plenum.

- Refit the windscreen wiper unit ( E3.10).
- Refit the motorised throttle bodies ( F3.09).
- Connect the battery ( F2.01).