




GTC4Lusso USA - Alarm system - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F4.01 Alarm system

Anti-theft system layout

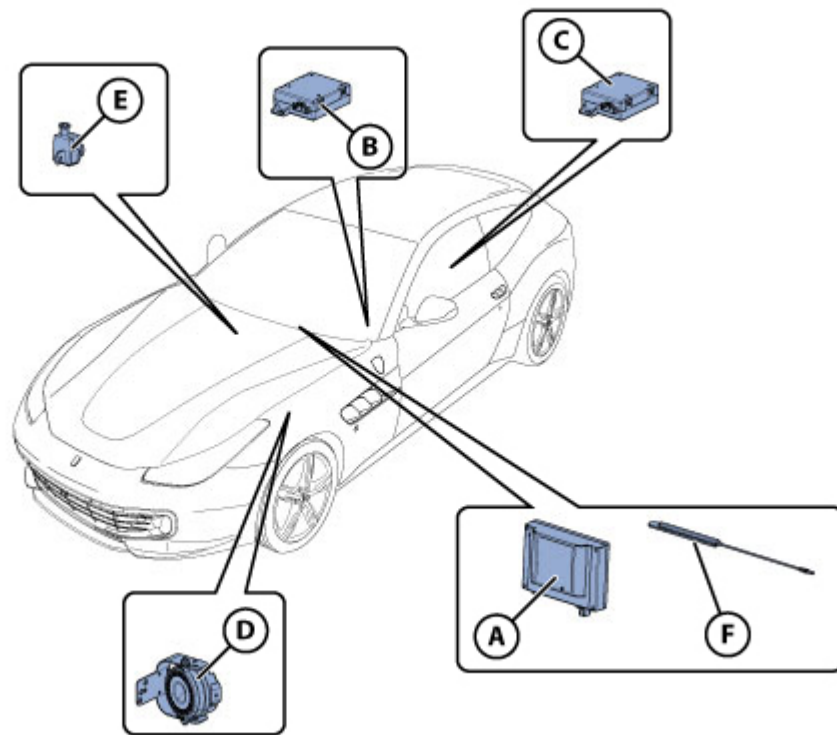


- A** - Satellite alarm system ECU
- B** - Anti-lift sensors
- C** - Anti-theft system sensor
- D** - Siren
- E** - Infoled
- F** - GSM antenna

Replacing the anti-theft siren

			
Tightening torque		Nm	Class
Fastening anti-theft siren	Nut	8 Nm	B

- Disconnect the battery ( F2.01).
- Remove the front wheelhouses ( E3.05).
-  Remove the front left hand wheelhouse.

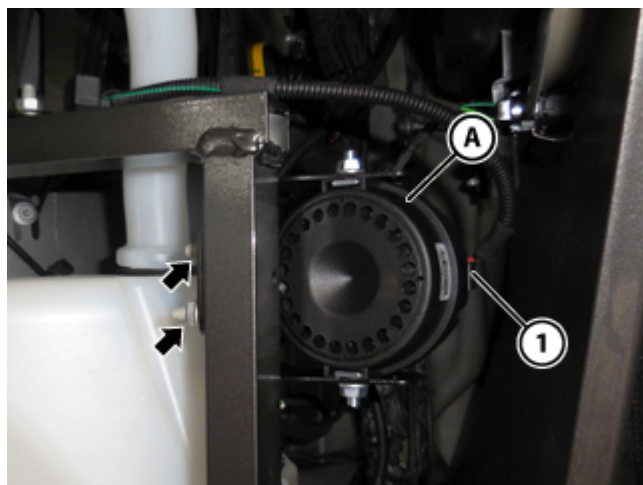

- Disconnect the connector (1).
- Undo the nuts indicated.
- Remove the antitheft system siren (A), complete with bracket.
- Detach the antitheft system siren (A) from the bracket and replace.
- Fit the new antitheft system siren (A) on the bracket.
- Fit the antitheft system siren (A), complete with bracket.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Nut	8 Nm	B

- Connect the connector (1).


- Refit the front wheelhouses ( E3.05).
-  Refit the front left hand wheelhouse.

- Connect the battery ( F2.01).

Replacing the anti-lift sensor

			
Tightening torque		Nm	Class
Fastening anti-lift sensor	Screw	4 Nm	B

- Disconnect the battery ( F2.01).
- Remove the centre tunnel console trim ( E4.03).

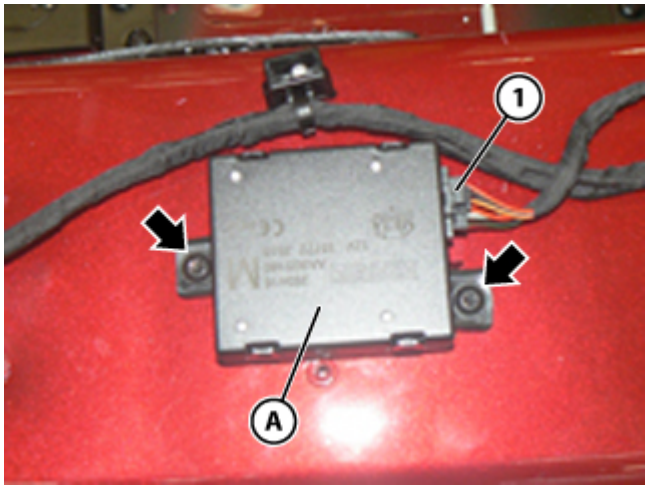

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the anti-lift sensor (A) and replace it.
- Fit the new anti-lift sensor (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B


- Connect the connector (1).

- Refit the centre tunnel console trim (E4.03).
- Connect the battery (F2.01).

Replacing the anti-theft system sensor

			
Tightening torque		Nm	Class
Fastening volumetric sensor	Nut	4 Nm	B

- Disconnect the battery (F2.01).
- Remove the centre tunnel console trim (E4.03).

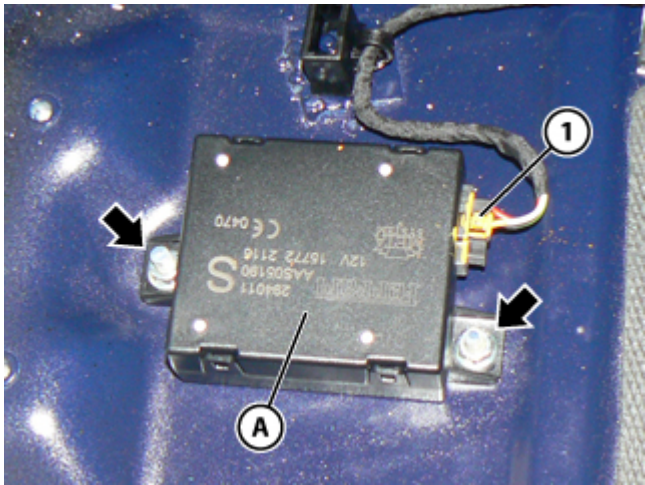

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the anti-theft system sensor (A) and replace.
- Fit the new anti-theft system sensor (A).
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	4 Nm	B

- Connect the connector (1).

- Refit the centre tunnel console trim (E4.03).
- Connect the battery (F2.01).