




GTC4Lusso USA - Airbag - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F4.02 Airbag

Airbag system layout

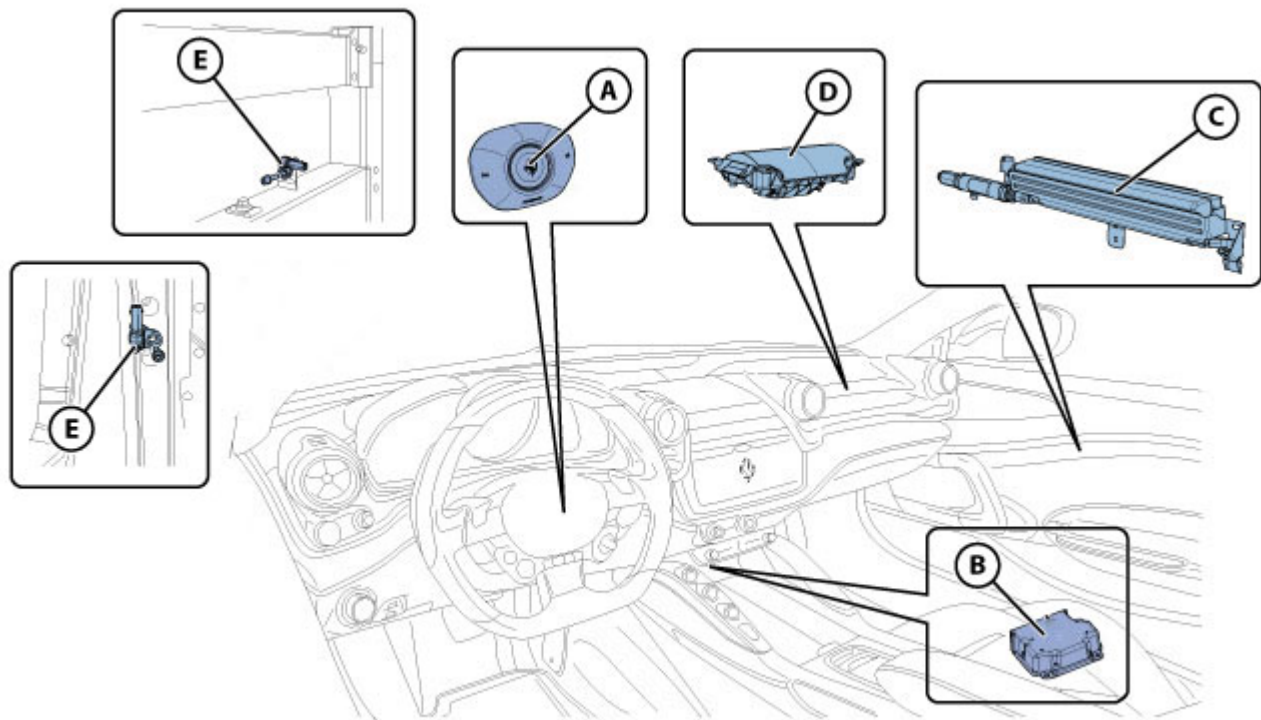

- A** - Driver side airbag module
- B** - ECU
- C** - Side airbag module
- D** - Passenger side airbag module
- E** - Lateral crash sensors

Removing the driver side airbag module



CAUTION

A damaged airbag module may cause severe or fatal injuries if activated.



After an accident causing airbag deployment, all the components of the system must be replaced (including wiring harnesses and connectors).

In the event of deployment of the driver side airbag, the complete steering wheel must also be replaced.

After an accident without airbag deployment, the components of the system (including wiring harnesses and connectors) must be checked and replaced if found to be bent, damaged or faulty.

Individual system components (including wiring harnesses and connectors) found to be damaged or faulty must be replaced. NEVER attempt to repair a damaged or faulty component.

If the vehicle has been stolen or the subject of an attempted theft, the components of the airbag system must be checked.


➤ Disconnect the battery ( F2.01).



- Remove the two rubber plugs (3).



- Insert and push the tips of two tools with cylindrical tips simultaneously into the holes (2) to detach the driver side airbag.

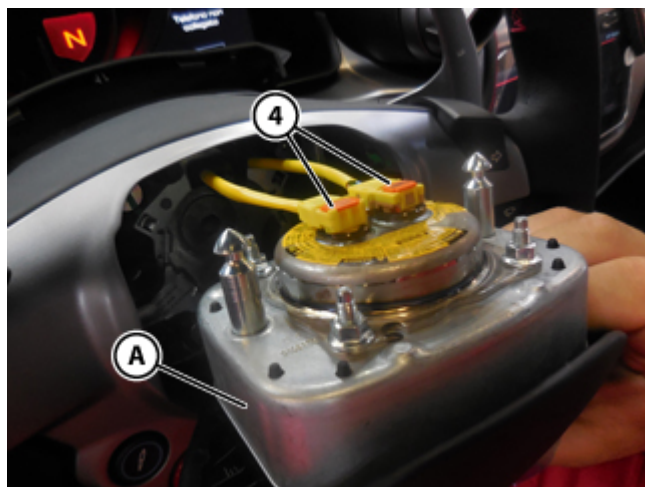

- Remove the driver side airbag module **(A)** from the steering wheel.



NEVER modify any of the individual components of the system.

NEVER cut or tamper with the connectors between the wiring harness and the airbag modules.

Any inappropriate work carried out on the components of the system may cause airbag system malfunctions, involuntary airbag activation or failure to deploy in the event of an accident, leading to damage and possibly fatal injury.

- Disconnect the two connectors **(4)**, prising open the two safety clips, and remove the driver side airbag module **(A)**.

Refitting the driver side airbag module



CAUTION

A damaged airbag module may cause severe or fatal injuries if activated.




After an accident causing airbag deployment, all the components of the system must be replaced (including wiring harnesses and connectors).

In the event of deployment of the driver side airbag, the complete steering wheel must also be replaced.

After an accident without airbag deployment, the components of the system (including wiring harnesses and connectors) must be checked and replaced if found to be bent, damaged or faulty. Individual system components (including wiring harnesses and connectors) found to be damaged or faulty must be replaced. NEVER attempt to repair a damaged or faulty component.

If the vehicle has been stolen or the subject of an attempted theft, the components of the airbag system must be checked.

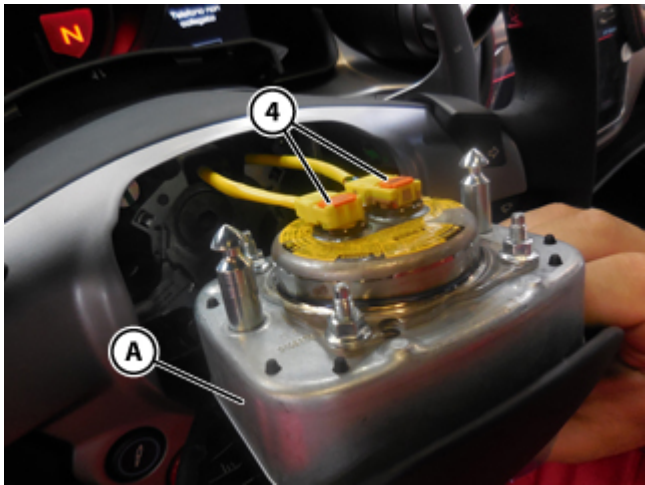

NEVER modify any of the individual components of the system.

NEVER cut or tamper with the connectors between the wiring harness and the airbag modules.

Any inappropriate work carried out on the components of the system may cause airbag system malfunctions, involuntary airbag activation or failure to deploy in the event of an accident, leading to damage and possibly fatal injury.

- Connect the two connectors (4) to the driver side airbag module and fasten the two safety clips.
- Fit the driver side airbag module (A) in its seat on the steering wheel, arranging the electrical wiring correctly.
- Press the driver side airbag (A) into place until it fits correctly into the retainer brackets.
- Fit the two rubber plugs (3) into their respective seats, pressing fully into place.



- Connect the battery (🔌 F2.01).
- Connect the DEIS tester to the diagnostic socket (🔌 F2.09).
- Perform the cycle "10 NAB Complete Cycle" with the DEIS tester.

Replacing the passenger side airbag

			
Tightening torque		Nm	Class
Fastening the passenger side airbag	Nut	8 Nm	B
Fastening the passenger side airbag mounting bracket	Screw	4 Nm	B
	Screw	8 Nm	B

**CAUTION**

A damaged airbag module may cause severe or fatal injuries if activated.



After an accident causing airbag deployment, all the components of the system must be replaced (including wiring harnesses and connectors).

In the event of deployment of the driver side airbag, the complete steering wheel must also be replaced.

After an accident without airbag deployment, the components of the system (including wiring harnesses and connectors) must be checked and replaced if found to be bent, damaged or faulty. Individual system components (including wiring harnesses and connectors) found to be damaged or faulty must be replaced. NEVER attempt to repair a damaged or faulty component.

If the vehicle has been stolen or the subject of an attempted theft, the components of the airbag system must be checked.




NEVER modify any of the individual components of the system.

NEVER cut or tamper with the connectors between the wiring harness and the airbag modules.

Any inappropriate work carried out on the components of the system may cause airbag system malfunctions, involuntary airbag activation or failure to deploy in the event of an accident, leading to damage and possibly fatal injury.


➤ Disconnect the battery ( F2.01).

➤ Remove the NIT ( E5.13).

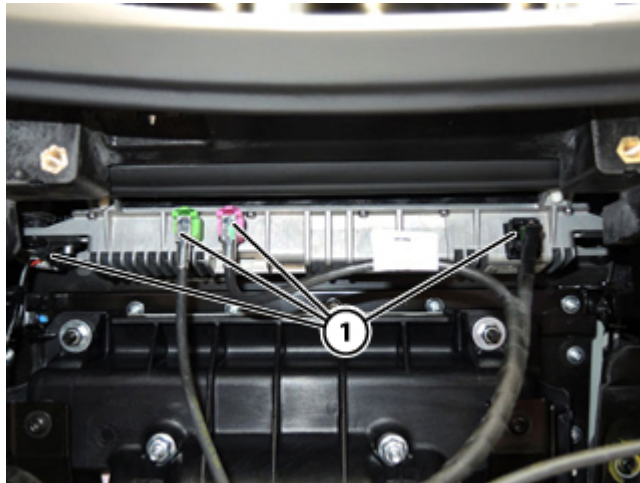


For vehicles with passenger display


- Disconnect the connectors (1).

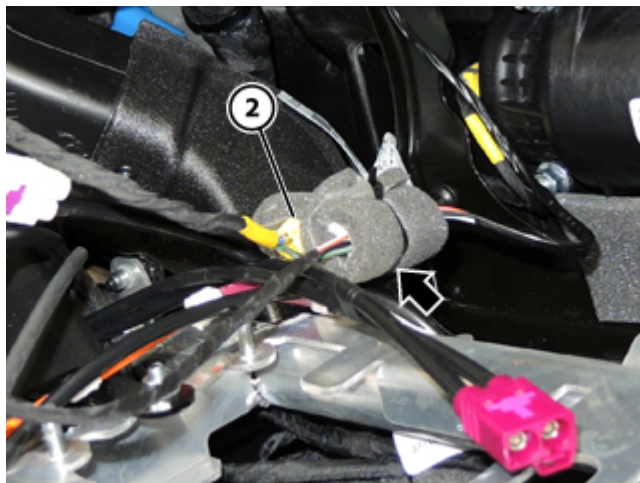

- Cut the indicated clamp.
- Remove the protective foam rubber then disconnect the connector (2).

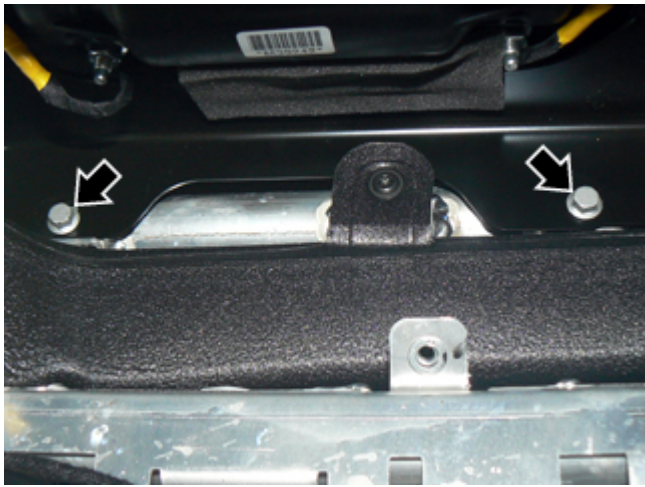

- Undo the screws indicated.

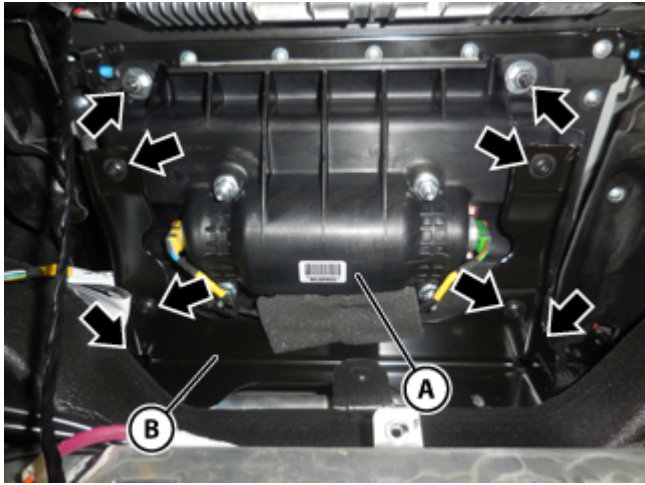


- Undo the screws indicated.
- Remove the bracket **(B)**.
- Disconnect the connectors from the airbag module and retrieve the wiring harness.
- Undo the nuts indicated.
- Remove the passenger airbag **(A)** and replace.
- Fit the new passenger airbag **(A)** in the relative seat.
- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	8 Nm	B


- Connect the connectors of the wiring harness to the airbag module.
- Fit the bracket **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

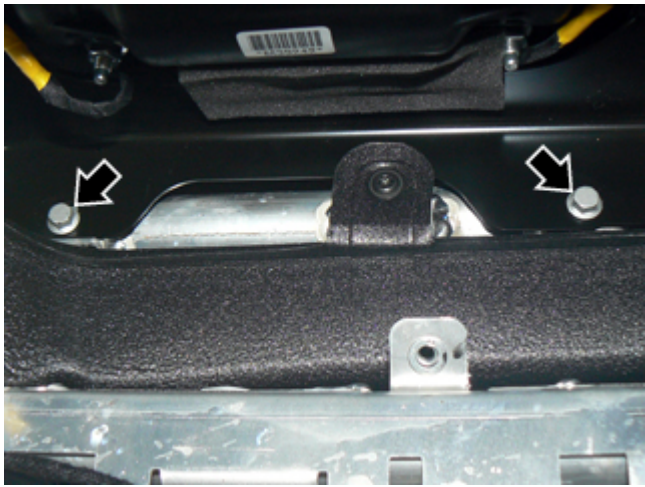


- Tighten the screws indicated.

Tightening torque	Nm	Class
Screw	4 Nm	B

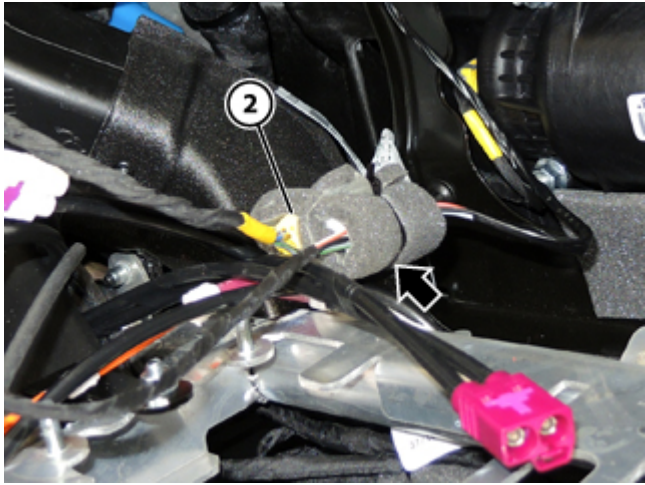

- Connect the connector (2), refitting the respective protective foam piece.
- Tighten a new clamp as indicated.

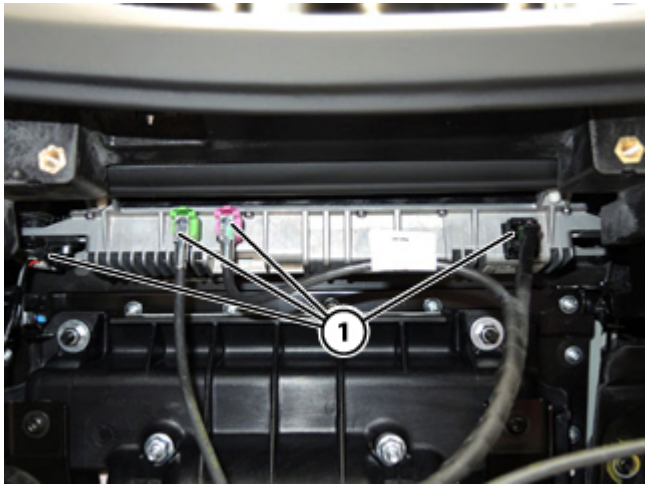

For vehicles with passenger display

- Connect the connectors (1).

- Refit the NIT ( E5.13).
- Connect the battery ( F2.01).
- Connect the DEIS tester to the diagnostic socket ( F2.09).
- Perform the cycle "10 NAB Complete Cycle" with the DEIS tester.

Replacing the side airbags

			
Tightening torque		Nm	Class
Fastening the side airbag mounting bracket	Screw	9 Nm	B
	Nut	9 Nm	B



A damaged airbag module may cause severe or fatal injuries if activated.



After an accident causing airbag deployment, all the components of the system must be replaced (including wiring harnesses and connectors).

In the event of deployment of the driver side airbag, the complete steering wheel must also be replaced.

After an accident without airbag deployment, the components of the system (including wiring harnesses and connectors) must be checked and replaced if found to be bent, damaged or faulty.

Individual system components (including wiring harnesses and connectors) found to be damaged or faulty must be replaced. NEVER attempt to repair a damaged or faulty component.

If the vehicle has been stolen or the subject of an attempted theft, the components of the airbag system must be checked.

- Disconnect the battery ( F2.01).
- Remove the door panels ( E3.09).



- Disconnect the connector (1).



- Undo the screws and nuts indicated.
- Remove the bracket (A) complete with airbag.
- Replace the airbag.
- Fit the bracket (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

- Tighten the nuts indicated.

		
Tightening torque	Nm	Class
Nut	9 Nm	B



- Connect the connector (1).

- Refit the door panels ( E3.09).
- Connect the battery ( F2.01).
- Connect the DEIS tester to the diagnostic socket ( F2.09).
- Perform the cycle "10 NAB Complete Cycle" with the DEIS tester.

Replacing the crash sensors


			
Tightening torque		Nm	Class
Fastening front crash sensors	Screw	8 Nm	B
Fastening lateral crash sensors	Screw	8 Nm	B

- Disconnect the battery ( F2.01).

Front

Left front crash sensor

- Remove the front wheelhouses ( E3.05).
-  Remove the front element of the front left hand wheelhouse.

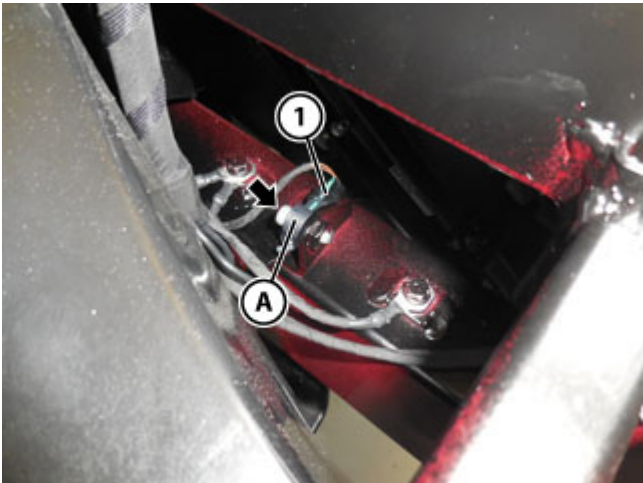

- Disconnect the connector (1).
- Undo the indicated screw.
- Remove and replace the crash sensor (A).
- Fit the new crash sensor (A).
- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	8 Nm	B

- Connect the connector (1).

- Refit the front wheelhouses ( E3.05).
-  Refit the front element of the front right hand wheelhouse.

Right front crash sensor

- Remove the front wheelhouses ( E3.05).
-  Remove the front element of the front right hand wheelhouse.

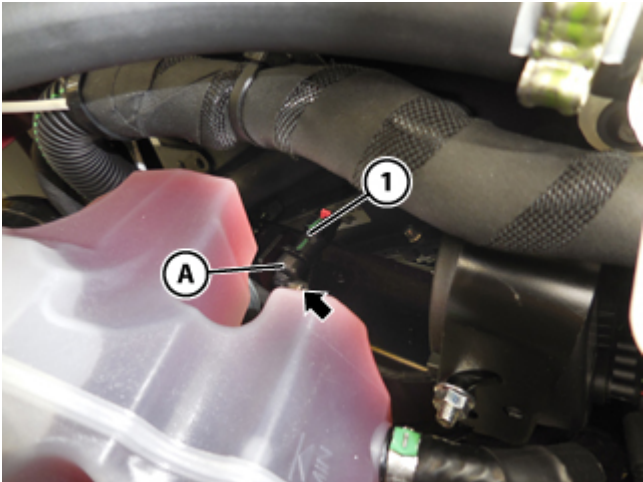

- Disconnect the connector (1).
- Undo the indicated screw.
- Remove and replace the crash sensor (A).
- Fit the new crash sensor (A).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	B


- Connect the connector (1).

- Refit the front wheelhouses ( E3.05).
-  Refit the front element of the front right hand wheelhouse.

Lateral

Left side crash sensor

- Remove the passenger compartment trim panels ( E4.04).
-  Remove the rear left hand lateral passenger compartment trim panel.

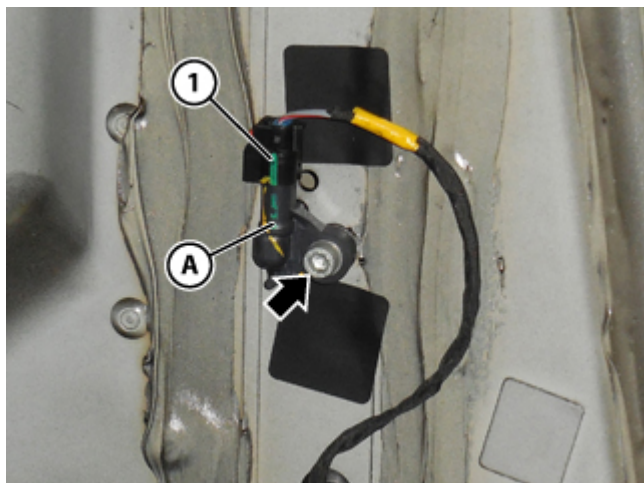

- Disconnect the connector (1).
- Undo the indicated screw.
- Remove and replace the crash sensor (A).
- Fit the new crash sensor (A).
- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	8 Nm	B

- Connect the connector (1).

- Refit the passenger compartment trim panels ( E4.04).
-  Refit the rear left hand lateral passenger compartment trim panel.

Right side crash sensor

- Remove the passenger compartment trim panels ( E4.04).
-  Remove the rear right hand lateral passenger compartment trim panel.

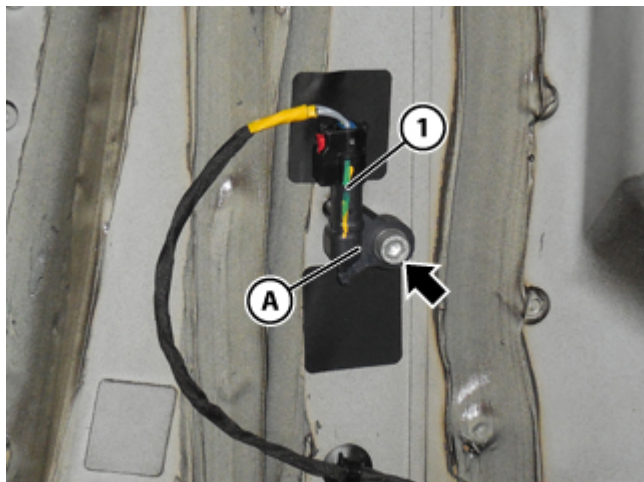

- Disconnect the connector (1).
- Undo the indicated screw.
- Remove and replace the crash sensor (A).
- Fit the new crash sensor (A).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

- Connect the connector (1).

- Refit the passenger compartment trim panels ( E4.04).
-  Refit the rear right hand lateral passenger compartment trim panel.

- Connect the battery ( F2.01).
- Connect the DEIS tester to the diagnostic socket ( F2.09).

 Perform the cycle "10 NAB Complete Cycle" with the DEIS tester.