



GTC4Lusso USA - Inertia switch - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F4.04 Inertia switch

Inertia switch operation

The inertia switch is located in front of the driver side seat.


In the event of a violent collision, the inertia switch cuts the power to the fuel pumps thereby preventing further fuel leakage from the tank.

The switch is triggered by a steel ball which can move in a tapered seat and is held in place by the attraction of a permanent magnet.

In the event of a violent collision, the inertia of the ball overcomes the attractive force of the magnet, pushing the ball up and out of the tapered seat, where it strikes a quick-release mechanism normally forming a closed circuit.

When the ball strikes the mechanism, the latter changes position, opening the circuit and cutting the power to the pumps.

Once triggered, the switch may be reset by pressing the top button **(A)**.

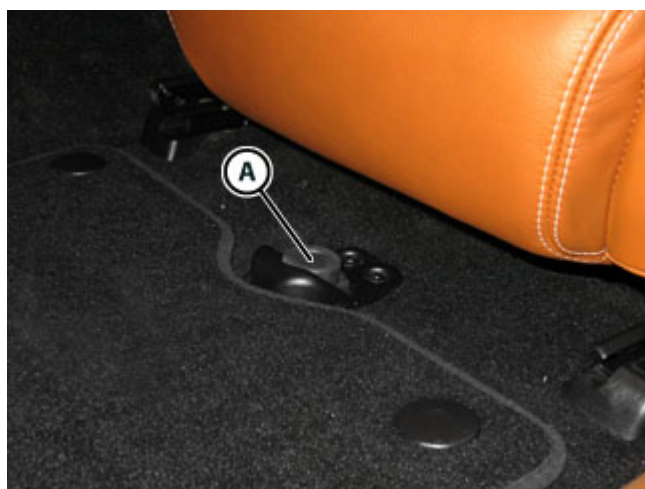


If fuel is smelt or fuel leaks are noted from the fuel system after a mild collision, the inertia switch must not be reset in order to prevent the risk of fire and to enable the safe identification of the cause of the problem.


Replacing the inertia switch

			
Tightening torque		Nm	Class
Fastening inertia switch to bodyshell	Screw	5 Nm	B
Fastening the inertia switch shield	Screw	5 Nm	B
Fastening driver side footrest	Screw	8 Nm	B


- Disconnect the battery ( F2.01).
- Remove the passenger compartment trim panels ( E4.04).
 -  Remove the front left hand lateral passenger compartment trim panel.
- Remove covers and mats ( E4.05).
 -  Remove the left hand inspection mat.

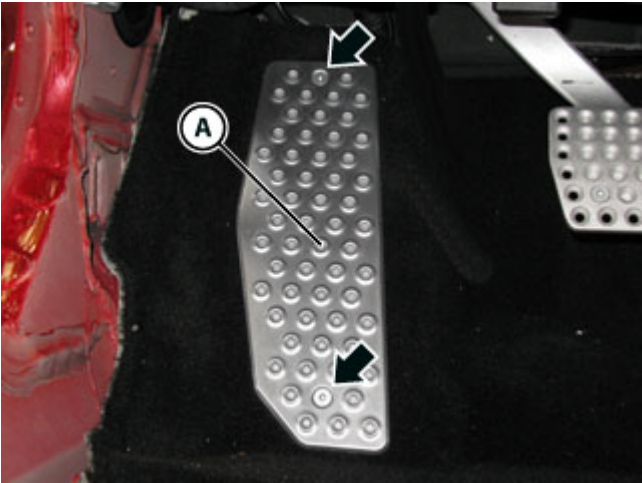

- Undo the screws indicated.
- Remove the footrest (A).

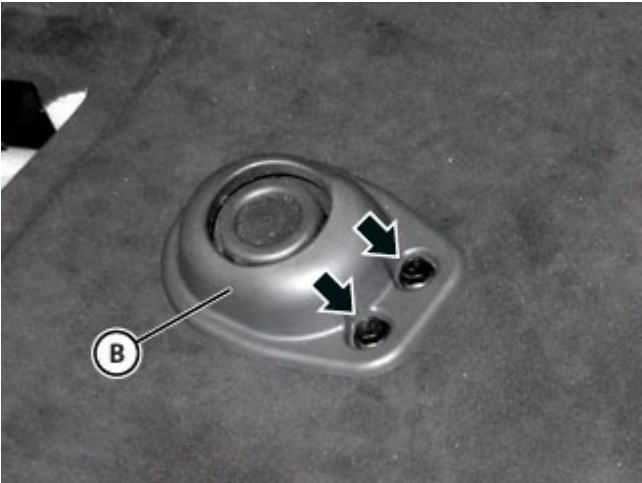


- Undo the screws indicated.
- Remove the guard (B).

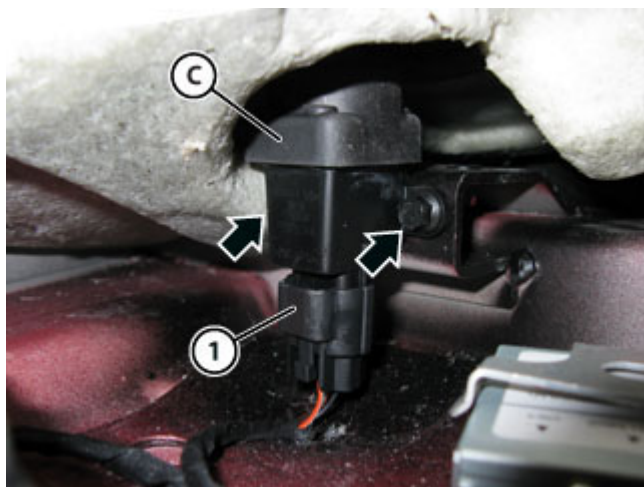

- Disconnect the connector (1).
- Undo the screws indicated.
- Remove the inertia switch (C) and replace.
- Fit the new inertia switch (C).
- Tighten the screws indicated.


		
Tightening torque	Nm	Class
Screw	5 Nm	B

- Connect the connector (1).

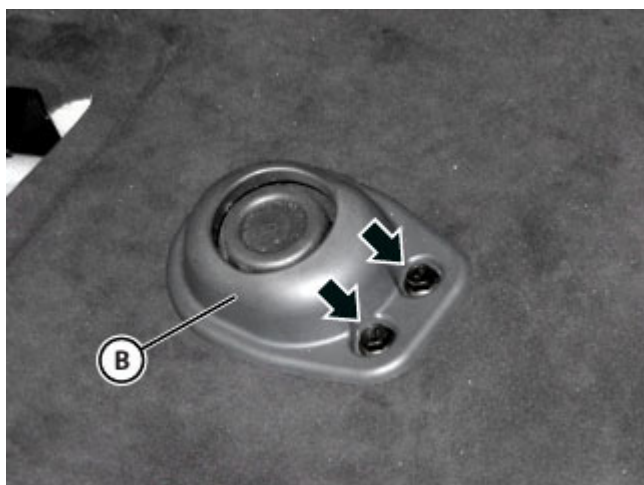

- Fit the guard (B).
- Hand tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	5 Nm	B

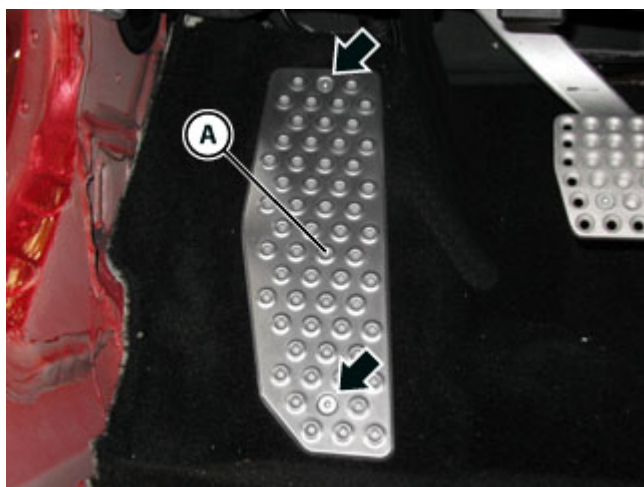

- Fit the footrest (A).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

➤ Refit covers and mats ( E4.05).

 Refit the left hand inspection mat.

➤ Refit the passenger compartment trim panels ( E4.04).

 Refit the front left hand lateral trim panel in the passenger compartment.

➤ Connect the battery ( F2.01).

 Wait at least one minute before starting the engine.

