



GTC4Lusso USA - AC control panel - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F5.02 AC control panel

AC system controls



Automatic mode

Press the button **(A)** to enable (LED on) and disable (LED off) automatic mode for the air conditioning in the driver zone.

Press the button **(B)** to enable (LED on) and disable (LED off) automatic mode for the air conditioning in the passenger zone.

In automatic mode, the system automatically adjusts air flow, distribution and temperature to maintain the set temperature value.

In partial automatic mode, certain parameters may be adjusted manually while others are regulated automatically.

In manual mode, the user may adjust all parameters as desired.

Temperature setting

Turn the dial **(C)** clockwise to increase air temperature in the driver zone.

Turn the dial **(C)** anticlockwise to decrease air temperature in the driver zone.

Turn the dial **(C)** clockwise to increase air temperature in the passenger zone.

Turn the dial **(C)** anticlockwise to decrease air temperature in the passenger zone.

Air distribution mode selection

Press **(E)** to select from the three air distribution modes available for the driver side.

Press **(F)** to select from the three air distribution modes available for the passenger side.

Fan speed

Press **(G)** to increase fan speed.

Press **(G)** to reduce fan speed and (after selecting the lowest fan speed) switch the fan off.

Vent on/off

Press the button **(H)** to switch the vent on (LED on) or off (LED off).

Rear screen demist on/off

Press the button **(I)** to switch the rear screen demist/defrost function on (LED on) or off (LED off).

Windscreen demist on/off

Press the button **(L)** to switch the windscreen demist/defrost function on (LED on) or off (LED off).

Air recirculation on/off

Press the button **(M)** to enable (LED on) or disable (LED off) the air recirculation function.

With external temperatures above 32°C, the air recirculation function is always active, with 60 second pauses every 20 minutes to refresh the air.

When the windscreen washer function is active, the recirculation function is activated for 20 seconds to prevent the smell of detergent from entering the passenger compartment.

The recirculation function makes the air in the passenger compartment heat up or cool down more quickly.


Removing the AC control panel

➤ Disconnect the battery (🔑 F2.01).



 Take particular care not to damage the structure, the plastic fasteners and the leather trim


- Undo the screws indicated.

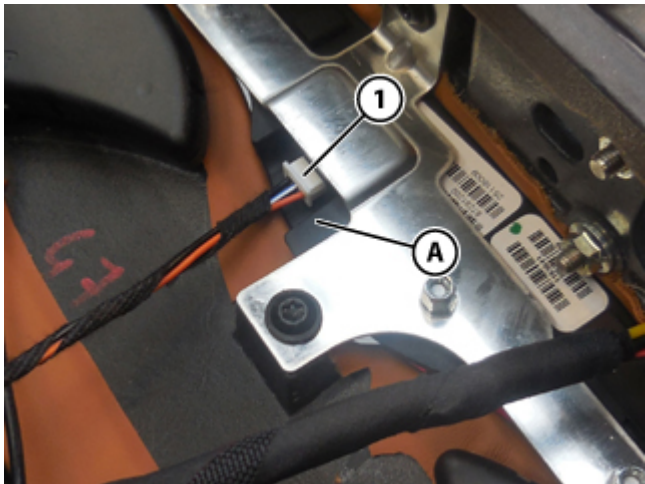

- Disconnect the connector (1).
- Remove the AC control panel (A).

Refitting the AC control panel

			
Tightening torque		Nm	Class
Fastening AC control panel.	Screw	3 Nm	B

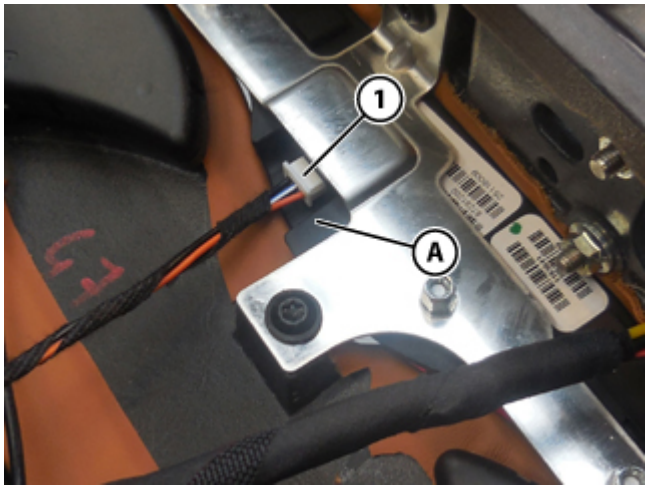

- Connect the connector (1).



Take particular care not to damage the structure, the plastic fasteners and the leather trim

- Fit the AC control panel (A).
- Tighten the screws indicated.



Tightening torque	Nm	Class
Screw	3 Nm	B

- Connect the battery (🔑 F2.01).
- Connect the DEIS tester to the diagnostic socket (🔑 F2.09).
- 🔧 Perform the respective cycle with the DEIS diagnostic tester.