



GTC4Lusso USA - AC system compressor - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F5.03 AC system compressor

Removing the AC system compressor

- Disconnect the battery (F2.01).
- Discharge the air conditioning and heating system (F5.11).
- Remove the complete PTU (C4.02).




- Undo the indicated nut.

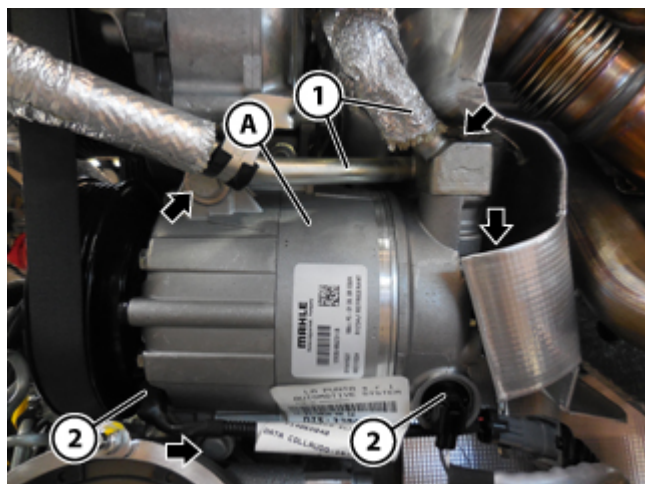

- Disconnect the unions (1) from the compressor (A), undoing the respective screw indicated.
- Note that the photo was taken on the workbench to illustrate the operation more clearly.
- Disconnect the connectors (2).
- Undo the indicated screws, retrieving the relative washers.
- Remove the compressor from underneath the vehicle.

Refitting the AC system compressor

			
Tightening torque		Nm	Class
Fastening AC compressor to engine	Screw	25 Nm	B
Fastening pipes to AC compressor	Screw	24 Nm	B

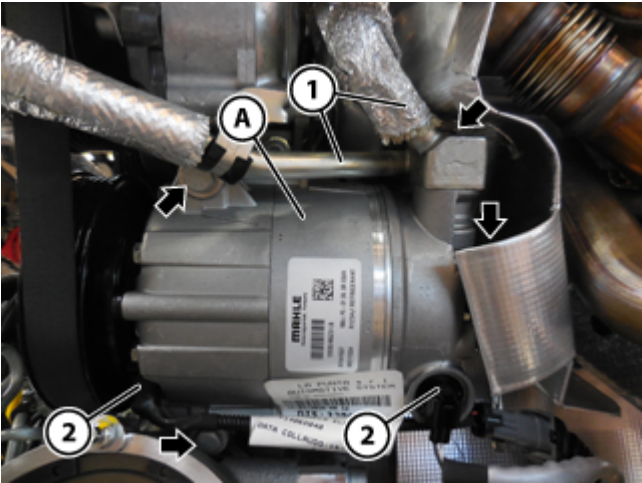

- Fit the compressor in the relative seat and tack the indicated screws, applying the respective washers.
- Note that the photo was taken on the workbench to illustrate the operation more clearly.

- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	25 Nm	B

- Connect the connectors (2).
- Replace the O-rings on the pipes (1).
- Connect the pipes (1) to the compressor (A), tightening the indicated screw.

		
Tightening torque	Nm	Class
Screw	24 Nm	B



- Fit the rubber lines bracket, tightening the indicated nut.

- Refit the PTU (🔧 C4.03).
- Charge the air conditioning and heating system (🔧 F5.11).

➤ Connect the battery ( F2.01).