



GTC4Lusso USA - Complete AC unit - Latest Update: 2021-01-26


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F5.07 Complete AC unit

Removing the AC unit


- Remove the dashboard ( E4.02).
- Remove the dashboard trim panels ( E4.02).
-  Remove the substructure trim panel from the dashboard.

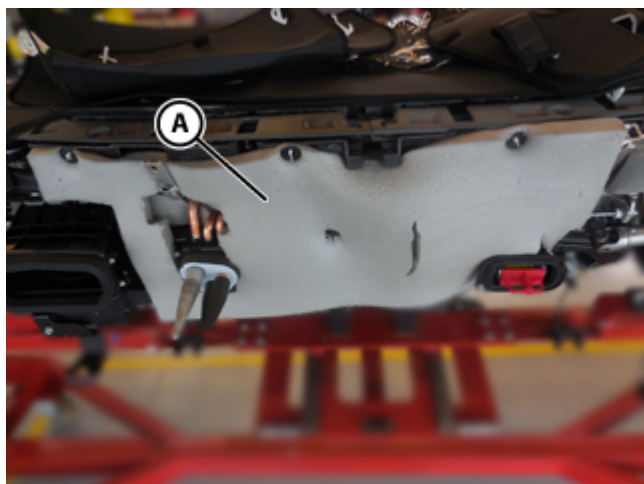


- Remove the soundproofing (A).

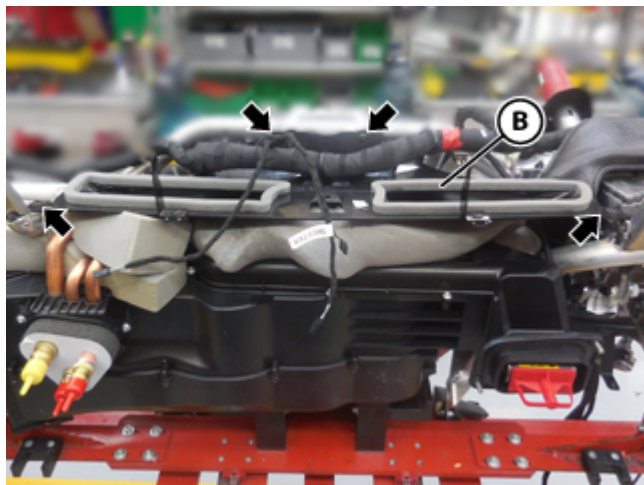

- Undo the screws indicated.
- Disconnect and remove the air duct **(B)**.

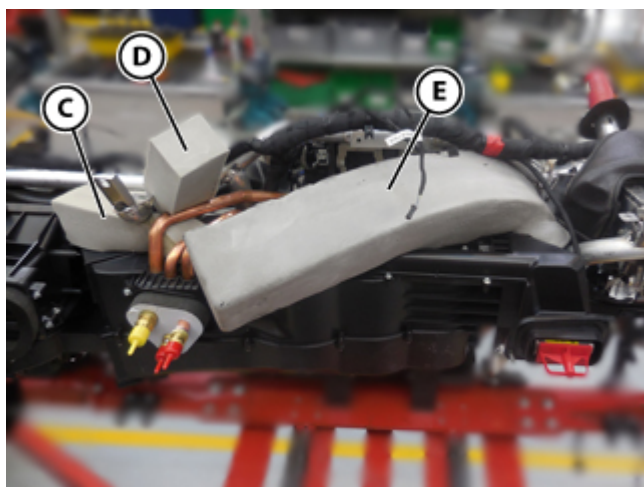


- Remove the soundproofing **(C)**.
- Remove the soundproofing **(D)**.
- Remove the soundproofing **(E)**.

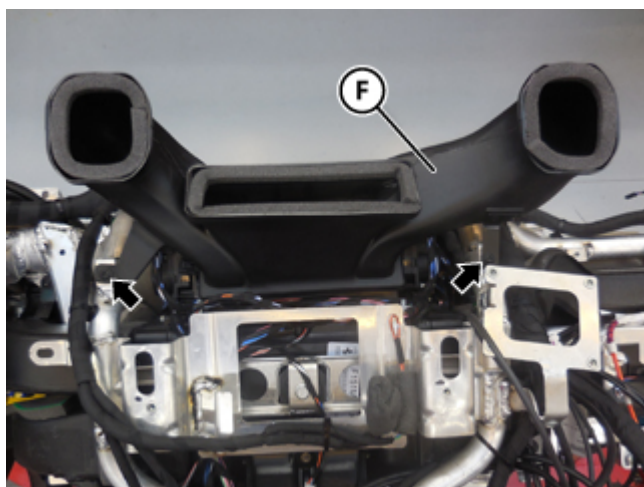

- Undo the screws indicated.
- Disconnect and remove the air duct **(F)**.




- Undo the indicated screw.

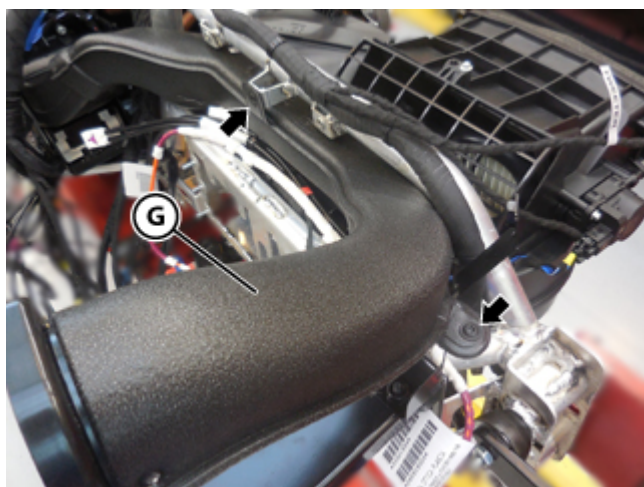


- Undo the screws indicated.
- Disconnect and remove the air duct (G).




- Undo the indicated screw.

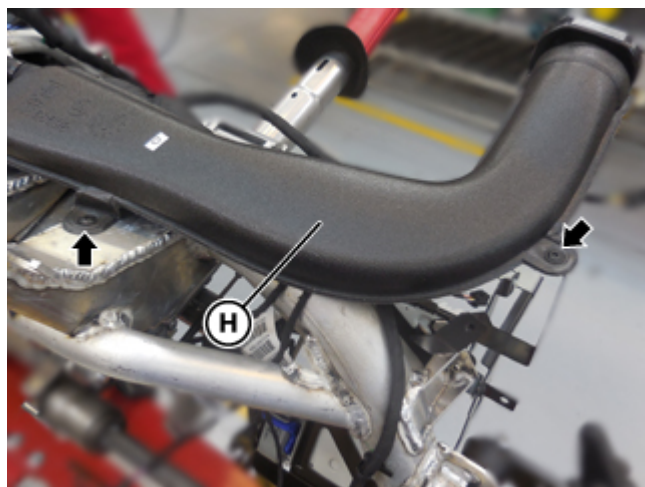**UP TO Ass.ly No. 145363**


- Undo the screws indicated.
- Disconnect and remove the air duct **(H)**.

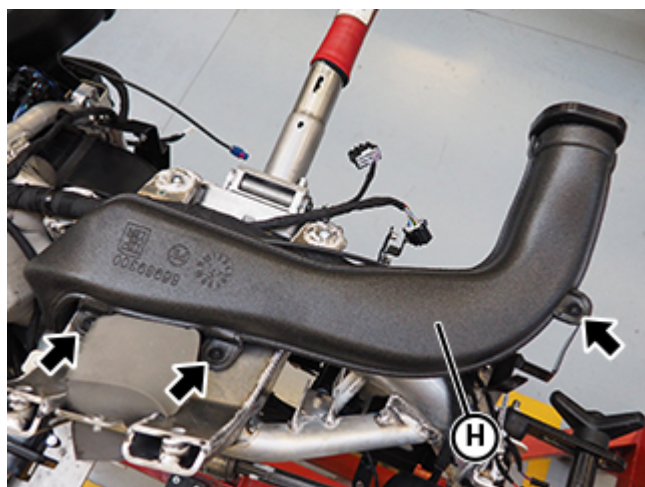**FROM Ass.ly No. 145364**


- Undo the screws indicated.
- Disconnect and remove the air duct **(H)**.

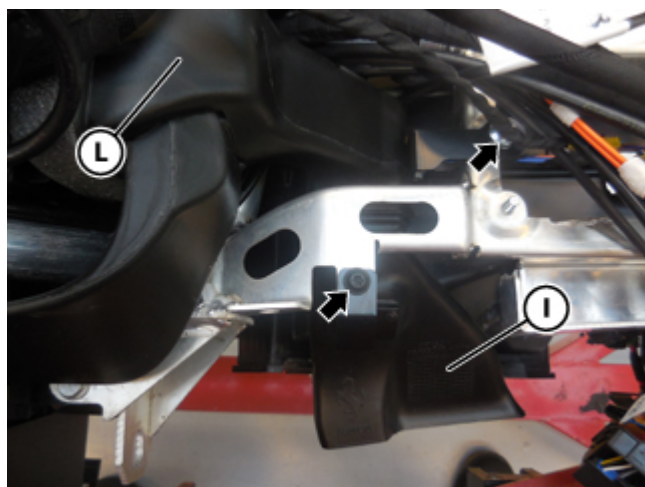


- Undo the indicated screw.
- Disconnect and remove the air duct **(I)**.
- Undo the indicated nut.
- Disconnect and remove the air duct **(L)**.

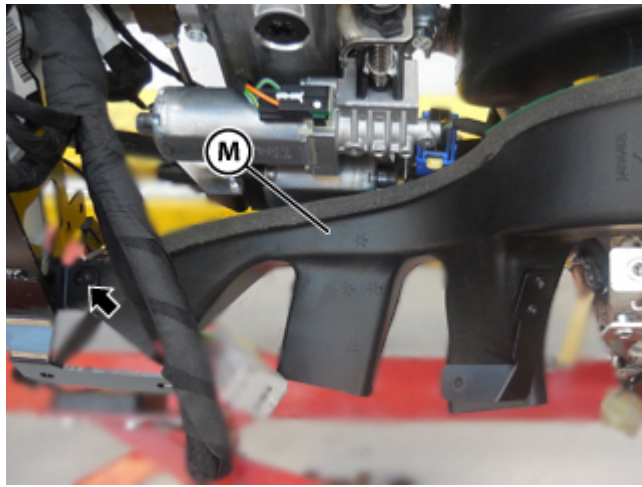


- Undo the indicated screw.
- Disconnect and remove the air duct **(M)**.

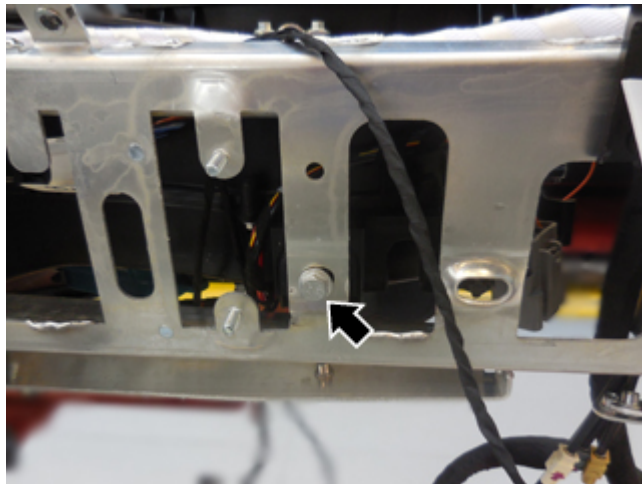


- Undo the indicated screw.

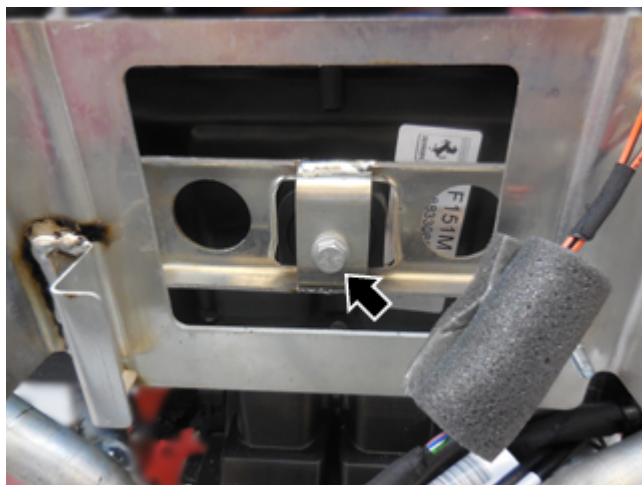

- Undo the indicated screw.

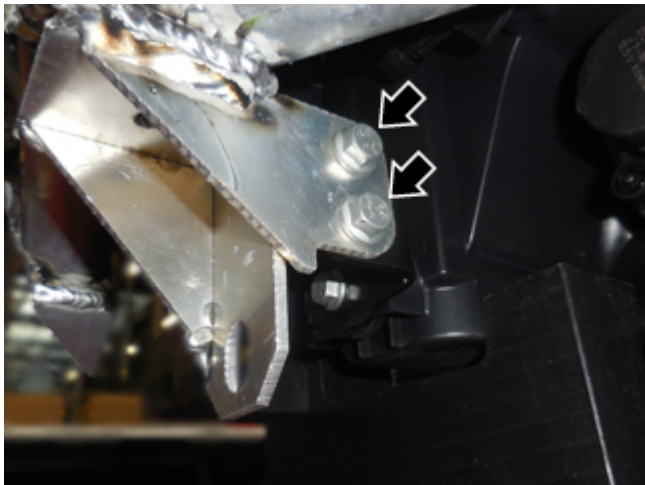

- Undo the screws indicated.

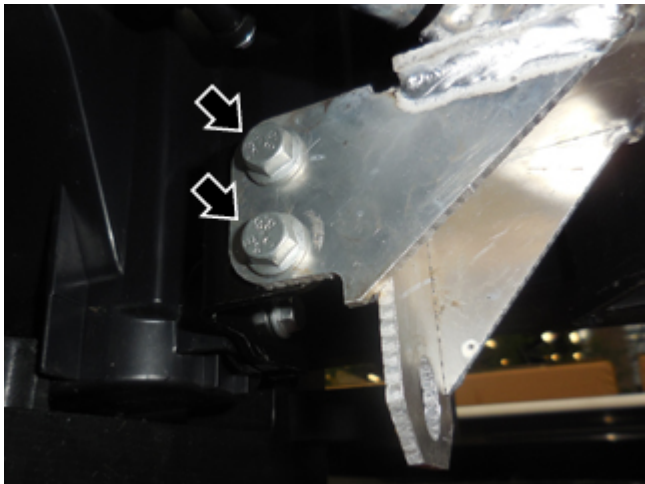


- Undo the screws indicated.

- Working with particular caution, detach the AC unit from the dashboard substructure and remove from the rear.

Refitting the AC unit


			
Tightening torque		Nm	Class
Fastening AC unit	Nut	9 Nm	B
	Screw	8 Nm	B
Fastening AC unit air ducts	Screw	4 Nm	B
	Nut	4 Nm	B
	Screw	2 Nm	B

- Working with particular caution, fit the AC unit on the dashboard substructure from the rear.

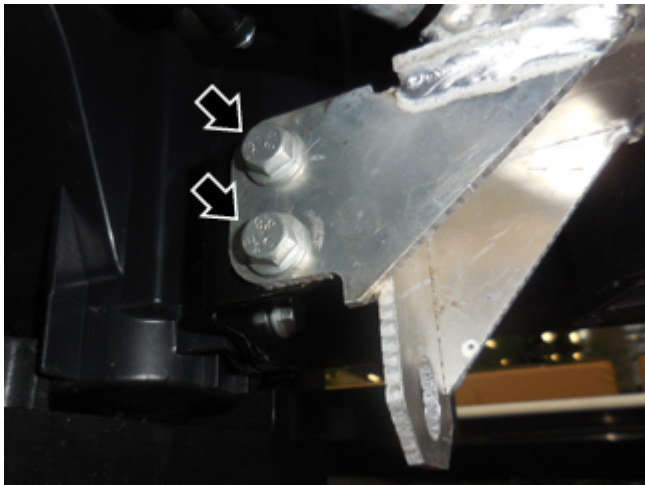


- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

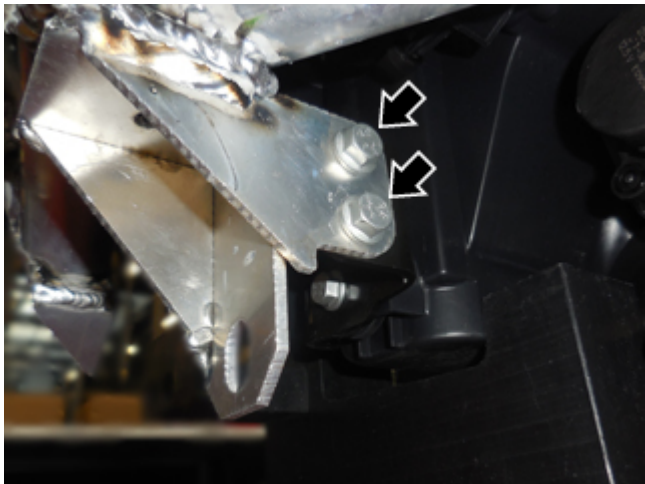


- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

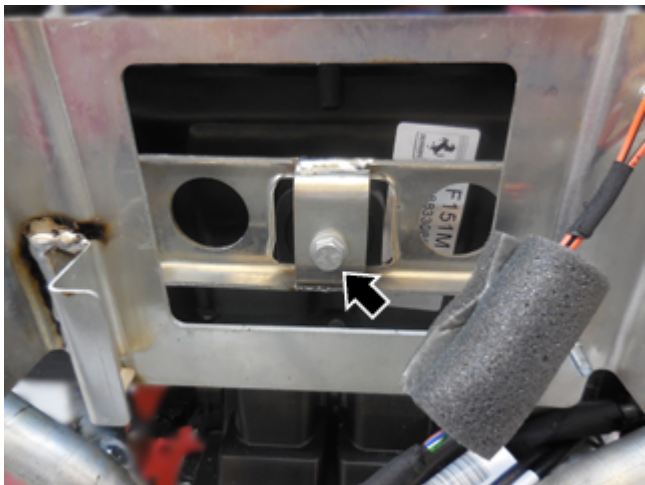


- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

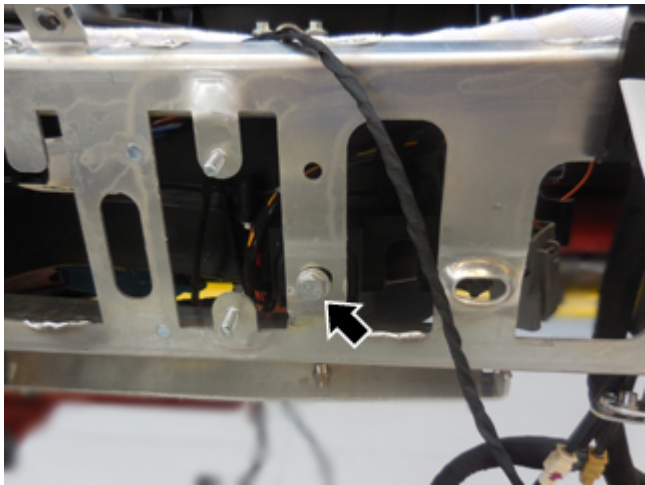


- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	8 Nm	B

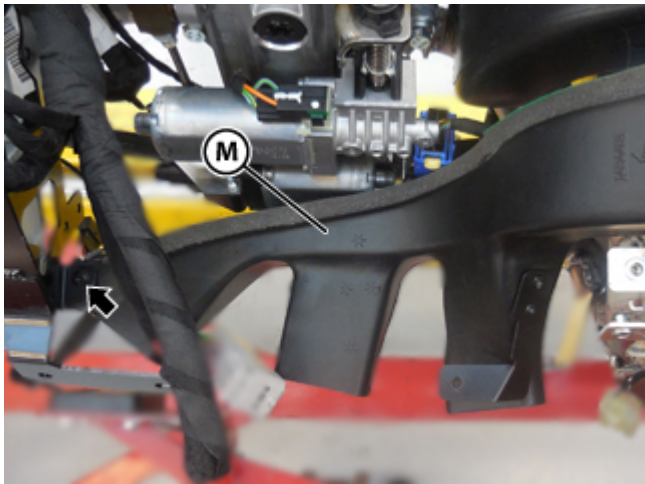

- Fit and connect the air duct (M).
- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

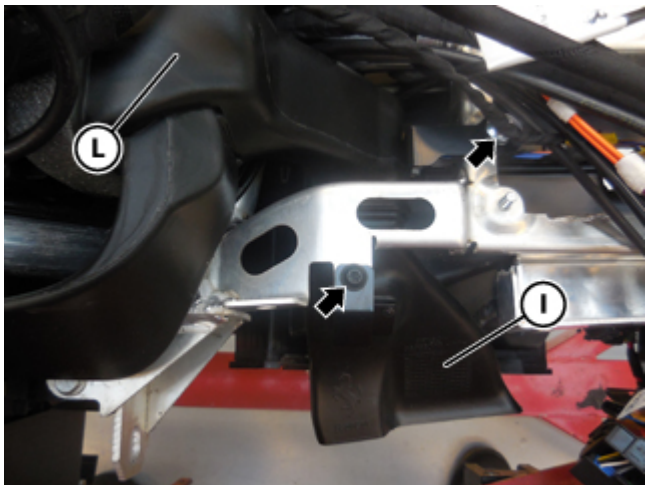


- Fit and connect the air duct (L).
- Tighten the indicated nut.

		
Tightening torque	Nm	Class
Nut	4 Nm	B

- Fit and connect the air duct (I).
- Tighten the indicated screw.


		
Tightening torque	Nm	Class
Screw	4 Nm	B

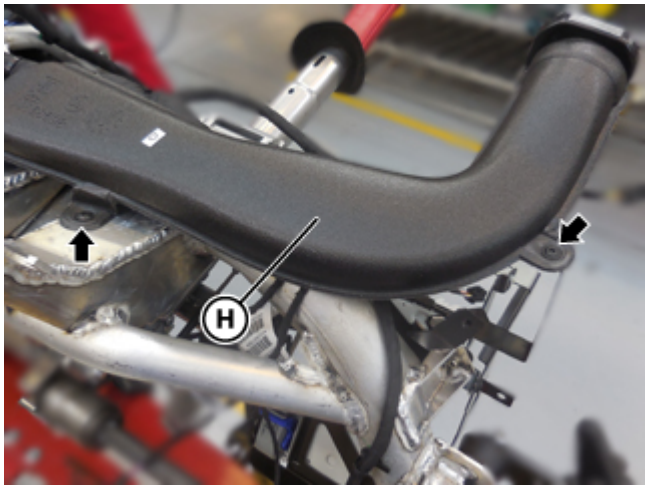

UP TO Ass.ly No. 145363

- Fit and connect the air duct (H).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	2 Nm	B

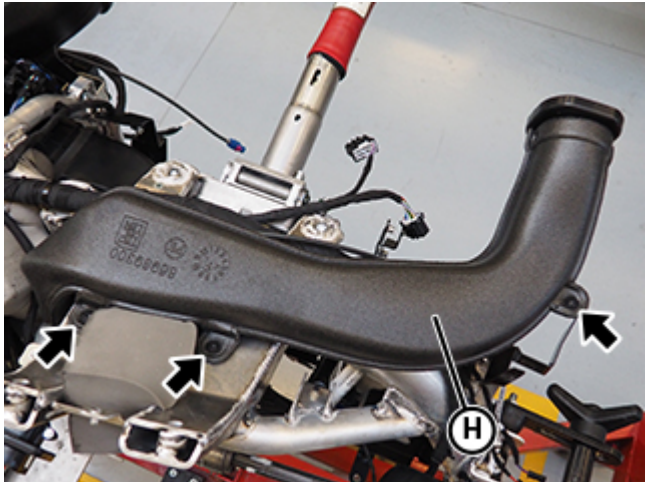

FROM Ass.ly No. 145364


- Fit and connect the air duct (H).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	2 Nm	B



- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

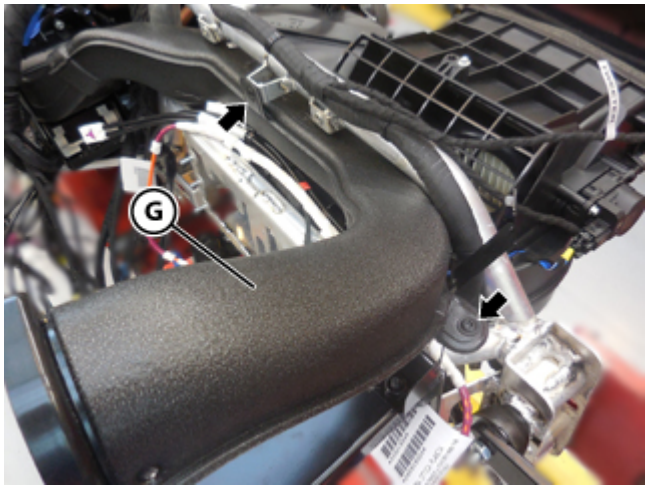


- Fit and connect the air duct (G).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	2 Nm	B




- Tighten the indicated screw.

		
Tightening torque	Nm	Class
Screw	2 Nm	B

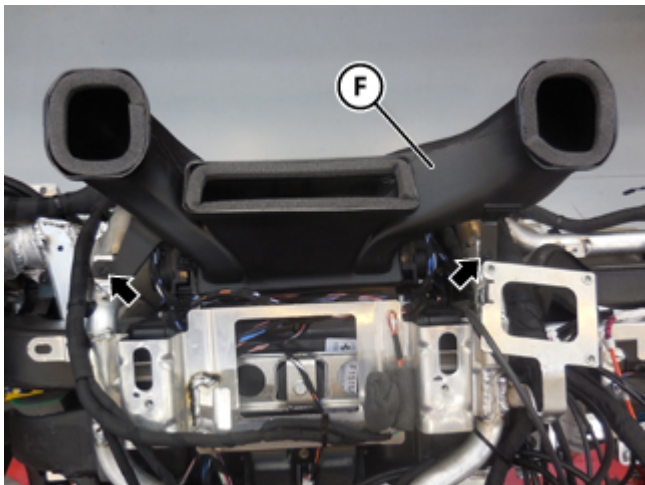


- Fit and connect the air duct (F).
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

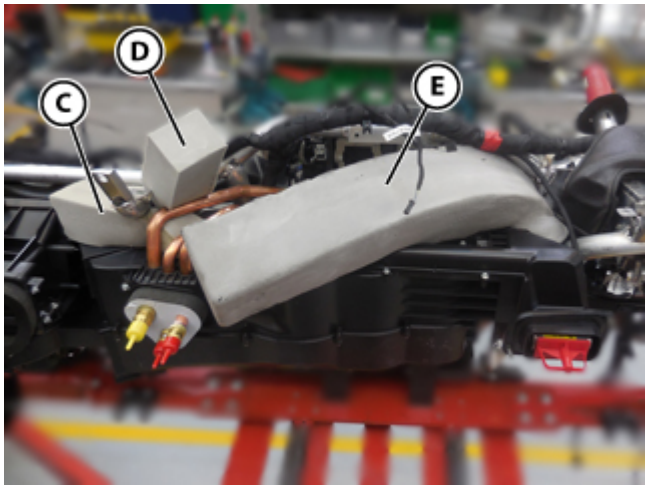

- Install the soundproofing (E).
- Install the soundproofing (D).
- Install the soundproofing (C).

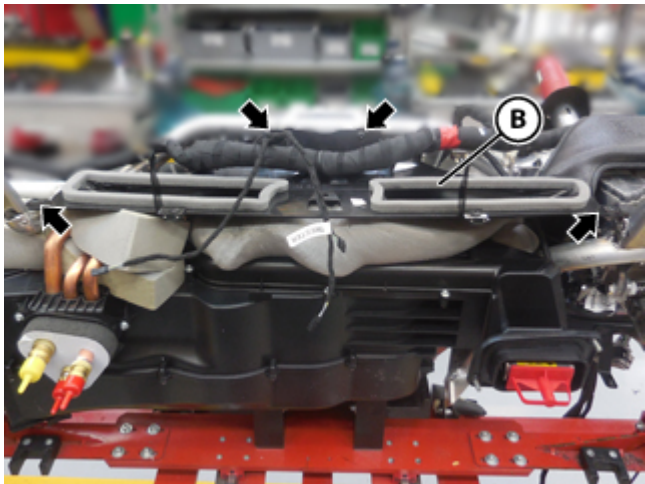


- Fit and connect the air duct (B).
- Tighten the centre screws indicated.

		
Tightening torque	Nm	Class
Screw	4 Nm	B

- Tighten the lateral screws indicated.

		
Tightening torque	Nm	Class
Screw	2 Nm	B

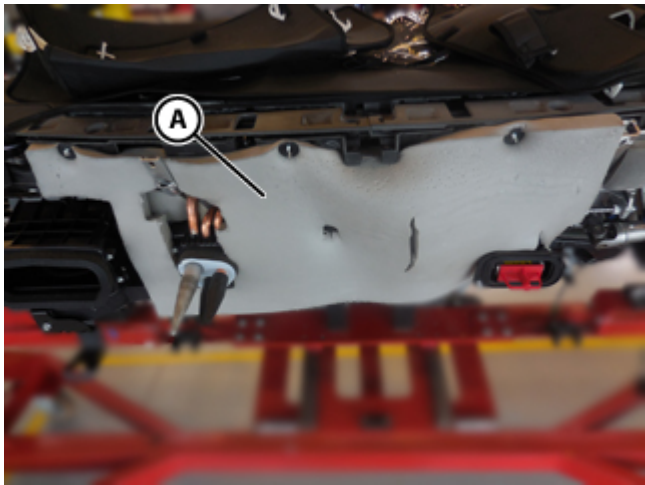

- Install the soundproofing (A).

- Refit the dashboard trim panels ( E4.02).
- Refit the substructure trim panel from the dashboard.
- Refit the dashboard ( E4.02).

