



GTC4Lusso USA - AC system TGK solenoid valves - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366


F5.08 AC system TGK solenoid valves

Removing the TGK solenoid valves




After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

- Drain the engine cooling system ( B6.07).
- Disconnect the battery ( F2.01).
- Remove the front wheelhouses ( E3.05).
 -  Remove the rear element of the front right hand wheelhouse.
- Remove the engine compartment cosmetic shields ( E3.14).
 -  Remove the right hand lateral cosmetic shield.

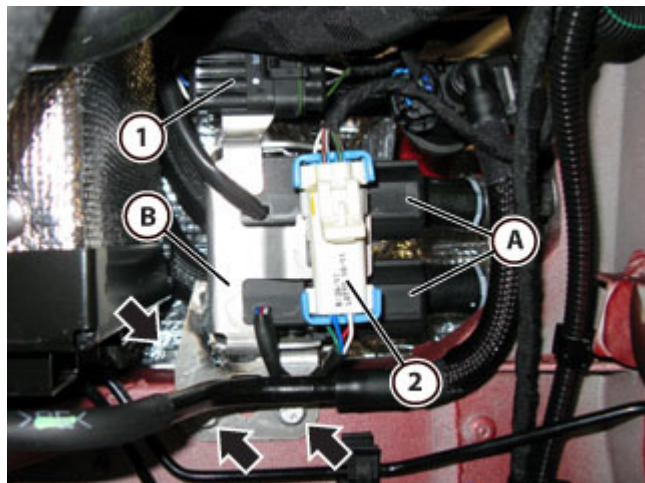

- Detach and disconnect the connectors (1) and (2).
- Undo the screws indicated.
- Pull the TGK valves (A) as far as possible out from the wheelhouse, complete with bracket (B).

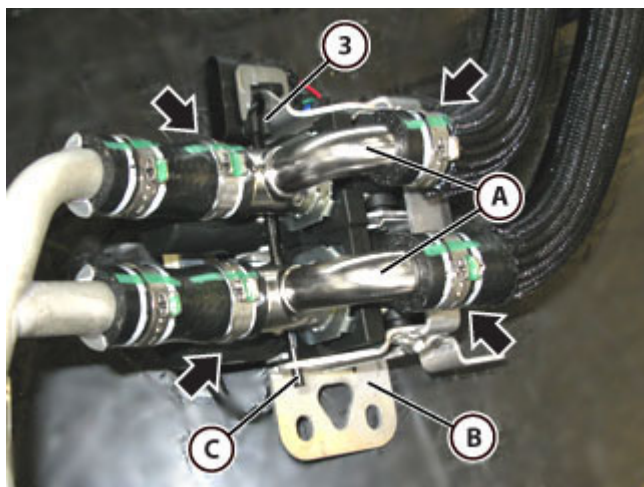


- Remove the indicated collars and disconnect the respective pipes from the TGK valves (A).
- Note that the photo was taken on the work bench to illustrate the subsequent operations more clearly.
- Rotate and detach the fastener clip (3) from the pin (C).
- Remove the pin (C).
- Separate the TGK valves (A) from the relative bracket (B).

Refitting the TGK solenoid valves


			
Tightening torque		Nm	Class
Fastening TGK solenoid valve mounting bracket	Screw	9 Nm	B



After loosening or removal, the Caillau Visa hose clamps must be replaced with Mikalor worm drive hose clamps, following the instructions given in Technical Information 2054 of December 2012.

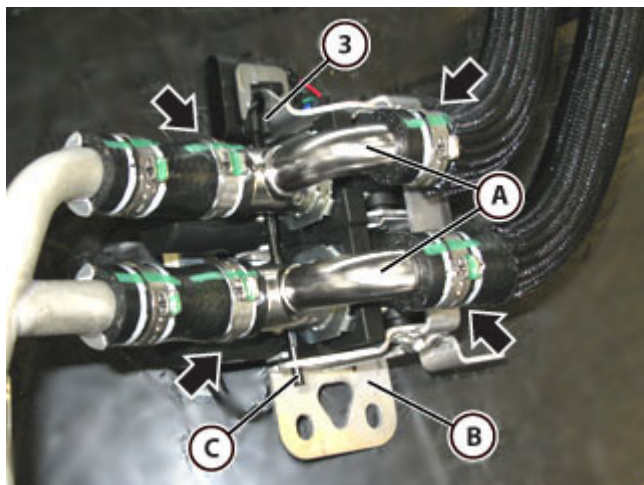

- Fit the TGK valves (A) on the relative bracket (B).
- Note that the photo was taken on the work bench to illustrate the subsequent operations more clearly.
- Fit the pin (C).
- Rotate and fasten the clip (3).
- Connect the pipes to the TGK valves (A), fastening by fitting and tightening new collars as indicated.

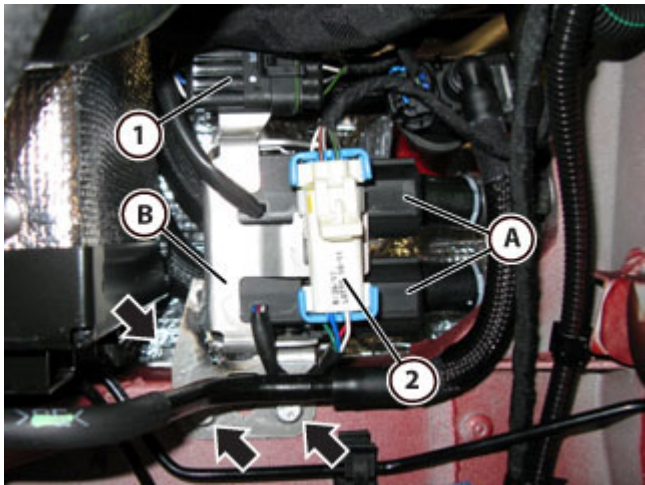

- Fit the TKG valves **(A)** complete with bracket **(B)**.
- Tighten the screws indicated.

		
Tightening torque	Nm	Class
Screw	9 Nm	B

- Connect and fasten the connectors **(1)** and **(2)**.

- Refit the engine compartment cosmetic shields (🔧 E3.14).
 - ❗ Refit the right hand lateral cosmetic shield.
- Connect the battery (🔧 F2.01).
- Fill the engine coolant system (🔧 A3.07).
- Refit the front wheelhouses (🔧 E3.05).
 - ❗ Refit the rear element of the front right hand wheelhouse.