



GTC4Lusso USA - Discharging and charging the AC system - Latest Update: 2021-01-26

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Ferrari S.p.A. Ferrari S.p.A. does not guarantee or accept any liability with respect to the correctness of information in this document.

Copyright by Ferrari S.p.A. - P.IVA 00159560366

F5.11 Discharging and charging the AC system

Discharging the air conditioning and heating system




The AC system must only be emptied and recharged with the engine cold.


The air conditioning and heating system must be discharged with the special tool for recovering refrigerant gas.

If the function is available on the tool, measure the quantity of fluid recovered from the system to enable subsequent refilling with the correct amount.

- Open the engine compartment lid ( E5.09).
- Remove the engine compartment cosmetic shields ( E3.14).
- Remove the left hand cosmetic inspection shield.

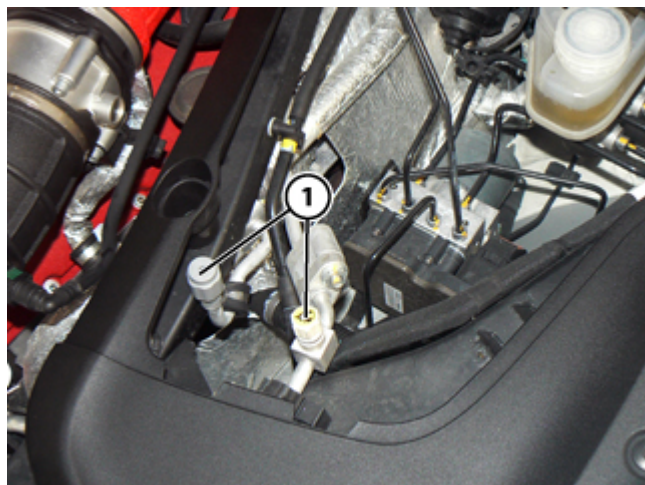

- Remove the caps (1).

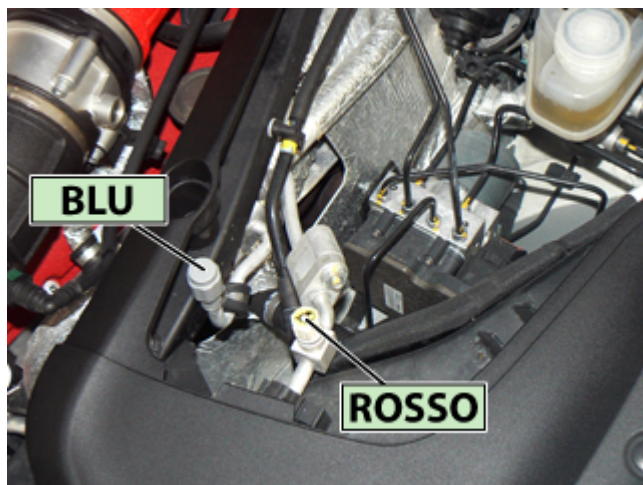**CAUTION**

Discharging refrigerant gas near open flame is extremely dangerous and may result in the emission of toxic gas (phosgene).

- Connect the **RED** union to the high pressure pipe.
- Connect the **BLUE** union to the low pressure pipe.
- Perform the **refrigerant gas recovery cycle**.
- Perform the **system discharge cycle**.



To ensure correct system operation, the specified vacuum values must be attained during the vacuum cycle.


**CAUTION**

Do not use open flames to search for refrigerant leaks, as this may generate toxic gas (phosgene).

- If the vacuum value exceeds **33 mbar (25 mmHg)** within **5 minutes**, check the system for leaks.
- Disconnect the **RED** union.
- Disconnect the **BLUE** union.

Charging the air conditioning and heating system

If some of the compressor oil has remained trapped in the machine after the discharging procedure, top up the system with the same quantity of the specified oil.

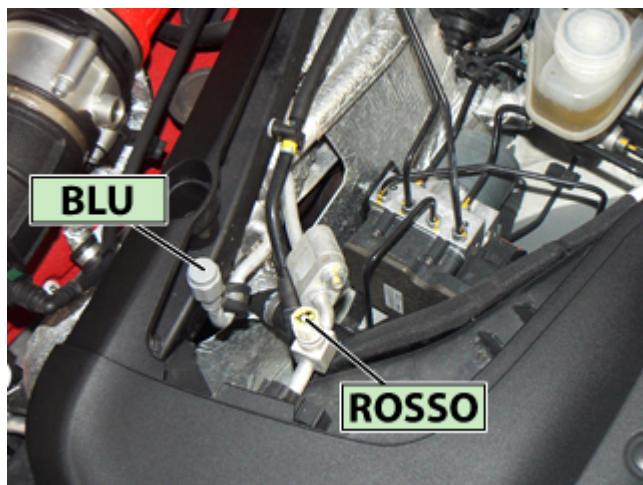


- Connect the **RED** union to the high pressure pipe.
- Connect the **BLUE** union to the low pressure pipe.



Do not use open flames to search for refrigerant leaks, as this may generate toxic gas (phosgene).

- After removing of any system component, perform the **system vacuum cycle** and check for leaks.
- Disconnect the **RED** union from the high pressure pipe.
- Selecting the low pressure circuit only, perform the **system charge** cycle and wait for the cycle to complete.
- Start the engine.
- Activate the AC system by setting the minimum temperature and the maximum fan speed.
- Increase engine speed to 2000 rpm a few times.
- Check that the low pressure circuit manometer reading stabilises at around **2.5 bar**.
- Disconnect the **BLUE** union from the low pressure pipe.
- Switch off the engine.
- Refit the caps (1).

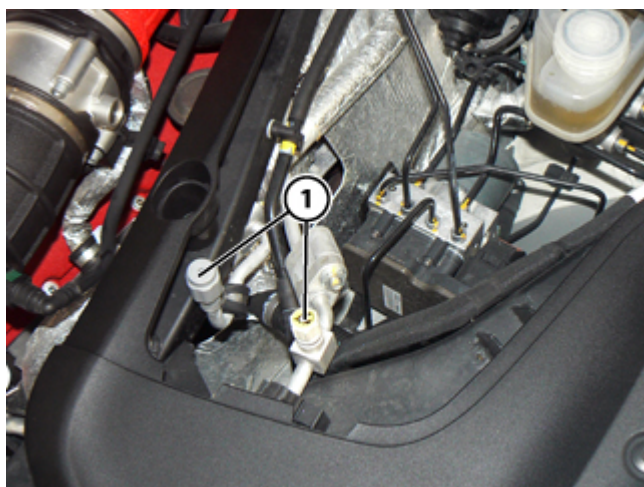

- Refit the engine compartment cosmetic shields (🔧 E3.14).
- Refit the left hand cosmetic inspection shield.