
# BIGTREETECH HDMI5 V1.0

使用说明

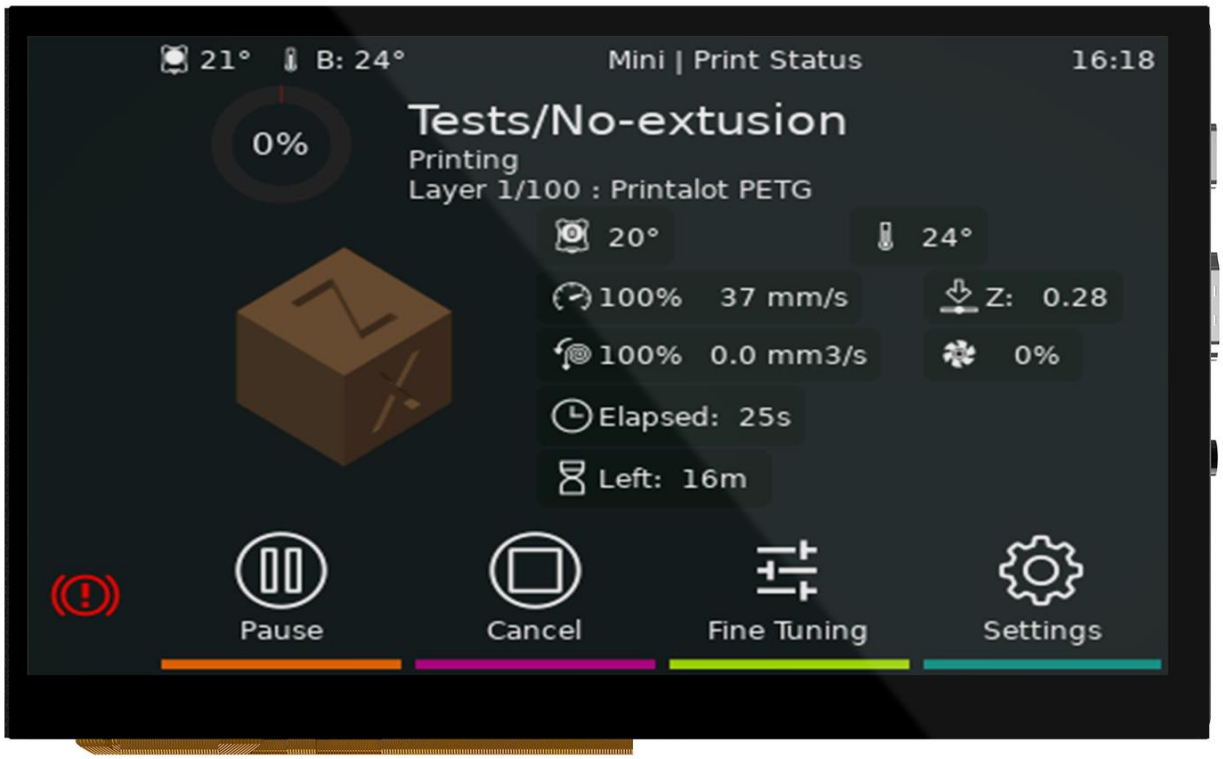

# 目录

目录 ..... 2
修订历史 ..... 3
一、产品简介 ..... 4
1.1 产品特点 ..... 4
1.2 产品参数 ..... 4
1.3 主板指示灯说明 ..... 4
1.4 产品尺寸 ..... 5
二、外设接口 ..... 6
2.1 接口示意图 ..... 6
三、功能介绍 ..... 7
3.1 屏幕与显示输出设备连接 ..... 7
3.2 音频输出 ..... 7
3.3 屏幕亮度调节 ..... 8
3.4 屏幕显示方向调节 ..... 8
四、连接树莓派使用 ..... 9
4.1 HDMI 显示输出 ..... 9
4.2 HDMI 音频输出 ..... 9

# 修订历史

| 版本 | 修改说明 | 日期 |
| --- | --- | --- |
| 01.00 | 初稿 | 2022/08/09 |
| 01.01 | 修复配置文件缺少的`=` | 2025/09/17 |

# 一、产品简介

BIGTREETECH HDMI5 V1.0 是深圳必趣科技有限公司 3D 打印团队推出的一款通用 5 寸 HDMI 显示屏。

## 1.1 产品特点

1. HDMI 信号源输入，可连接树莓派作为人机交互页面
2. 连接 PC 端，可作为 PC 显示器使用
3. LCD 采用 5 寸 IPS 电容触摸屏，屏幕分辨率为 800*480
4. 支持 5 点触摸
5. 内置音频解码电路，支持 3.5mm 耳机接口音频输出
6. 支持亮度和显示方向调节功能

## 1.2 产品参数


1. 外观尺寸：121*76mm
2. 安装尺寸：121*76mm 详情请参考 BTT HDMI5_V1.0_SIZE
3. 电源输入：DC 5V
4. 逻辑电压：DC 3.3V
5. 屏幕尺寸：5 寸 IPS 显示屏
6. 屏幕分辨率：800*480
7. 屏幕可视角度：160°

## 1.3 主板指示灯说明

主板上电之后：D6 红灯为电源指示灯：红灯亮起，表示供电正常；

D7 绿灯作为状态指示灯，屏幕正常工作中闪烁；


## 1.4 产品尺寸

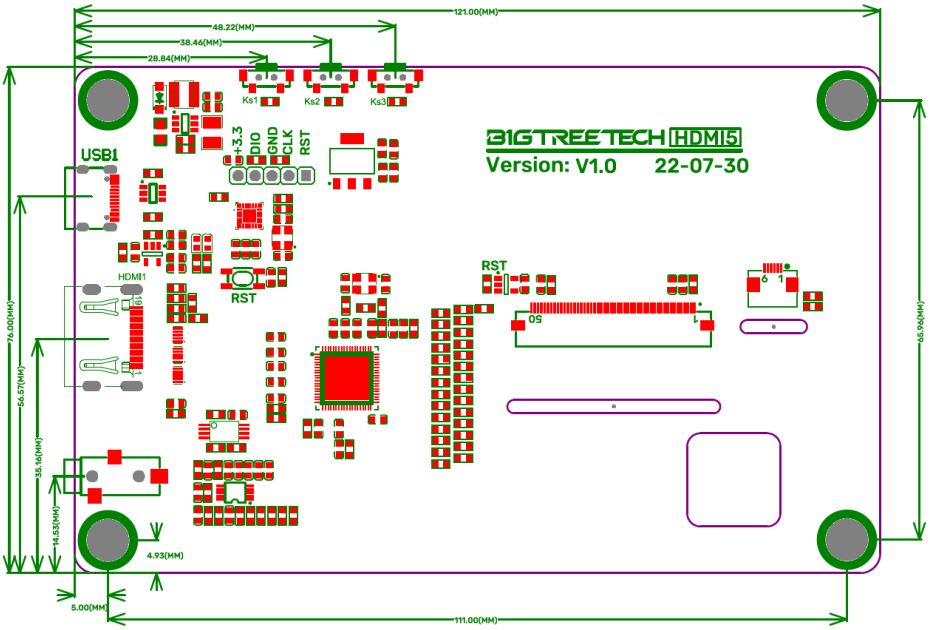


详见 BTT HDMI5_V1.0_SIZE

# 二、外设接口

## 2.1 接口示意图

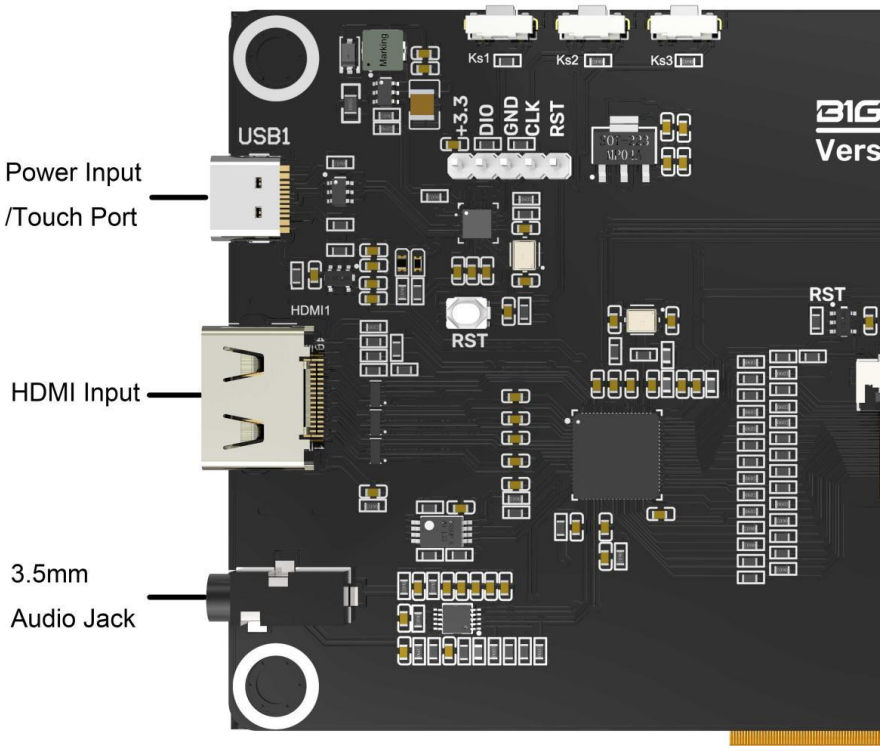

# 三、功能介绍


## 3.1 屏幕与显示输出设备连接

1. 使用 TYPE C 数据线连接 LCD 到显示输出设备（可以为树莓派/PC/其他支持 HDMI 显示输出的设备），连接 PC 时，正常情况 PC 会自动加载驱动，驱动加载完成后，即可识别触摸设备。

2. 使用 HDMI 数据线连接 LCD 到显示输出设备，一般连接 HDMI 数据线后，5 秒内 LCD 就可以正常显示。


## 3.2 音频输出

将 3.5mm 接口插入 AUDIO 接口，即可实现音频输出。AUDIO 接口可接入 3.5MM 接口耳机，也可接入外接音频功放设备。

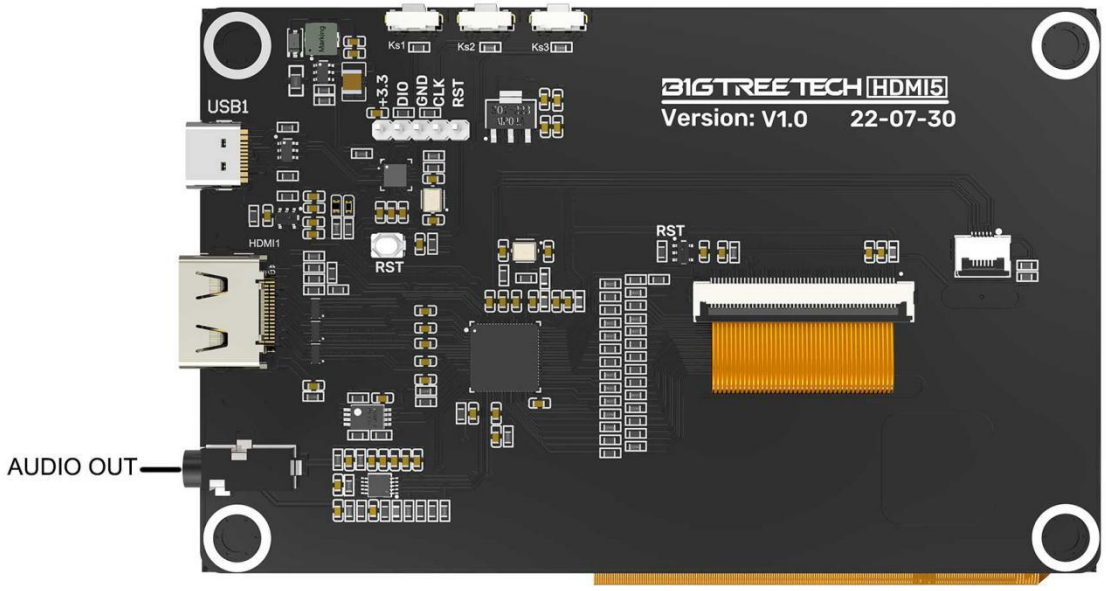

## 3.3 屏幕亮度调节

BIGTREETECH HDMI5 V1.0 支持显示亮度调节，可以通过屏幕又上角的 KS1 键调高亮度，KS3 键调低亮度

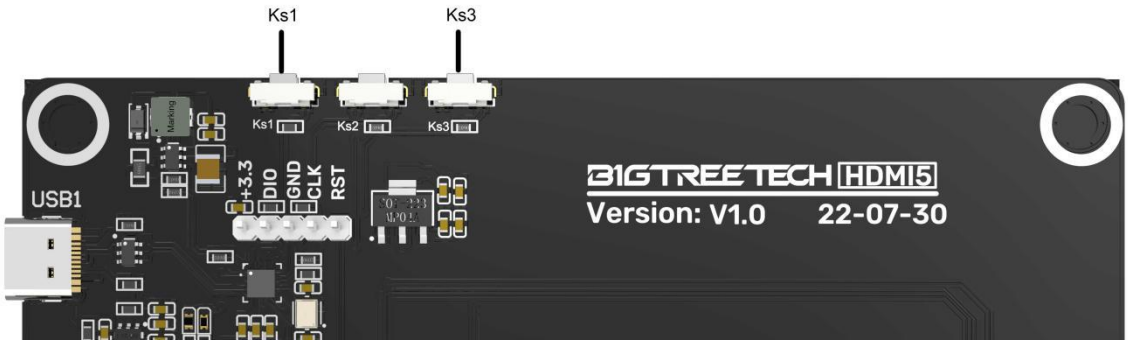


## 3.4 屏幕显示方向调节

BIGTREETECH HDMI5 V1.0 支持水平方向显示方向调节，可通过按下 KS2 键实现水平方向显示方向调节



# 四、连接树莓派使用

## 4.1 HDMI 显示输出

1. 树莓派官网下载 Raspberry Pi OS with desktop
Release date: April 4th 2022
System: 32-bit
Kernel version: 5.15
Debian version: 11 (bullseye)

2. 镜像烧录到 TF 卡后修改 config.txt 中以下配置

```
# uncomment to force a specific HDMI mode (this will force VGA)
hdmi_group=2
hdmi_mode=87
hdmi_cvt=800 480 60 6 0 0 0

# uncomment to force a HDMI mode rather than DVI. This can make audio work  in
# DMT (computer monitor) modes
hdmi_drive=1
```

## 4.2 HDMI 音频输出

1. 树莓派系统版本 Raspberry Pi OS with desktop
Release date: April 4th 2022
System: 32-bit
Kernel version: 5.15
Debian version: 11 (bullseye)

2. 进入系统桌面后右键点击右上角的音源图标，点击选择 HDMI 即可。

