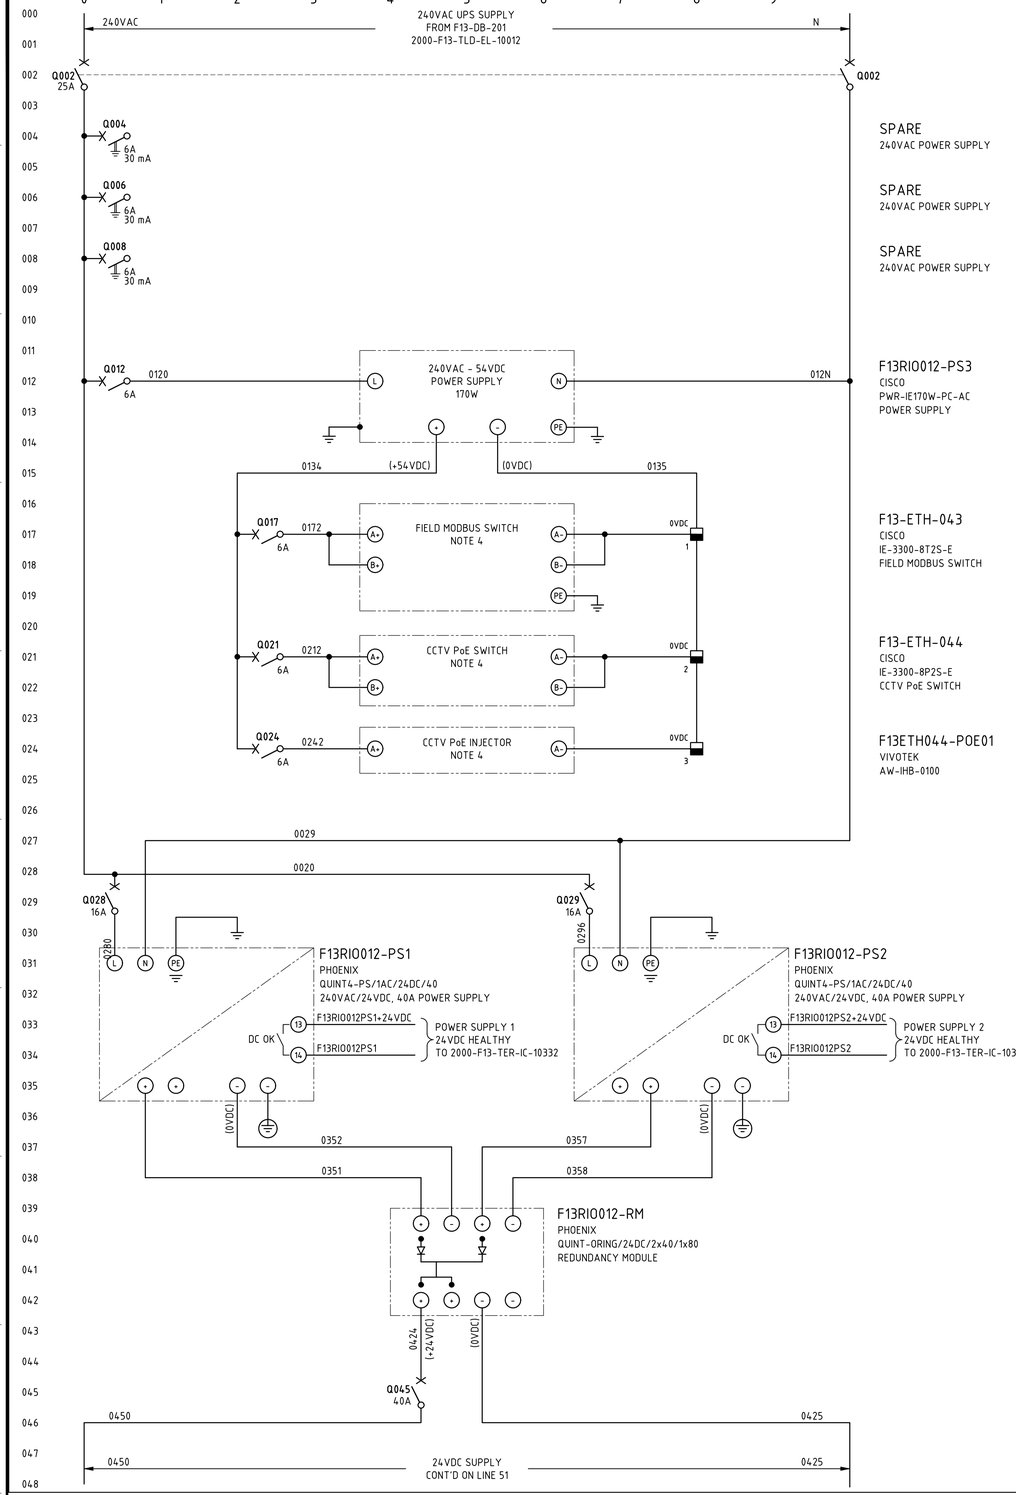


SPARE
240VAC POWER SUPPLY

SPARE
240VAC POWER SUPPLY


SPARE
240VAC POWER SUPPLY

F13RIO0012-PS3
CISCO
PWR-IE170W-PC-AC
POWER SUPPLY

F13-ETH-043
CISCO
IE-3300-8T2S-E
FIELD MODBUS SWITCH

F13-ETH-044
CISCO
IE-3300-8P2S-E
CCTV PoE SWITCH

F13ETH044-POE01
VIVOTEK
AW-IHB-0100

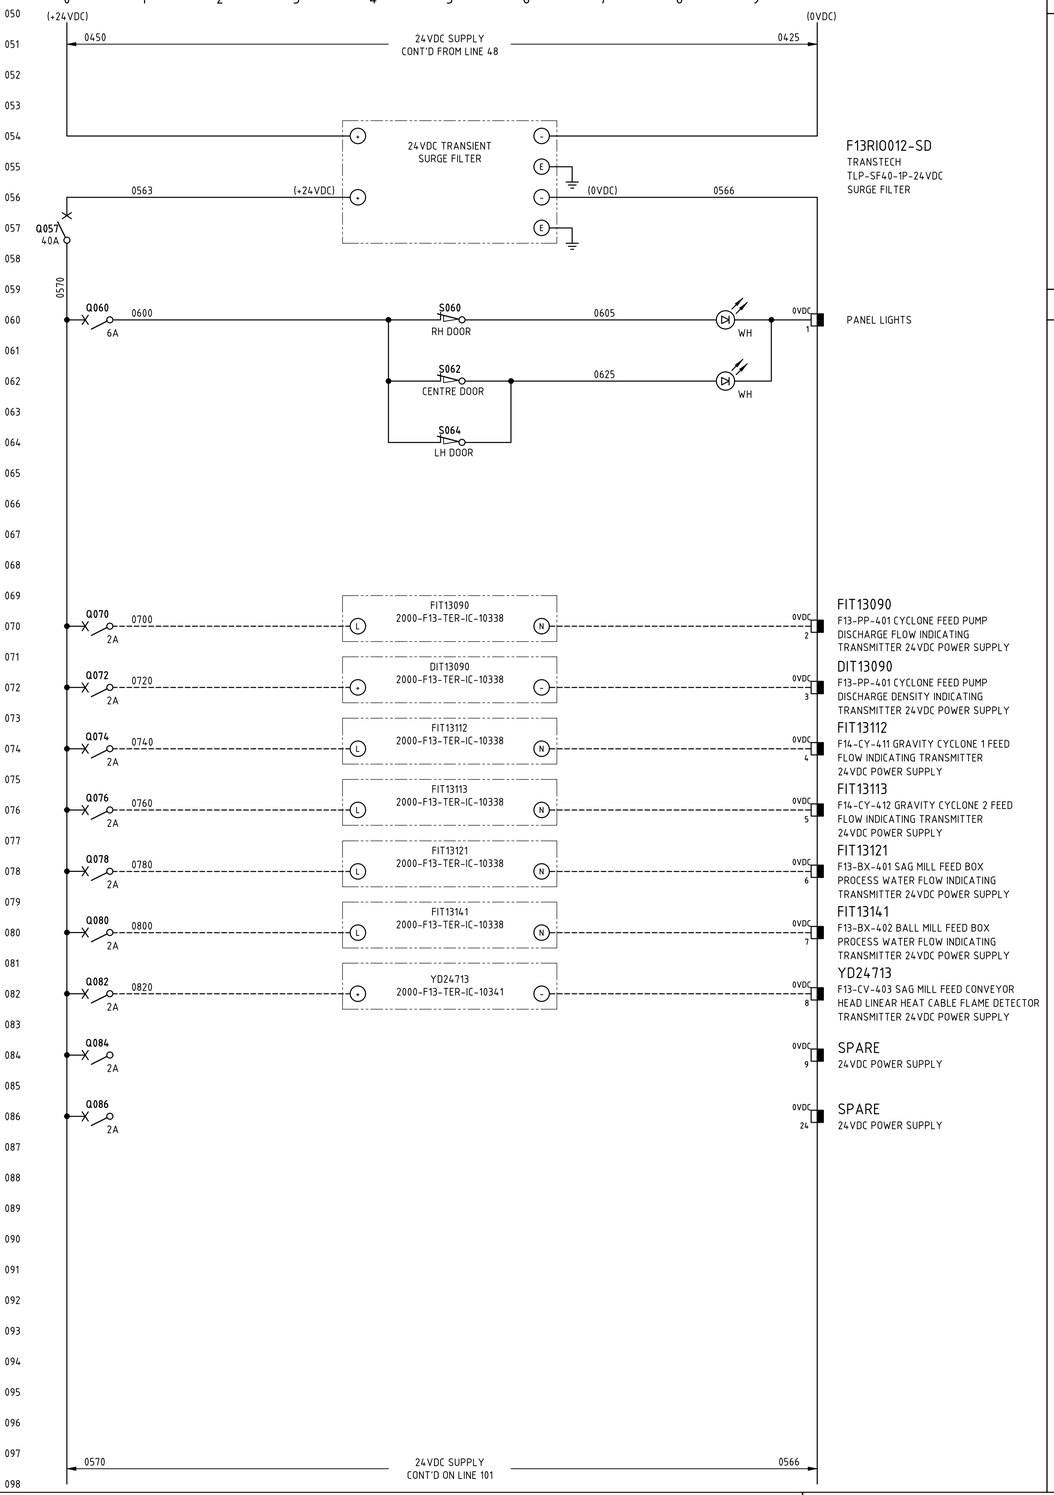

F13RIO0012-SD
TRANSTECH
TLP-SF40-1P-24VDC
SURGE FILTER

PANEL LIGHTS

FIT13090
F13-PP-401 CYCLONE FEED PUMP
DISCHARGE FLOW INDICATING
TRANSMITTER 24VDC POWER SUPPLY

DIT13090
F13-PP-401 CYCLONE FEED PUMP
DISCHARGE DENSITY INDICATING
TRANSMITTER 24VDC POWER SUPPLY

FIT13112
F14-CY-411 GRAVITY CYCLONE 1 FEED
FLOW INDICATING TRANSMITTER
24VDC POWER SUPPLY

FIT13113
F14-CY-412 GRAVITY CYCLONE 2 FEED
FLOW INDICATING TRANSMITTER
24VDC POWER SUPPLY

FIT13121
F13-BX-401 SAG MILL FEED BOX
PROCESS WATER FLOW INDICATING
TRANSMITTER 24VDC POWER SUPPLY

FIT13141
F13-BX-402 BALL MILL FEED BOX
PROCESS WATER FLOW INDICATING
TRANSMITTER 24VDC POWER SUPPLY

YD24713
F13-CV-403 SAG MILL FEED CONVEYOR
HEAD LINEAR HEAT CABLE FLAME DETECTOR
TRANSMITTER 24VDC POWER SUPPLY

SPARE
24VDC POWER SUPPLY

SPARE
24VDC POWER SUPPLY

NOTES

1. TERMINALS ON TERMINAL STRIPS ABOVE 50VAC SHALL HAVE A SEPARATE PERSPEX SHROUD AND SHALL BE LABELLED "DANGER xxxVAC".
2. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. F13RIO011-xxxx.
3. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.
4. FOR NETWORK CONNECTION & BUS CABLING DETAILS REFER TO DCS OR RIO PANEL COMMUNICATIONS TERMINATION DIAGRAMS.
5. INSTRUMENT EARTH BAR TO BE BONDED TO MAIN EARTH BAR WITH SOLID COPPER LINK.

LEGEND

- FIELD TERMINAL
- DCS OR I/O TERMINAL
- 0VDC TERMINAL FOR 24VDC
- 0VDC TERMINAL FOR 54VDC
- DEVICE TERMINAL
- INDICATION LAMP (cc = COLOUR)
- EARTH BAR
- INSTRUMENT EARTH BAR

2000-F13-SCM-IC-10331_Rev3

F13-RIO-012 milling & classification field n-IO panel - schematic diagram sheet 1