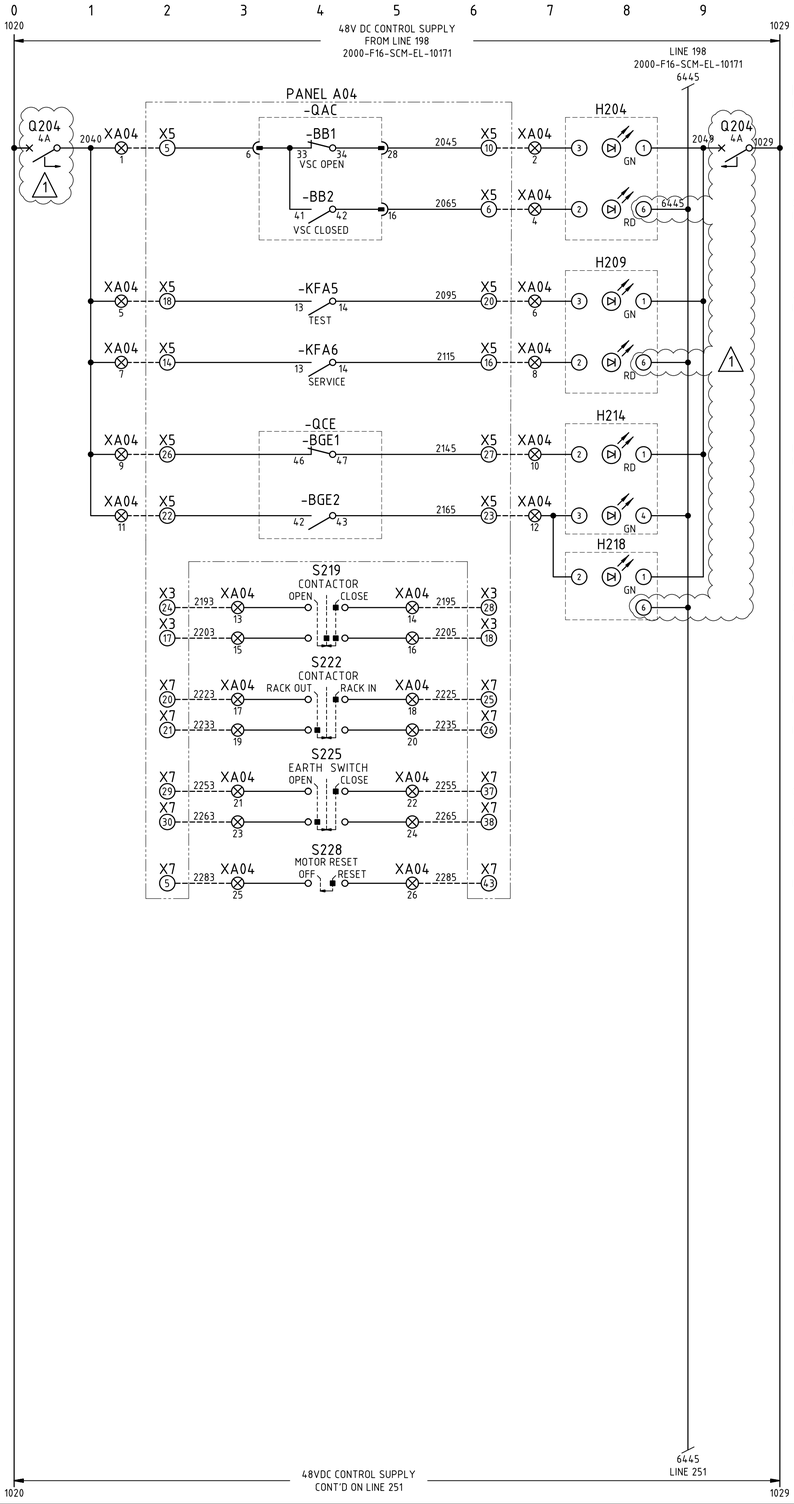


PANEL A04
F16AG423-VS
2000-EL003-F16-10016

CONTACTOR OPEN INDICATION

CONTACTOR CLOSED INDICATION

CONTACTOR RACKED OUT INDICATION

CONTACTOR RACKED IN INDICATION

EARTH SWITCH OPEN INDICATION

EARTH SWITCH CLOSED INDICATION

EARTH SYMBOL INDICATION

CLOSE CONTACTOR COMMAND

OPEN CONTACTOR COMMAND


RACK IN CONTACTOR COMMAND

RACK OUT CONTACTOR COMMAND

CLOSE EARTH SWITCH COMMAND

OPEN EARTH SWITCH COMMAND

MOTOR RESET

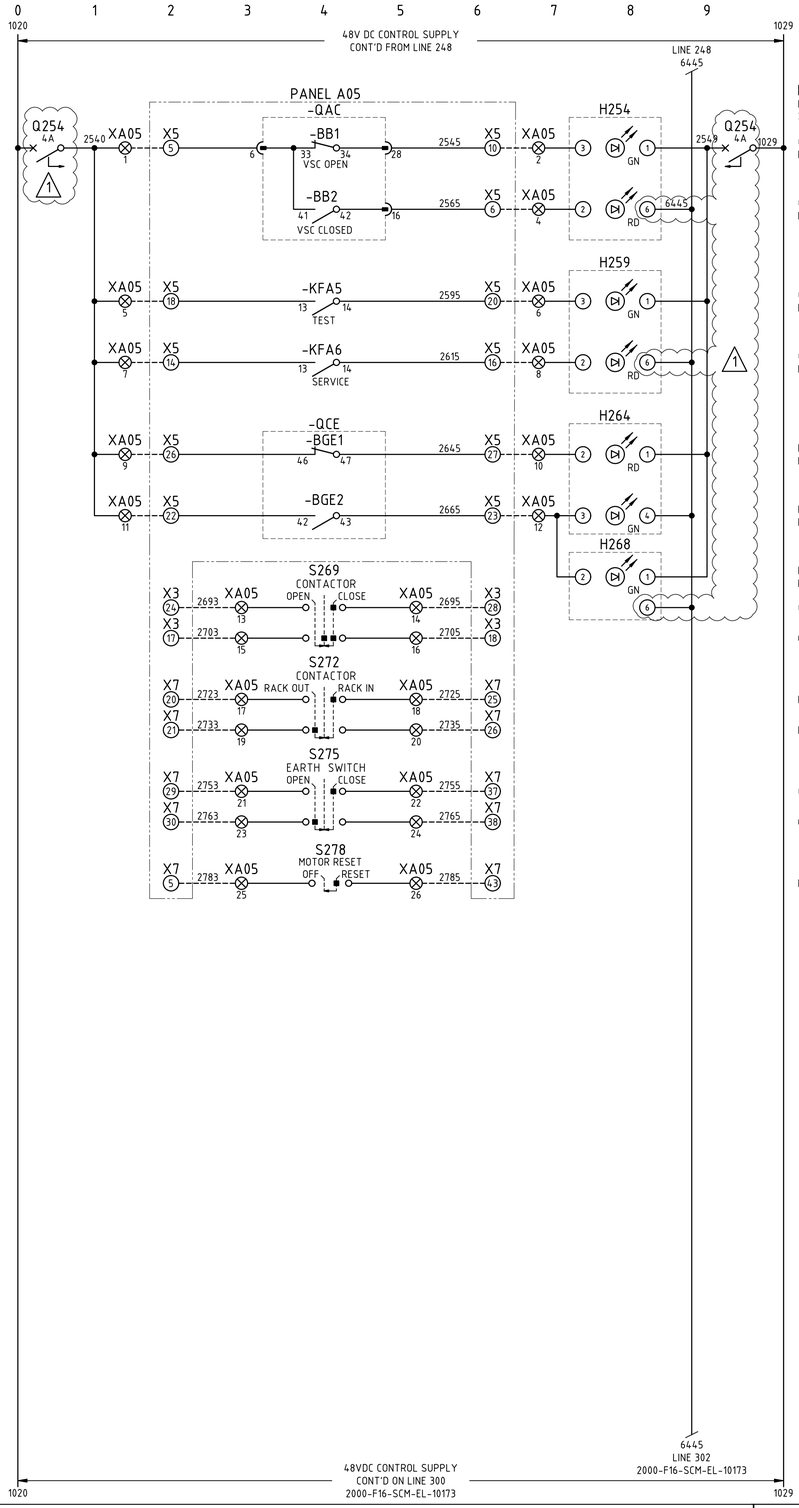

PANEL A05
F16AG424-VS
2000-EL003-F16-10016

CONTACTOR OPEN INDICATION

CONTACTOR CLOSED INDICATION

CONTACTOR RACKED OUT INDICATION

CONTACTOR RACKED IN INDICATION

EARTH SWITCH OPEN INDICATION

EARTH SWITCH CLOSED INDICATION

EARTH SYMBOL INDICATION

CLOSE CONTACTOR COMMAND

OPEN CONTACTOR COMMAND

RACK IN CONTACTOR COMMAND

RACK OUT CONTACTOR COMMAND

CLOSE EARTH SWITCH COMMAND

OPEN EARTH SWITCH COMMAND

MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- RSP TERMINAL
- HV SWITCHBOARD TERMINAL
- DEVICE TERMINAL

2000-F16-SCM-EL-10172_Rev1

F16sw011-lcs 11kV switchboard remote switching panel schematic diagram sheet 2