

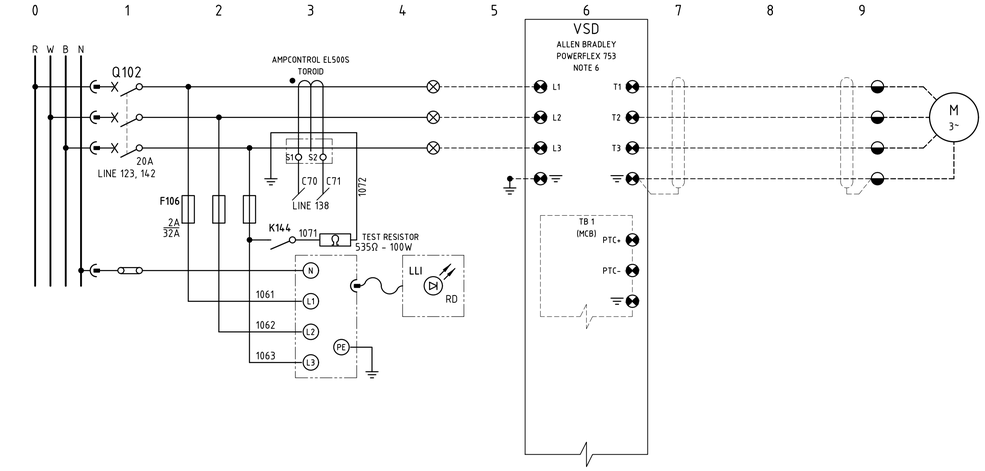


F16-PP-631
ROUGHER 2 & 3
CONCENTRATE
SAMPLE PUMP
5.5 kW

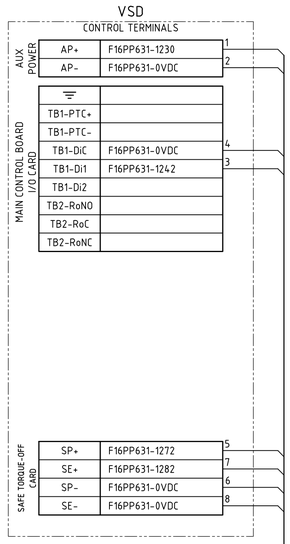

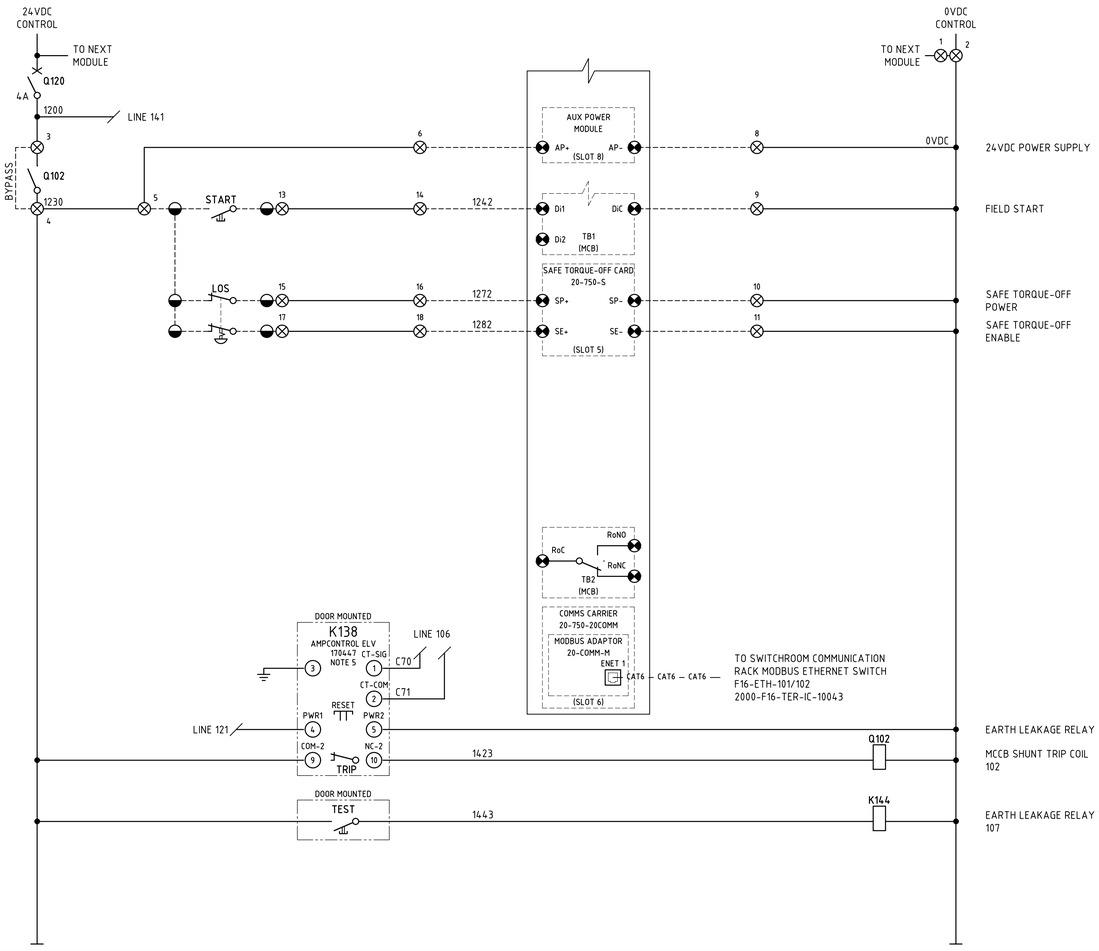

24VDC POWER SUPPLY

FIELD START

SAFE TORQUE-OFF POWER

SAFE TORQUE-OFF ENABLE

TO SWITCHROOM COMMUNICATION RACK MODBUS ETHERNET SWITCH
F16-ETH-101/102
2000-F16-TER-IC-10043

EARTH LEAKAGE RELAY

MCCB SHUNT TRIP COIL
102

EARTH LEAKAGE RELAY TEST
107

CABLE ZONE
24VDC TERMINALS

24VDC LOOPED POWER
NEXT MODULE PREV MODULE

Q120	4A	2840	
1		2850	
2		2850	
3		1200	
4		1230	
5		F16PP631-1230	1
6		F16PP631-1230	1
7		F16PP631-1230	
8		F16PP631-0VDC	2
9		F16PP631-0VDC	4
10		F16PP631-0VDC	6
11		F16PP631-0VDC	8
12		F16PP631-0VDC	
13		F16PP631-1242	2
14		F16PP631-1242	3
15		F16PP631-1272	3
16		F16PP631-1272	5
17		F16PP631-1282	4
18		F16PP631-1282	7
19		SPARE	9
20		SPARE	10
21			
22			
23			
24			
25			
26		EARTH	GNYE
27		EARTH	GNYE


COMMISSIONING BYPASS

NOTE 2

F16PP631VS-C1
1.5 mm² 10C+E

F16PP631LCS-C1
1.5 mm² 4C+E

F16PP631-LCS
LOCAL CONTROL STATION

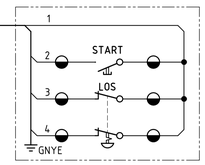


NOTES

1. TERMINALS ON TERMINAL STRIPS ABOVE 50VAC SHALL HAVE A SEPARATE PERSPEX SHROUD AND SHALL BE LABELLED "DANGER xxxVAC".
2. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. F16PP631-1200, UNLESS OTHERWISE NOTED.
3. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.
4. AMPCONTROL 115437
   100/1A TOROID.
5. EARTH LEAKAGE RELAY (ELV) USER INTERFACE TO BE MOUNTED ON MCC MODULE DOOR. RELAY ENERGISED (NORMALLY CLOSED CONTACT OPEN) IN NORMAL OPERATION.
6. VSD SHALL BE SIZE FRAME 2 AND ABOVE.

LEGEND

- 00/01/00 — DCS DIGITAL INPUT
- 00/02/00 — DCS DIGITAL OUTPUT
- ⊗ — MCC TERMINAL
- ◓ — VSD TERMINAL
- ◒ — FIELD TERMINAL
- ◑ — DCS OR I/O TERMINAL
- ◧ — MARSHALLING TERMINAL
- (x) — DEVICE TERMINAL
- ⊗cc — INDICATION LAMP, cc = COLOUR

TERMINATION LEGEND

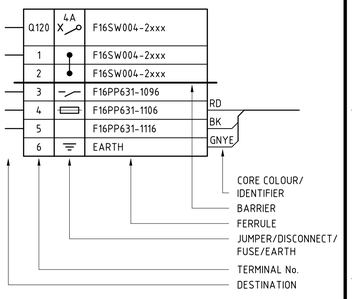

2000-F16-SCM-EL-10229_Rev2

F16-SW-004 - F16-PP-631 rougher 2 & 3 concentrate sample pump - schematic and termination diagram