
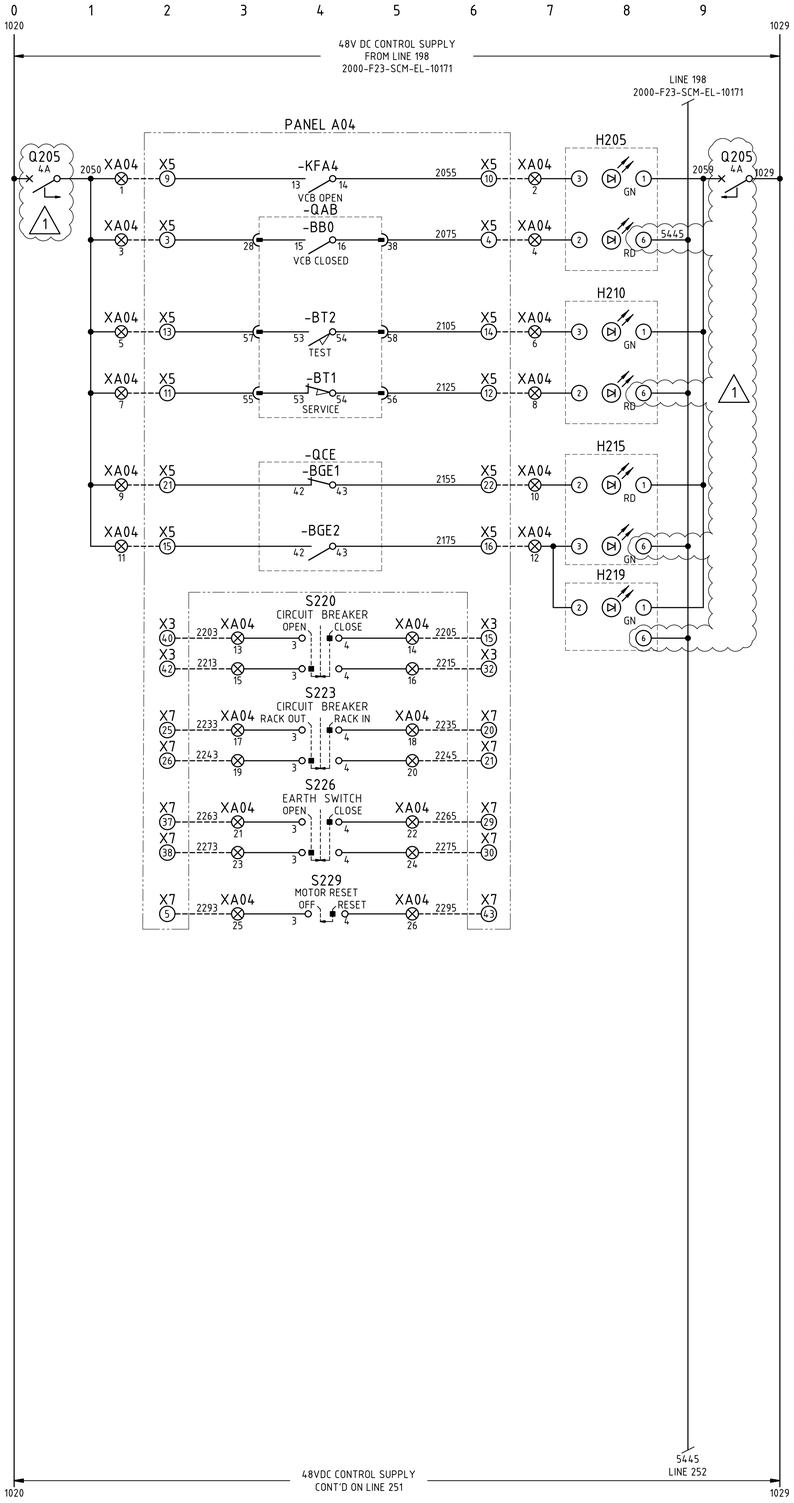


PANEL A04
F23-SW-016 INCOMER
2000-EL003-F16-10005

CIRCUIT BREAKER OPEN INDICATION
CIRCUIT BREAKER CLOSED INDICATION
CIRCUIT BREAKER RACKED OUT INDICATION
CIRCUIT BREAKER RACKED IN INDICATION
EARTH SWITCH OPEN INDICATION
EARTH SWITCH CLOSED INDICATION
EARTH SYMBOL INDICATION
CLOSE BREAKER COMMAND
OPEN BREAKER COMMAND
RACK IN BREAKER COMMAND
RACK OUT BREAKER COMMAND
CLOSE EARTH SWITCH COMMAND
OPEN EARTH SWITCH COMMAND
MOTOR RESET

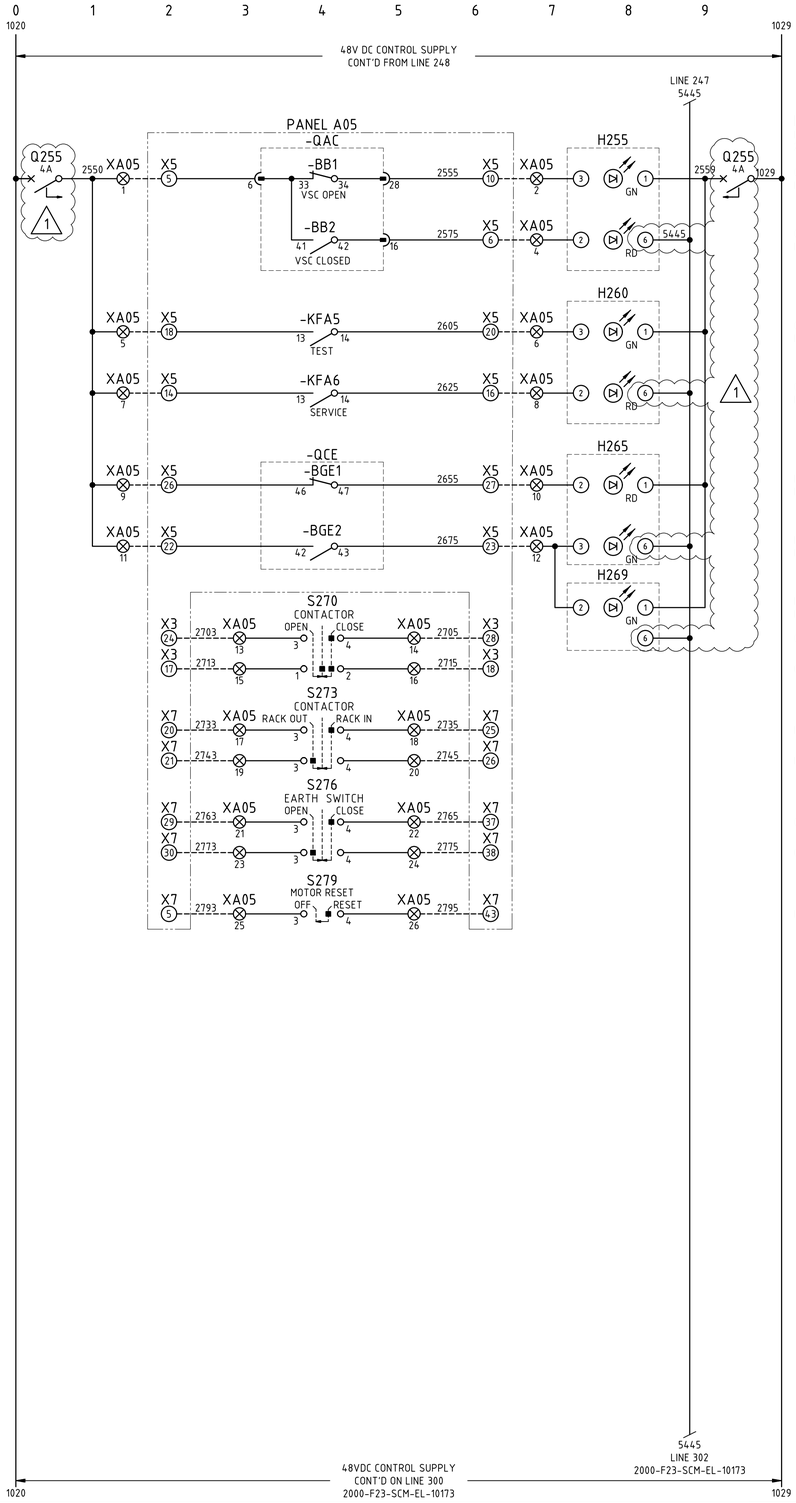

PANEL A05
F23PP468-VS FEEDER
2000-EL003-F16-10011

CONTACTOR OPEN INDICATION
CONTACTOR CLOSED INDICATION
CONTACTOR RACKED OUT INDICATION
CONTACTOR RACKED IN INDICATION
EARTH SWITCH OPEN INDICATION
EARTH SWITCH CLOSED INDICATION
EARTH SYMBOL INDICATION
CLOSE CONTACTOR COMMAND
OPEN CONTACTOR COMMAND
RACK IN CONTACTOR COMMAND
RACK OUT CONTACTOR COMMAND
CLOSE EARTH SWITCH COMMAND
OPEN EARTH SWITCH COMMAND
MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- RSP TERMINAL
- HV SWITCHBOARD TERMINAL
- DEVICE TERMINAL

2000-F23-SCM-EL-10172_Rev1

F23SW016-LCS - 11kV SWITCHBOARD REMOTE SWITCHING PANEL - SCHEMATIC DIAGRAM SHEET 2