
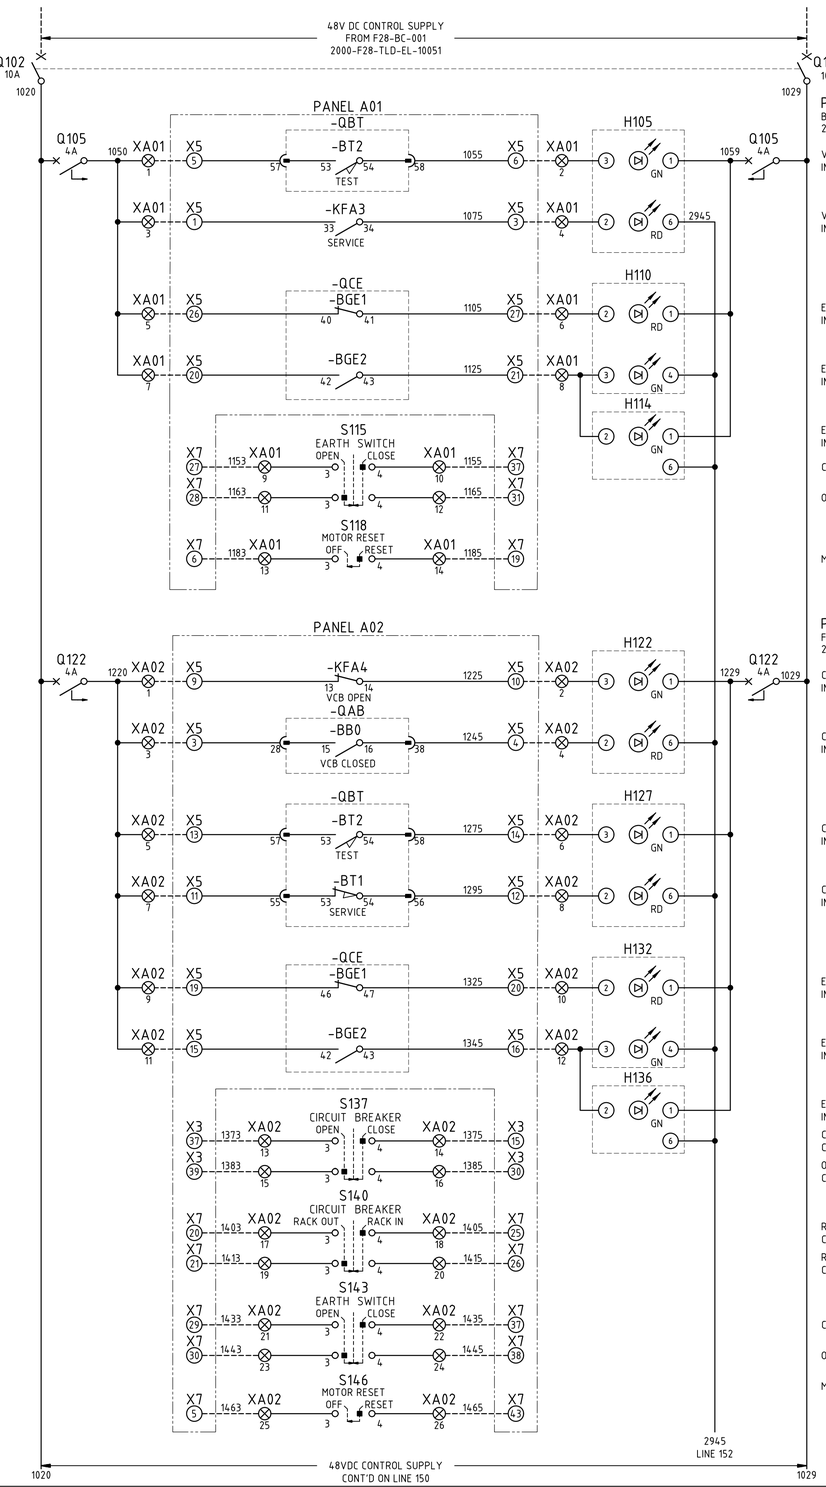


PANEL A01
BUS VT & EARTH SWITCH
2000-EL003-F16-10001

- VT RACKED OUT INDICATION
- VT RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

PANEL A02
F28-MUF-402 FEEDER
2000-EL003-F16-10012

- CIRCUIT BREAKER OPEN INDICATION
- CIRCUIT BREAKER CLOSED INDICATION
- CIRCUIT BREAKER RACKED OUT INDICATION
- CIRCUIT BREAKER RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE CIRCUIT BREAKER COMMAND
- OPEN CIRCUIT BREAKER COMMAND
- RACK IN CIRCUIT BREAKER COMMAND
- RACK OUT CIRCUIT BREAKER COMMAND
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

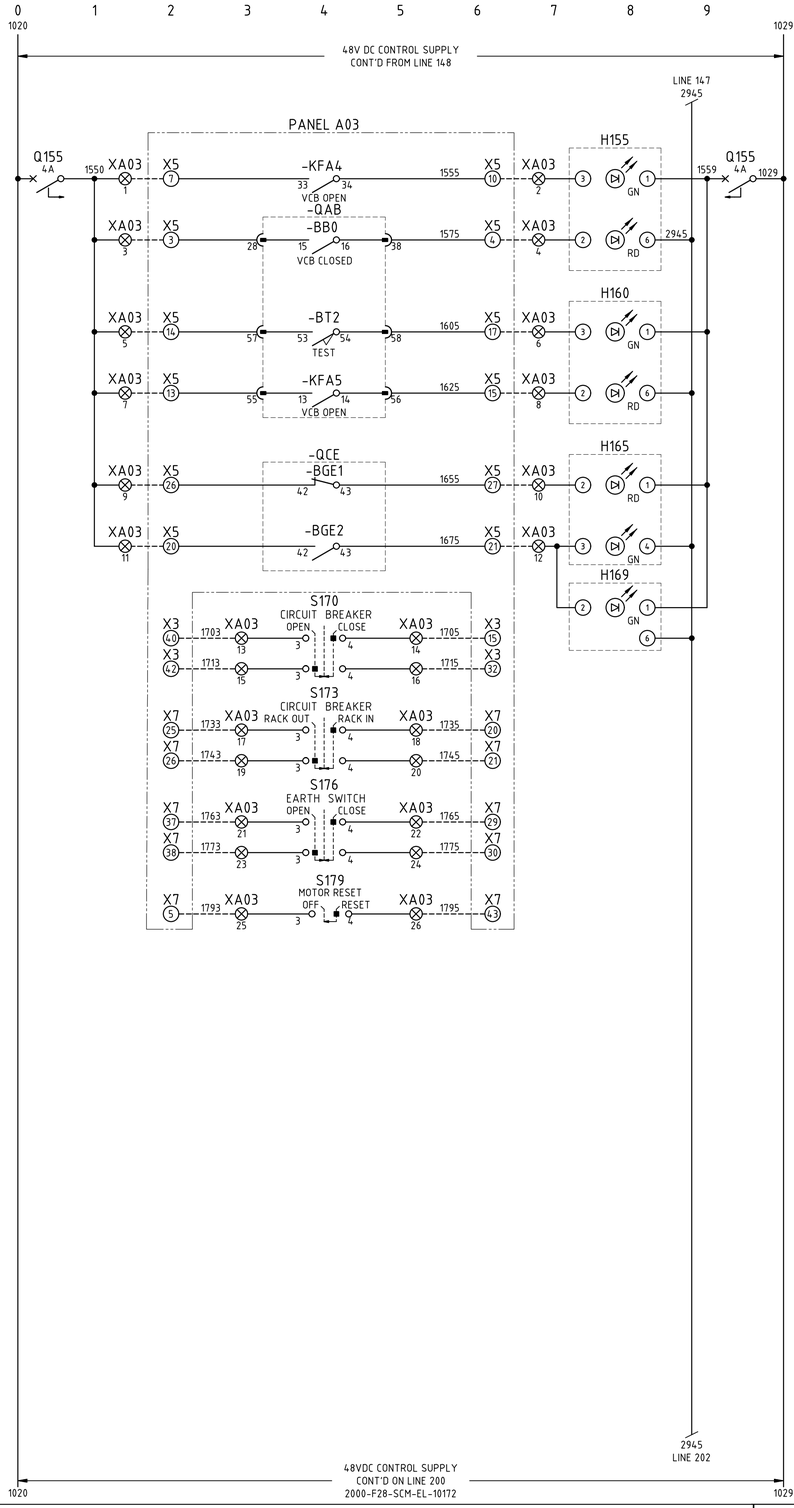

PANEL A03
F28-SW-013 INCOMER
2000-EL003-F16-10005

- CIRCUIT BREAKER OPEN INDICATION
- CIRCUIT BREAKER CLOSED INDICATION
- CIRCUIT BREAKER RACKED OUT INDICATION
- CIRCUIT BREAKER RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE BREAKER COMMAND
- OPEN BREAKER COMMAND
- RACK IN BREAKER COMMAND
- RACK OUT BREAKER COMMAND
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- RSP TERMINAL
- HV SWITCHBOARD TERMINAL
- DEVICE TERMINAL

2000-F28-SCM-EL-10171_Rev2

F28SW013-LCS - 11kV SWITCHBOARD REMOTE SWITCHING PANEL - SCHEMATIC DIAGRAM SHEET 1