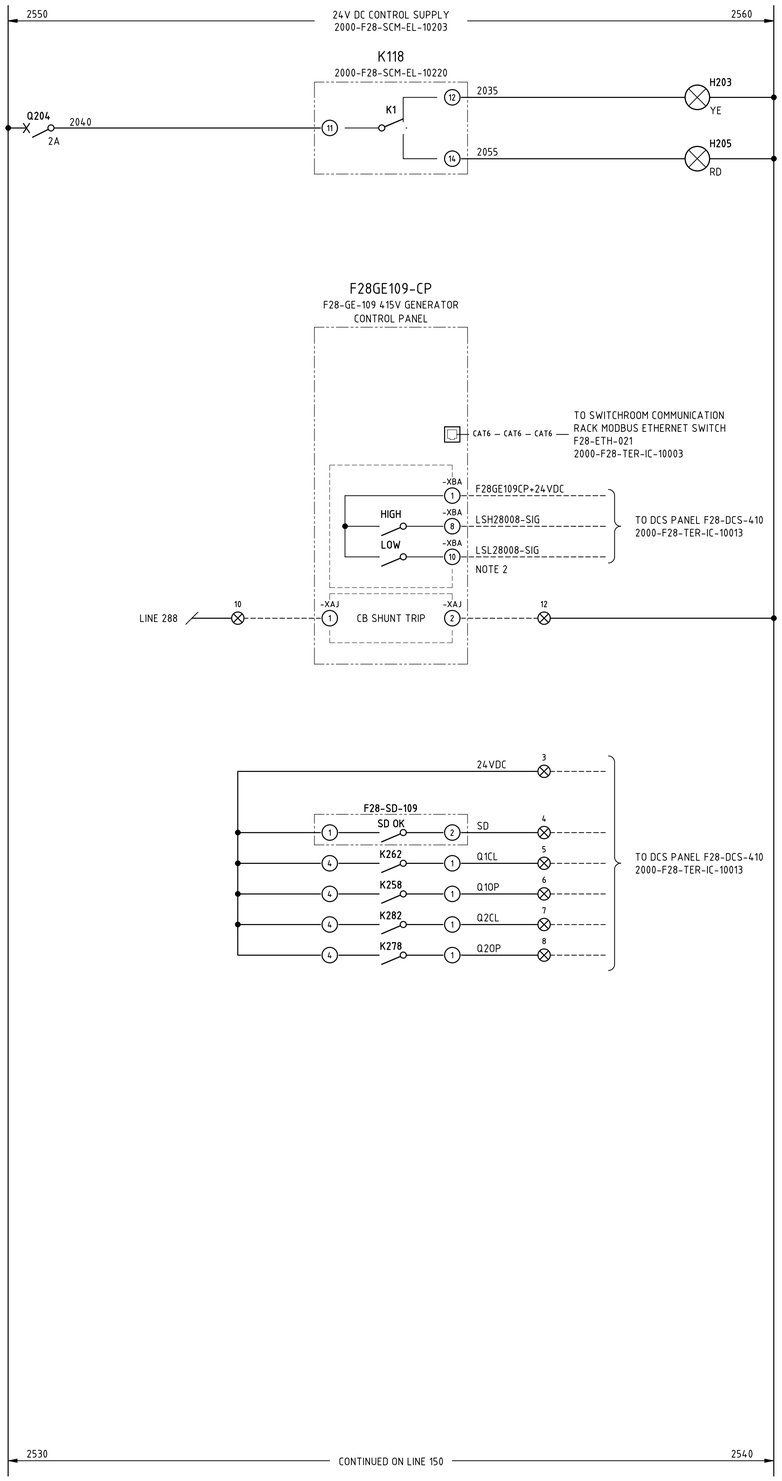


GENERATOR SUPPLY
PHASE RELAY STATUS

GENERATOR SUPPLY PHASE FAULT / NOT READY

GENERATOR SUPPLY PHASE HEALTHY / READY

GENERATOR CONTROL
2000-EL019-D04-10001

DCS 24VDC CONTROL SUPPLY

GENERATOR FUEL LEVEL HIGH

GENERATOR FUEL LEVEL LOW

GENERATOR REMOTE SHUNT TRIP COMMAND

DCS 24VDC CONTROL SUPPLY


GENERATOR SUPPLY SURGE DIVERTER F28-SD-109 HEALTHY

MAINS SUPPLY CIRCUIT BREAKER CLOSED

MAINS SUPPLY CIRCUIT BREAKER OPENED

GENSET SUPPLY CIRCUIT BREAKER CLOSED

GENSET SUPPLY CIRCUIT BREAKER OPENED

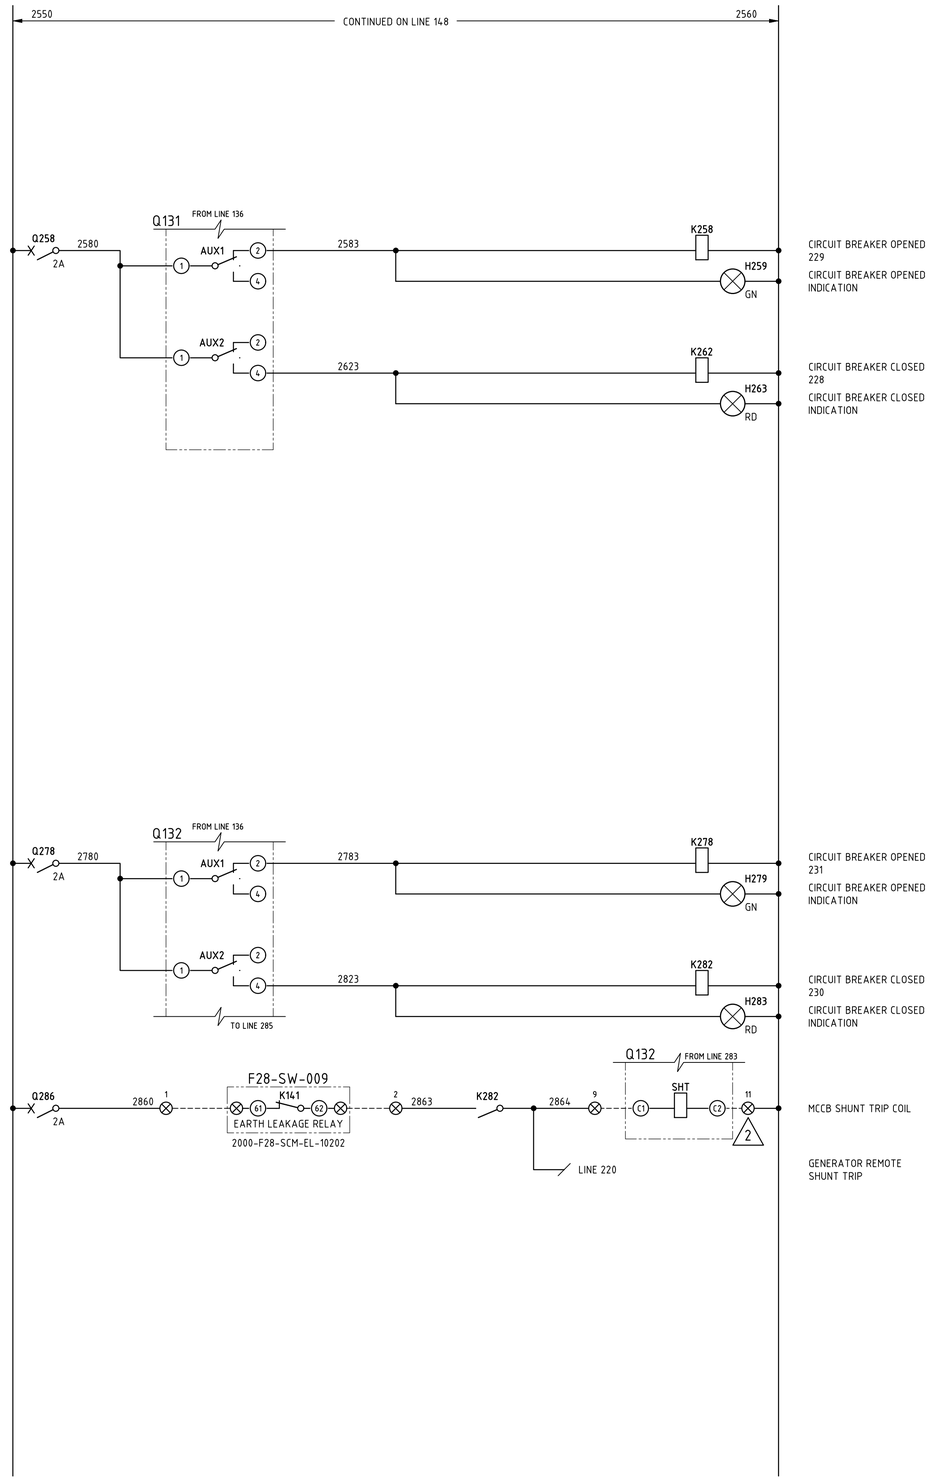

CIRCUIT BREAKER OPENED 229

CIRCUIT BREAKER OPENED INDICATION

CIRCUIT BREAKER CLOSED 228

CIRCUIT BREAKER CLOSED INDICATION

CIRCUIT BREAKER OPENED 231

CIRCUIT BREAKER OPENED INDICATION

CIRCUIT BREAKER CLOSED 230

CIRCUIT BREAKER CLOSED INDICATION

MCCB SHUNT TRIP COIL

GENERATOR REMOTE SHUNT TRIP

NOTES

1. REFER TO NOTES ON SCHEMATIC DIAGRAM SHEET 1
2. GENERATOR FERRULES TO BE PREFIXED WITH F28GE109-xxx

LEGEND

- 00/01/00 — DCS DIGITAL INPUT
- 00/02/00 — DCS DIGITAL OUTPUT
- MCC TERMINAL
- VSD TERMINAL
- FIELD TERMINAL
- DCS OR I/O TERMINAL
- MARSHALLING TERMINAL
- DEVICE TERMINAL
- INDICATION LAMP cc = COLOUR

2000-F28-SCM-EL-10221_Rev3

F28-SW-109 - F28-SW-109 415V essential switchboard incomer - schematic diagram sheet 2