
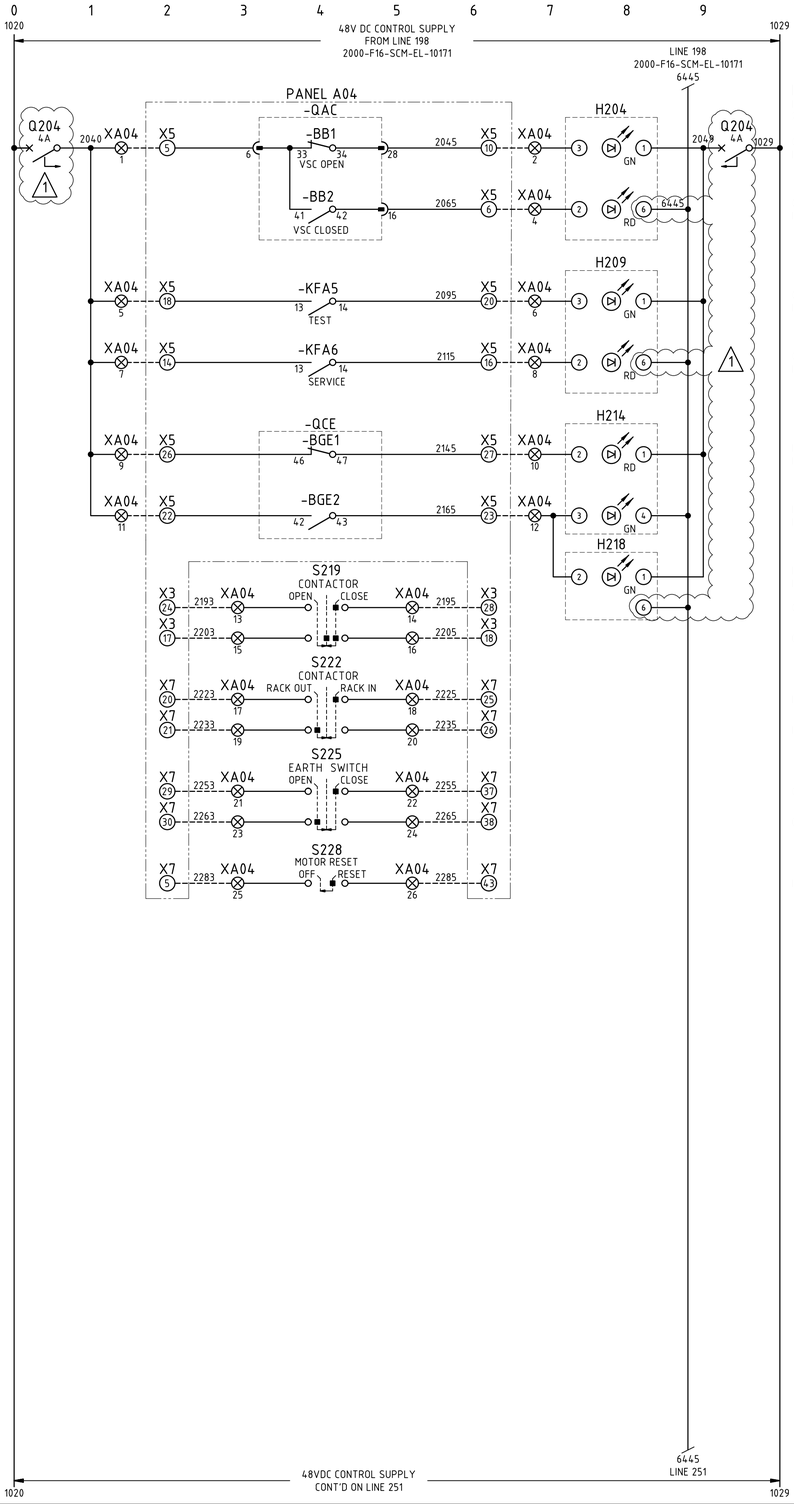


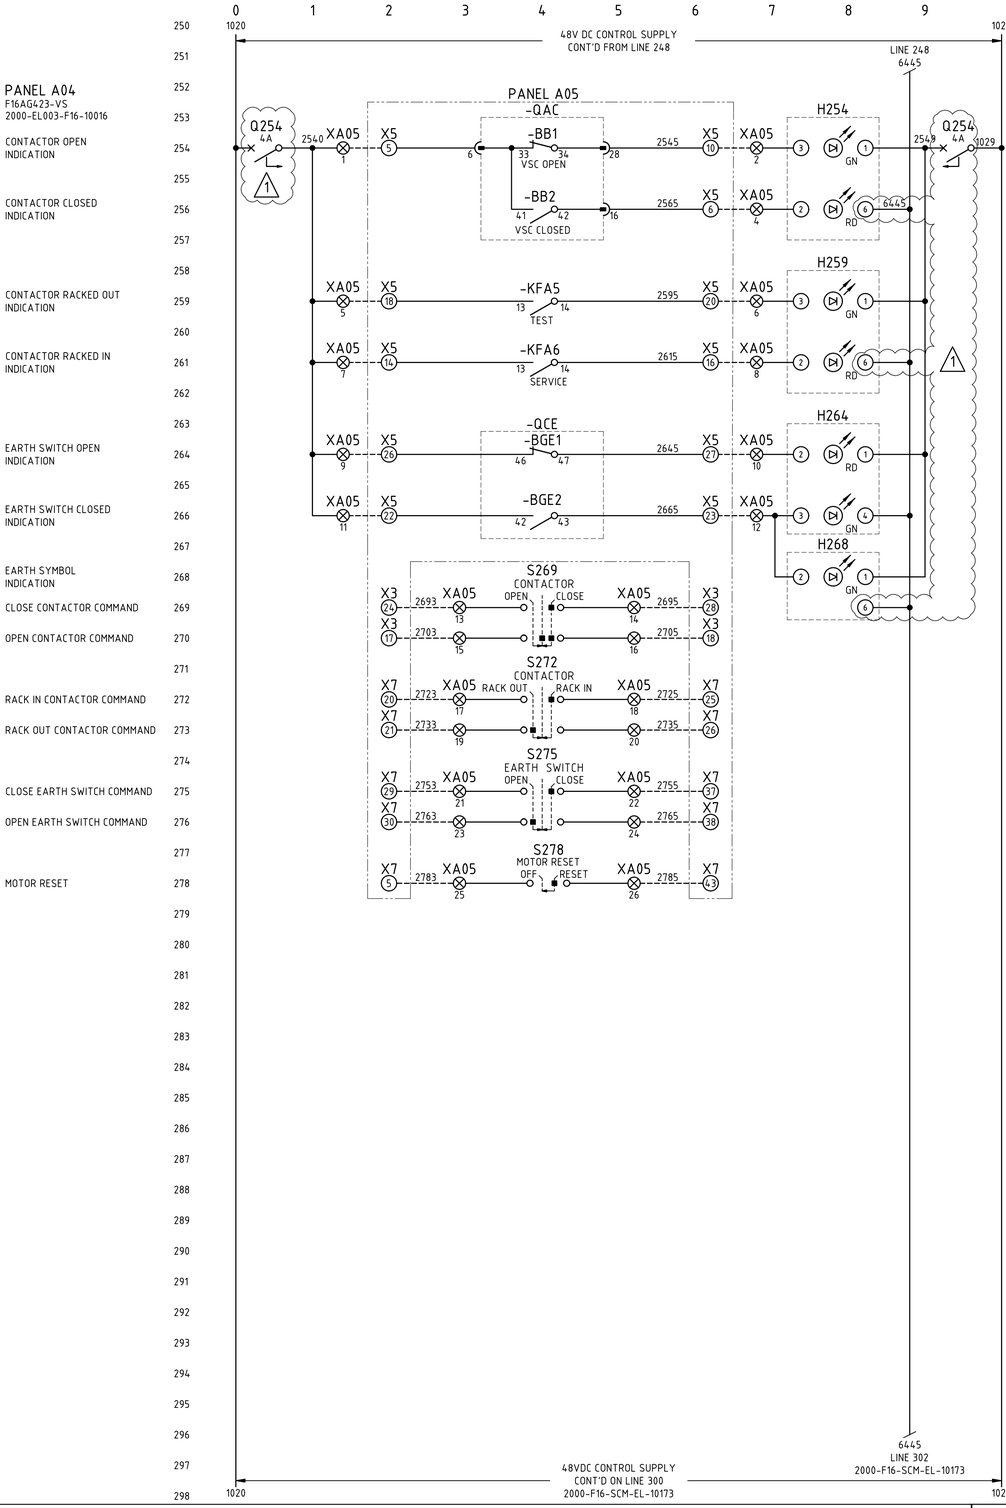

PANEL A04
F16AG423-VS
2000-EL003-F16-10016

CONTACTOR OPEN INDICATION
CONTACTOR CLOSED INDICATION
CONTACTOR RACKED OUT INDICATION
CONTACTOR RACKED IN INDICATION
EARTH SWITCH OPEN INDICATION
EARTH SWITCH CLOSED INDICATION
EARTH SYMBOL INDICATION
CLOSE CONTACTOR COMMAND
OPEN CONTACTOR COMMAND
RACK IN CONTACTOR COMMAND
RACK OUT CONTACTOR COMMAND
CLOSE EARTH SWITCH COMMAND
OPEN EARTH SWITCH COMMAND
MOTOR RESET

PANEL A05
F16AG424-VS
2000-EL003-F16-10016

CONTACTOR OPEN INDICATION
CONTACTOR CLOSED INDICATION
CONTACTOR RACKED OUT INDICATION
CONTACTOR RACKED IN INDICATION
EARTH SWITCH OPEN INDICATION
EARTH SWITCH CLOSED INDICATION
EARTH SYMBOL INDICATION
CLOSE CONTACTOR COMMAND
OPEN CONTACTOR COMMAND
RACK IN CONTACTOR COMMAND
RACK OUT CONTACTOR COMMAND
CLOSE EARTH SWITCH COMMAND
OPEN EARTH SWITCH COMMAND
MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- RSP TERMINAL
- HV SWITCHBOARD TERMINAL
- DEVICE TERMINAL

2000-F16-SCM-EL-10172_Rev1

F16sw011-lcs 11kV switchboard remote switching panel schematic diagram sheet 2

O:\CAD PROJECTS\235 NORTHERN STAR RESOURCES LTD\23517 KCGM GROWTH PROJECT\03 DELIVERABLES\ELVF16 - ROUGHER & SCAVENGER FLOTATION\2000-F16-SCM-EL-10172.DWG 09SEP25 6:44AM HOTSEAT04