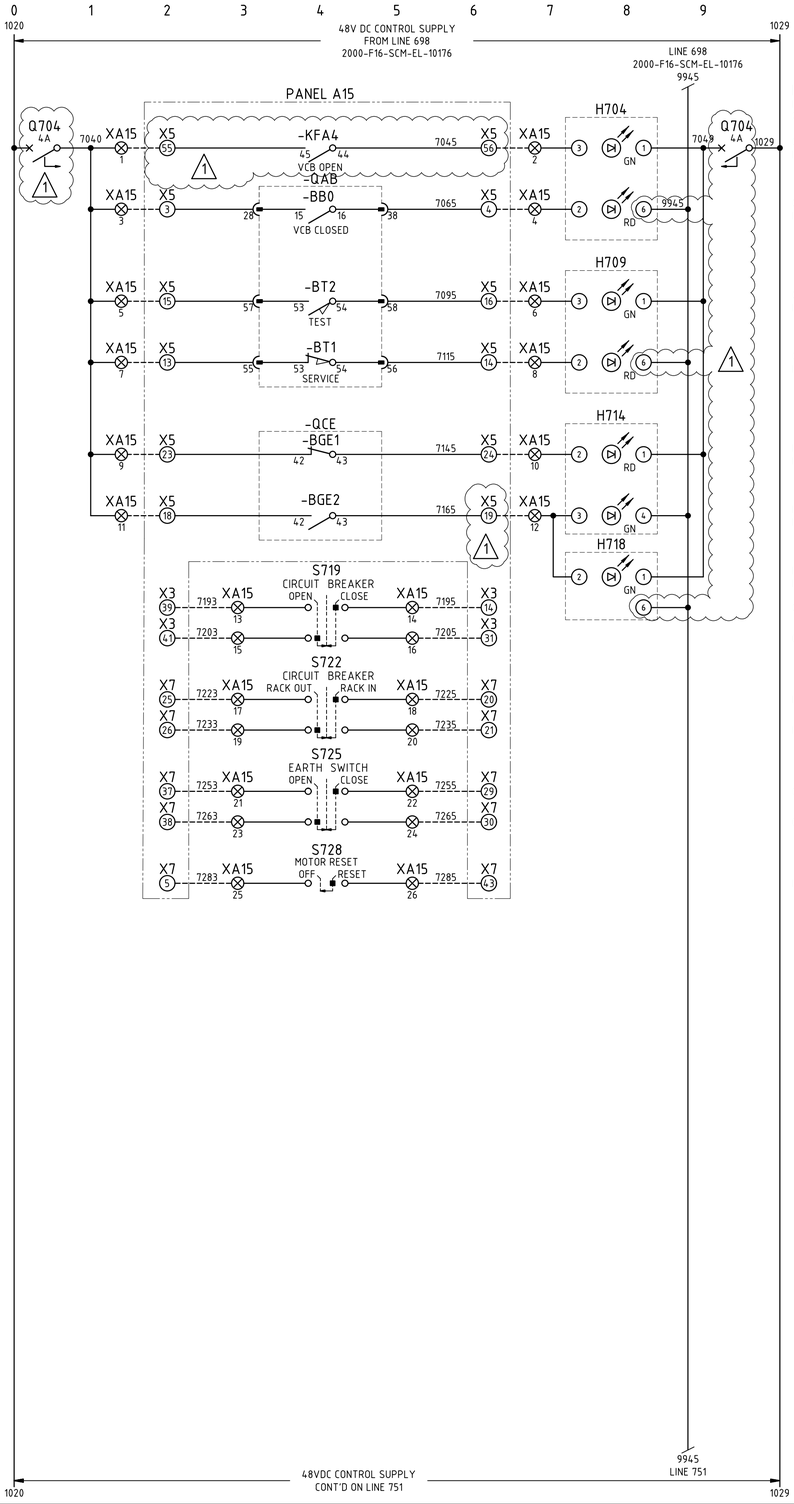


PANEL A15
F16-SW-011 GENERATOR INCOMER
2000-EL003-F16-10010

CIRCUIT BREAKER OPEN INDICATION

CIRCUIT BREAKER CLOSED INDICATION

CIRCUIT BREAKER RACKED OUT INDICATION

CIRCUIT BREAKER RACKED IN INDICATION

EARTH SWITCH OPEN INDICATION

EARTH SWITCH CLOSED INDICATION

EARTH SYMBOL INDICATION

CLOSE BREAKER COMMAND

OPEN BREAKER COMMAND


RACK IN BREAKER COMMAND

RACK OUT BREAKER COMMAND

CLOSE EARTH SWITCH COMMAND

OPEN EARTH SWITCH COMMAND

MOTOR RESET

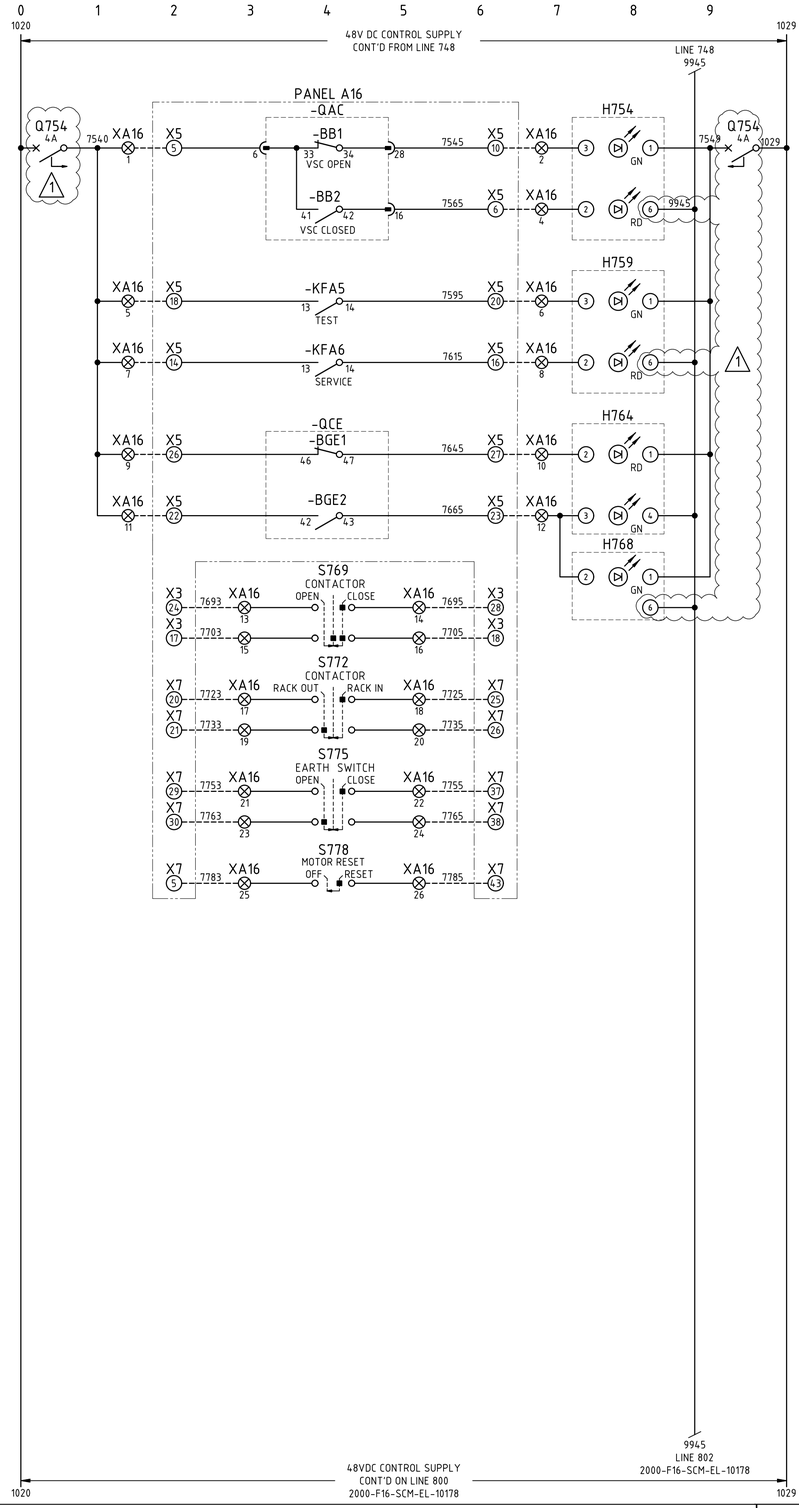

PANEL A16
F24PW417-VS
2000-EL003-F16-10011

CONTACTOR OPEN INDICATION

CONTACTOR CLOSED INDICATION

CONTACTOR RACKED OUT INDICATION

CONTACTOR RACKED IN INDICATION

EARTH SWITCH OPEN INDICATION

EARTH SWITCH CLOSED INDICATION

EARTH SYMBOL INDICATION

CLOSE CONTACTOR COMMAND

OPEN CONTACTOR COMMAND

RACK IN CONTACTOR COMMAND

RACK OUT CONTACTOR COMMAND

CLOSE EARTH SWITCH COMMAND

OPEN EARTH SWITCH COMMAND

MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- RSP TERMINAL
- HV SWITCHBOARD TERMINAL
- DEVICE TERMINAL

2000-F16-SCM-EL-10177_Rev1

F16sw011-lcs 11kV switchboard remote switching panel schematic diagram sheet 7

O:\CAD PROJECTS\235 NORTHERN STAR RESOURCES LTD\23517 KCGM GROWTH PROJECT\03 DELIVERABLES\ELV\F16 - ROUGHER & SCAVENGER FLOTATION\2000-F16-SCM-EL-10177.DWG 09SEP25 6:47AM HOTSEAT04