
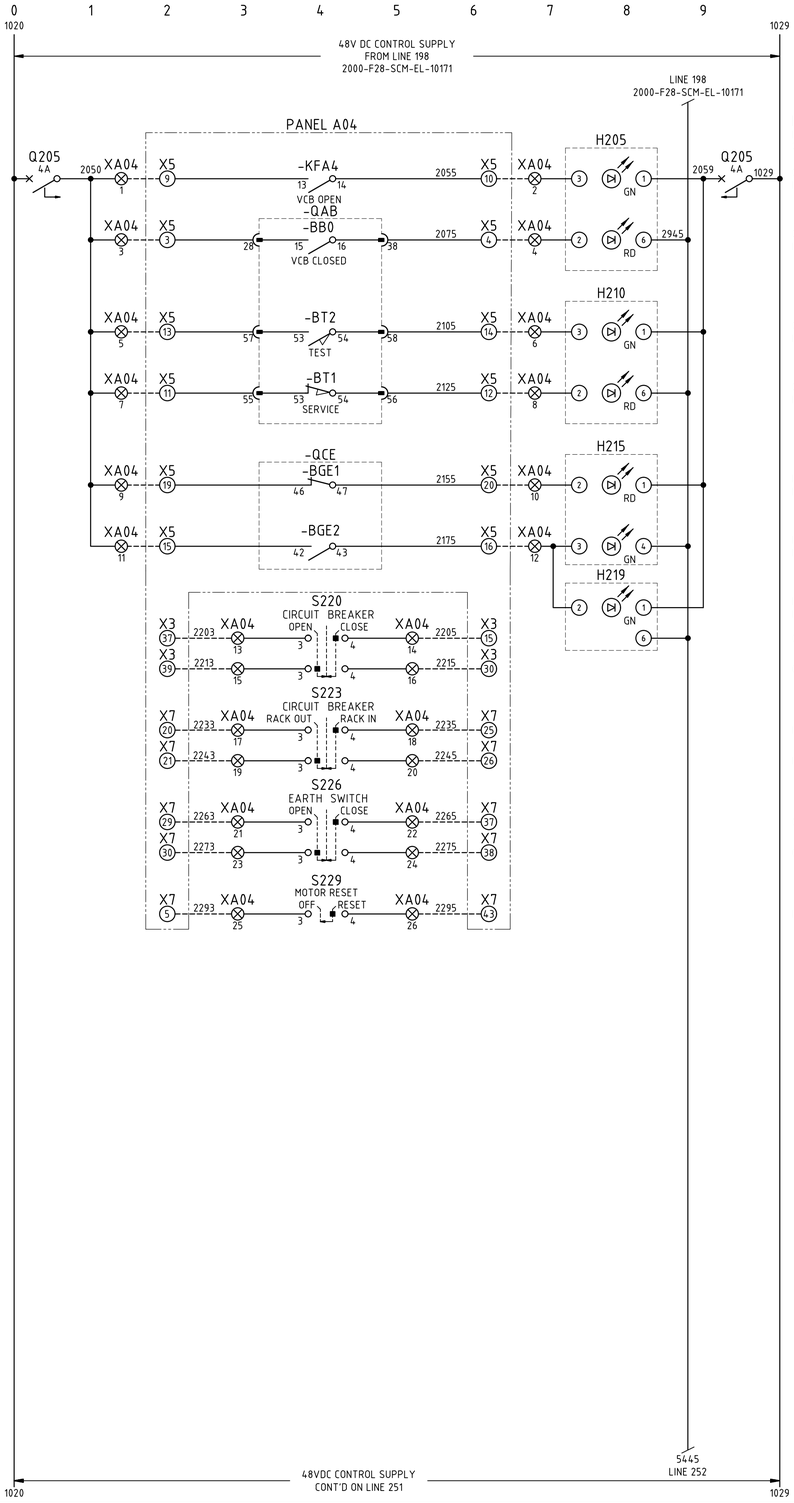


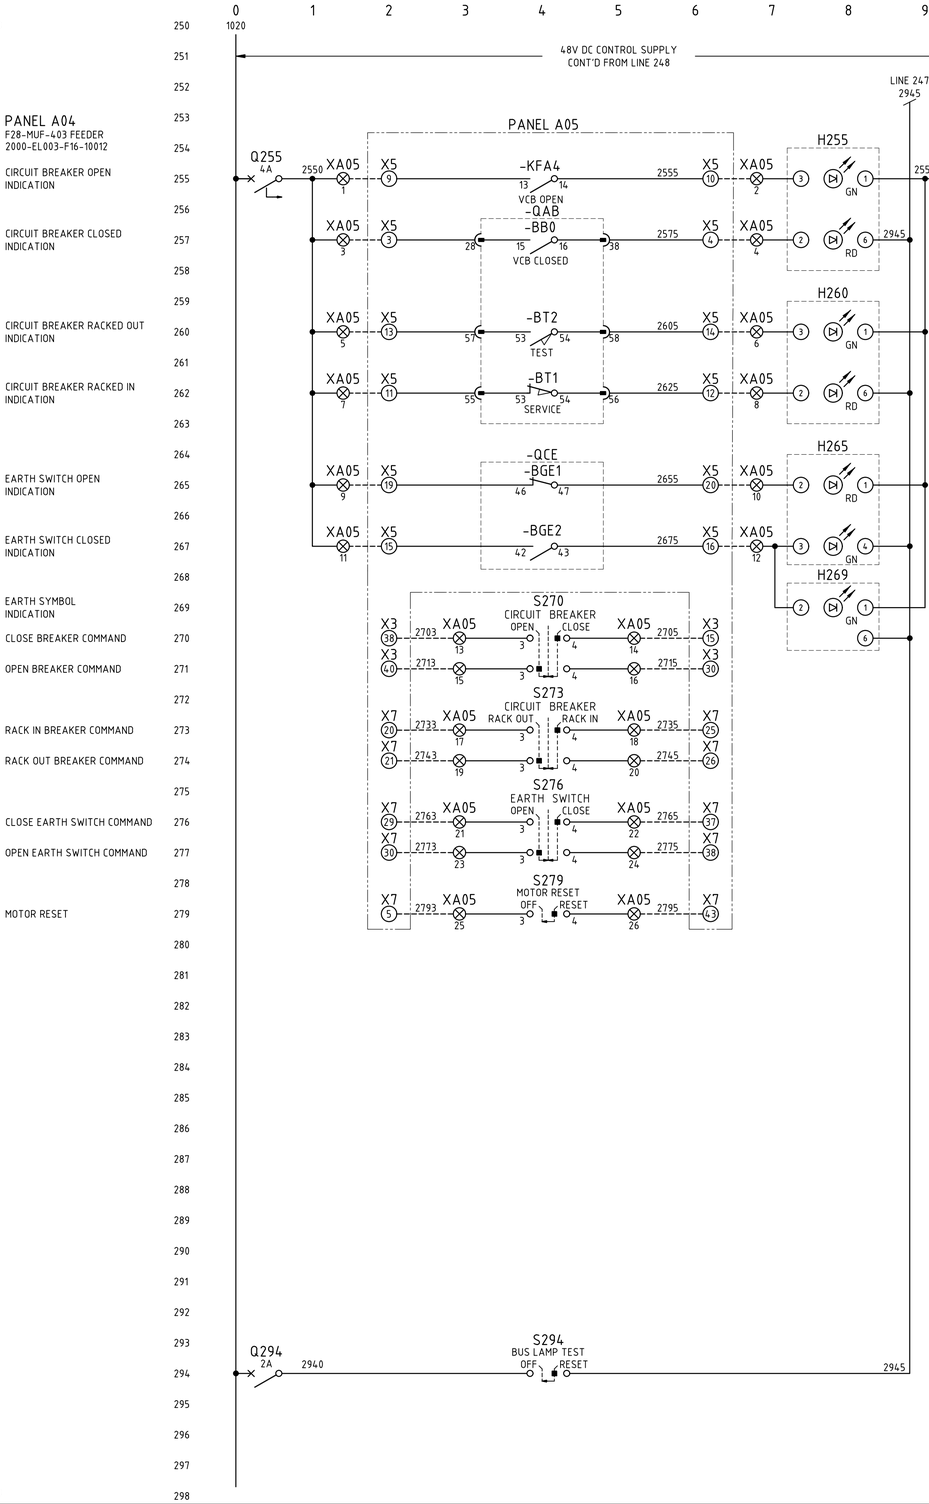

PANEL A04
F28-MUF-403 FEEDER
2000-EL003-F16-10012

- CIRCUIT BREAKER OPEN INDICATION
- CIRCUIT BREAKER CLOSED INDICATION
- CIRCUIT BREAKER RACKED OUT INDICATION
- CIRCUIT BREAKER RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE BREAKER COMMAND
- OPEN BREAKER COMMAND
- RACK IN BREAKER COMMAND
- RACK OUT BREAKER COMMAND
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

PANEL A05
SPARE FEEDER
2000-EL003-F16-10013

- CIRCUIT BREAKER OPEN INDICATION
- CIRCUIT BREAKER CLOSED INDICATION
- CIRCUIT BREAKER RACKED OUT INDICATION
- CIRCUIT BREAKER RACKED IN INDICATION
- EARTH SWITCH OPEN INDICATION
- EARTH SWITCH CLOSED INDICATION
- EARTH SYMBOL INDICATION
- CLOSE BREAKER COMMAND
- OPEN BREAKER COMMAND
- RACK IN BREAKER COMMAND
- RACK OUT BREAKER COMMAND
- CLOSE EARTH SWITCH COMMAND
- OPEN EARTH SWITCH COMMAND
- MOTOR RESET

NOTES

1. WIRE NUMBER FERRULES ON TERMINAL STRIP SHALL BE PREFIXED WITH EQUIPMENT NUMBER e.g. FxxPPxxx-1200, UNLESS OTHERWISE NOTED.
2. EACH WIRE SHALL BE IDENTIFIED AT BOTH ENDS WITH FERRULES.

LEGEND

- ⊗ RSP TERMINAL
- Xx (xx) HV SWITCHBOARD TERMINAL
- (x) DEVICE TERMINAL

2000-F28-SCM-EL-10172_Rev2

F28SW013-LCS - 11kV SWITCHBOARD REMOTE SWITCHING PANEL - SCHEMATIC DIAGRAM SHEET 2

O:\CAD PROJECTS\235 NORTHERN STAR RESOURCES LTD\235I7 KCGM GROWTH PROJECT\03 DELIVERABLES\ELV\F28 - ULTRAFINE GRINDING 2 & 3\2000-F28-SCM-EL-10172.DWG 25SEP26 1:51PM ROBINLAW