
## **Installing CP2102 USB Driver V1**

Open Device Manager by pressing Windows Key + X and selecting 'Device Manager'

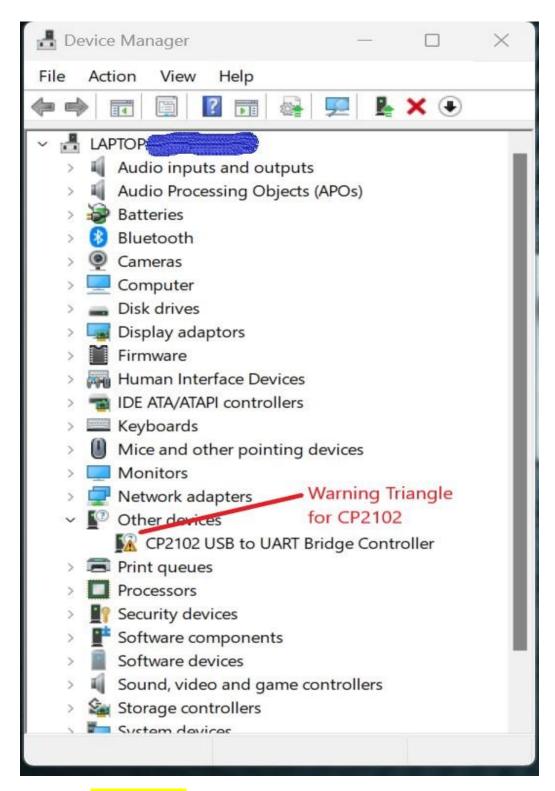

If you see a yellow! triangle labelled CP2102, then drivers require installing.

Note:- the Ports (COM & LPT) may need expanding, to see the device.

## Step 1,


Download the drivers from the link below.

Fow Windows users, select the top one, CP210x Universal Windows Driver

CP210x USB to UART Bridge VCP Drivers - Silicon Labs (silabs.com)


## Step 2,

Navigate to the downloaded file (most likely in Downloads directory) Highlight it by clicking once, then right-click and select 'Extract All' and accept the default directory.

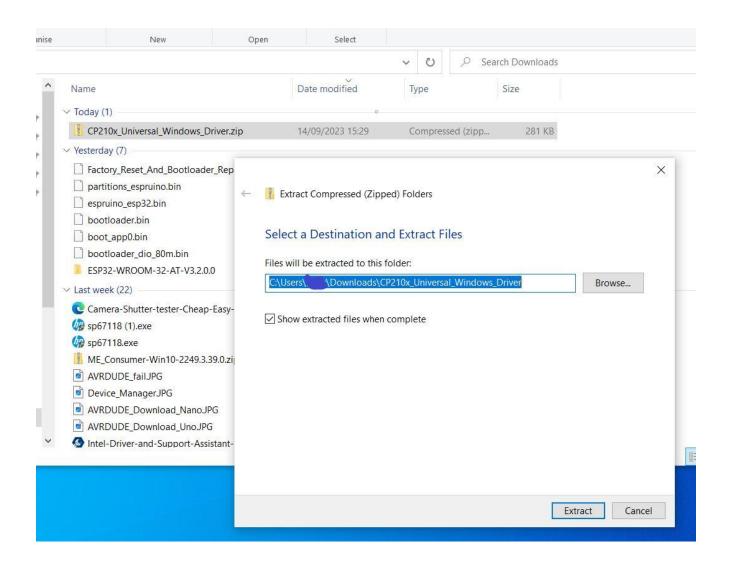

## Step 3,

Go back to Device Manager and right-click on the Yellow! Triangle select 'Update Driver' and then 'Browse my computer for drivers'

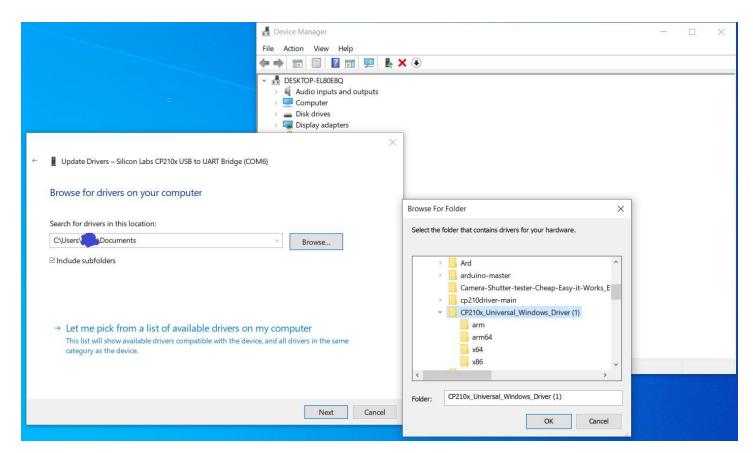

Click 'Browse' and navigate to the Downloads folder, find and click on the folder that was previously downloaded & extracted.

Click 'Ok' and then 'Next; in the previous box and the drivers should be installed.

A computer re-start will be required to complete installation.