


G1-EDU Waist Fastener

Installation Guide Manual V1.0

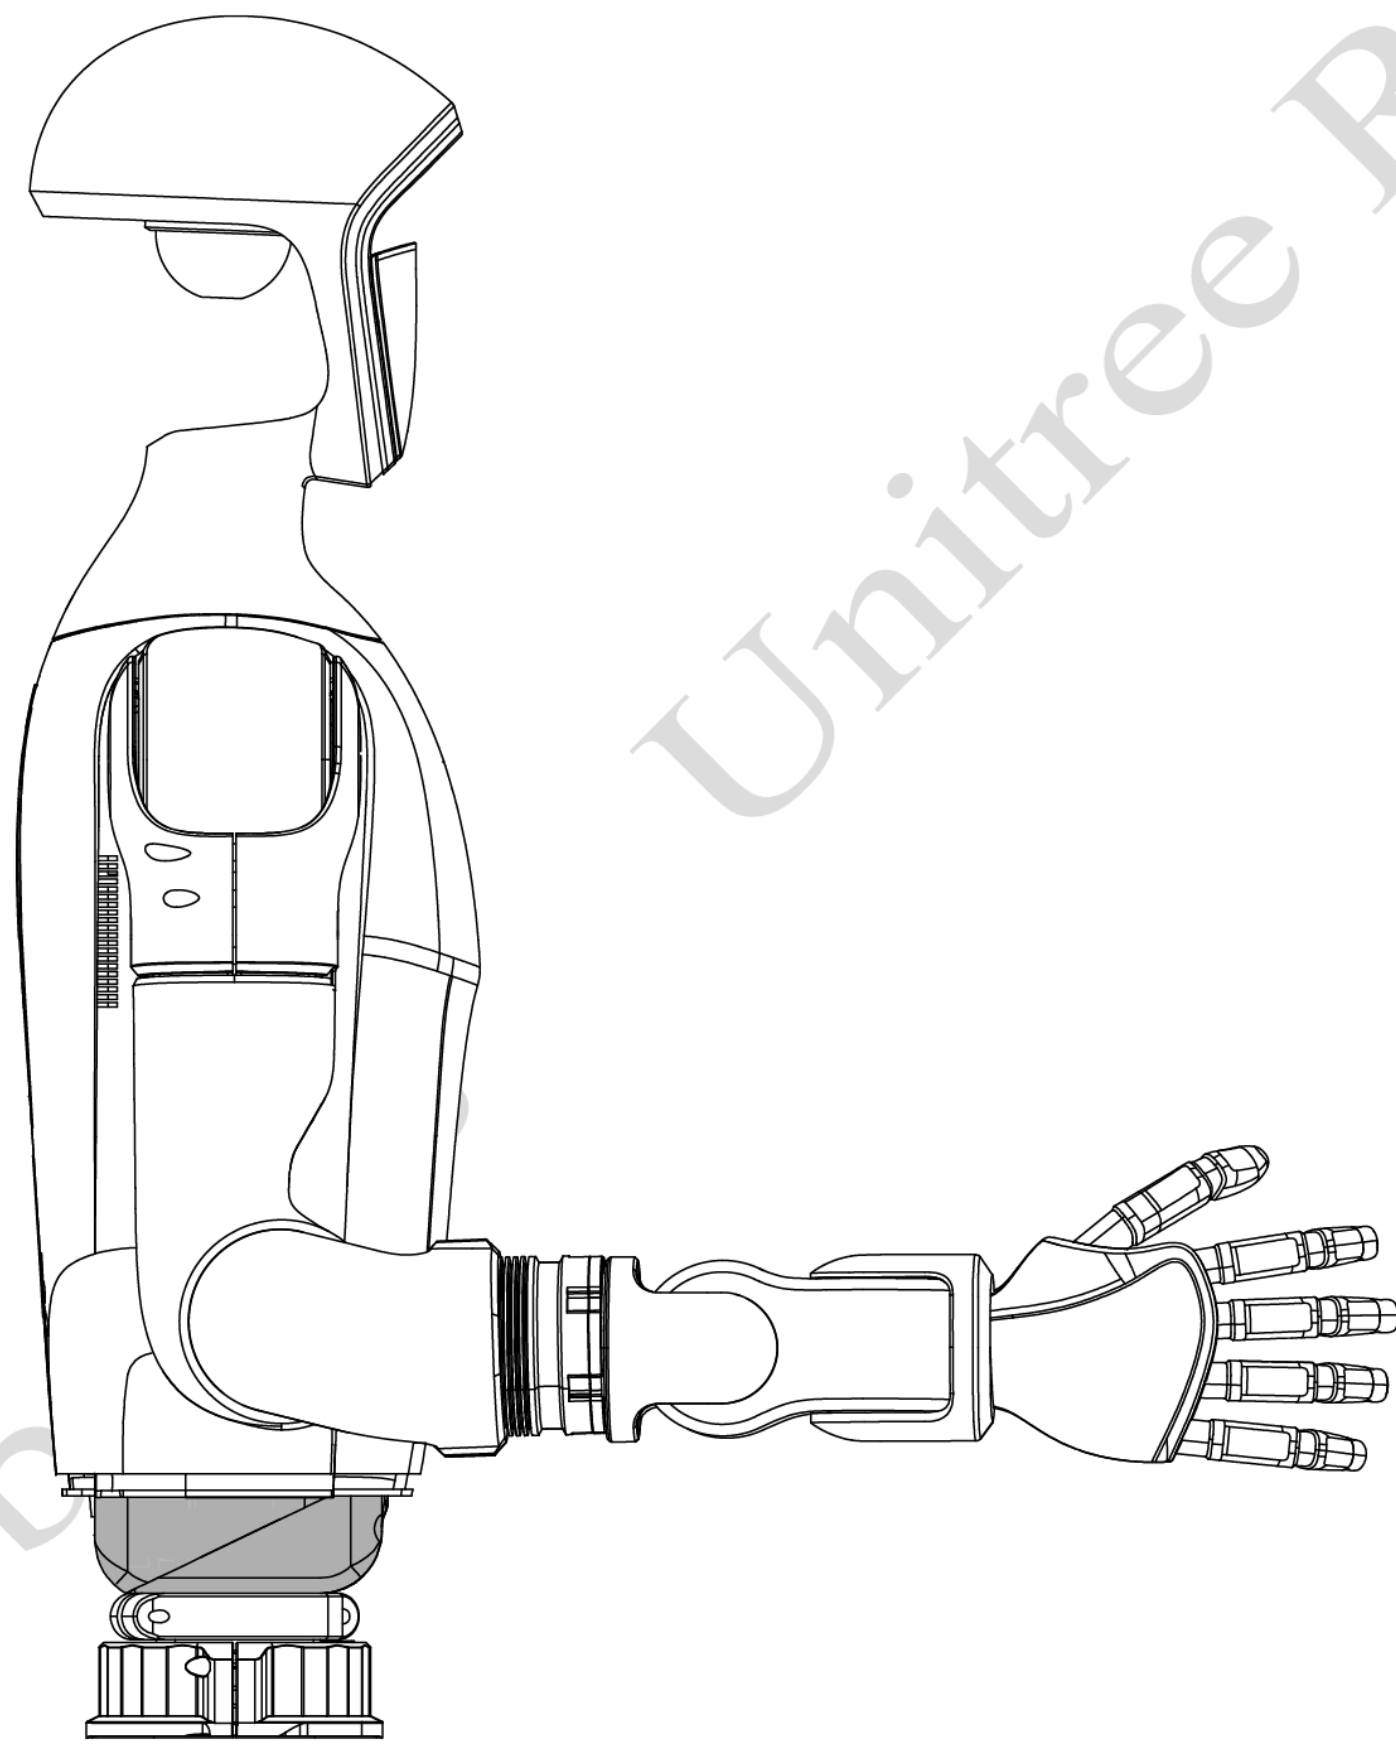


Unitree


This product is a civilian robot. We kindly request that all users refrain from making any dangerous modifications or using the robot in a hazardous manner.

Please visit Unitree Robotics Website for more related terms and policies, and comply with local laws and regulations.


Item List

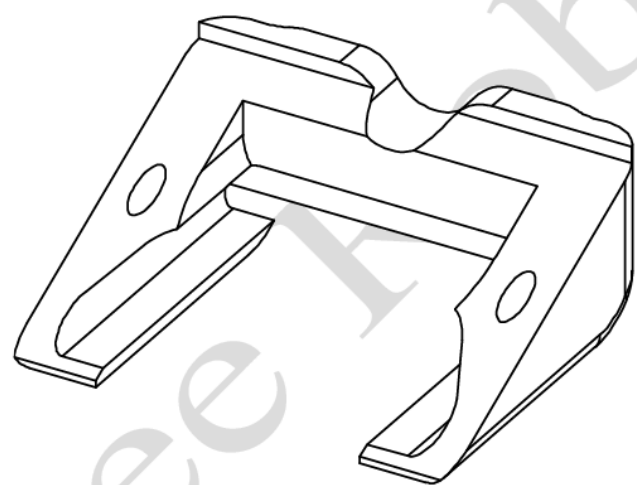


Waist Fixing Part 1

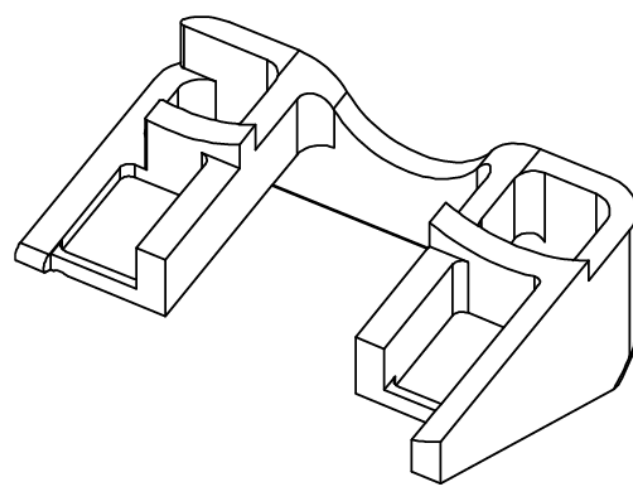

Waist Fixing Part 2

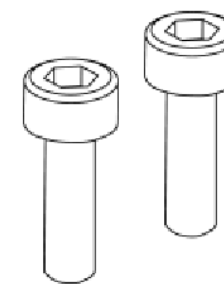

M5 Screw * 2

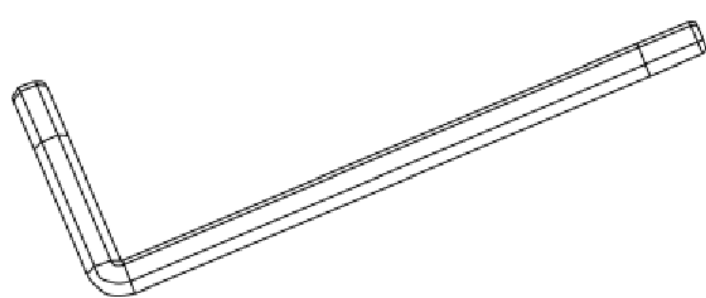

Internal hexagonal L-shaped wrench





● Please carefully check whether the items are complete and intact. All pictures in this manual are for reference only. If the actual items do not match the instructions, please refer to the actual items. If you have any questions, please contact Unitree's official technical support at support@Unitree.cc

Installation Instructions


Step1: Install the waist fixing part 1

First, turn the G1 body back and place the waist fixture 1 in the position shown in the figure.

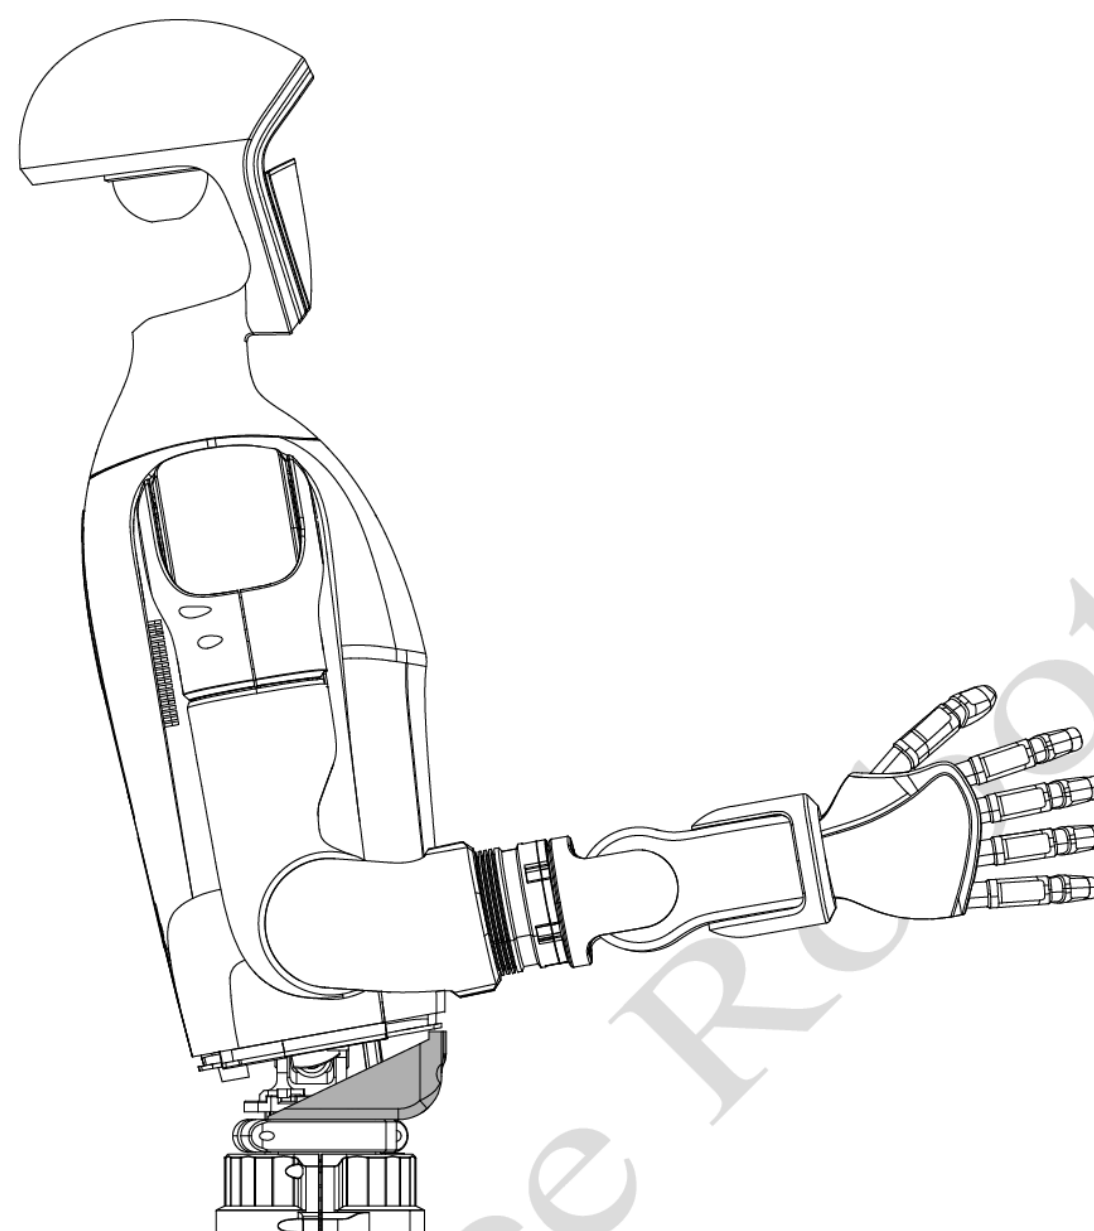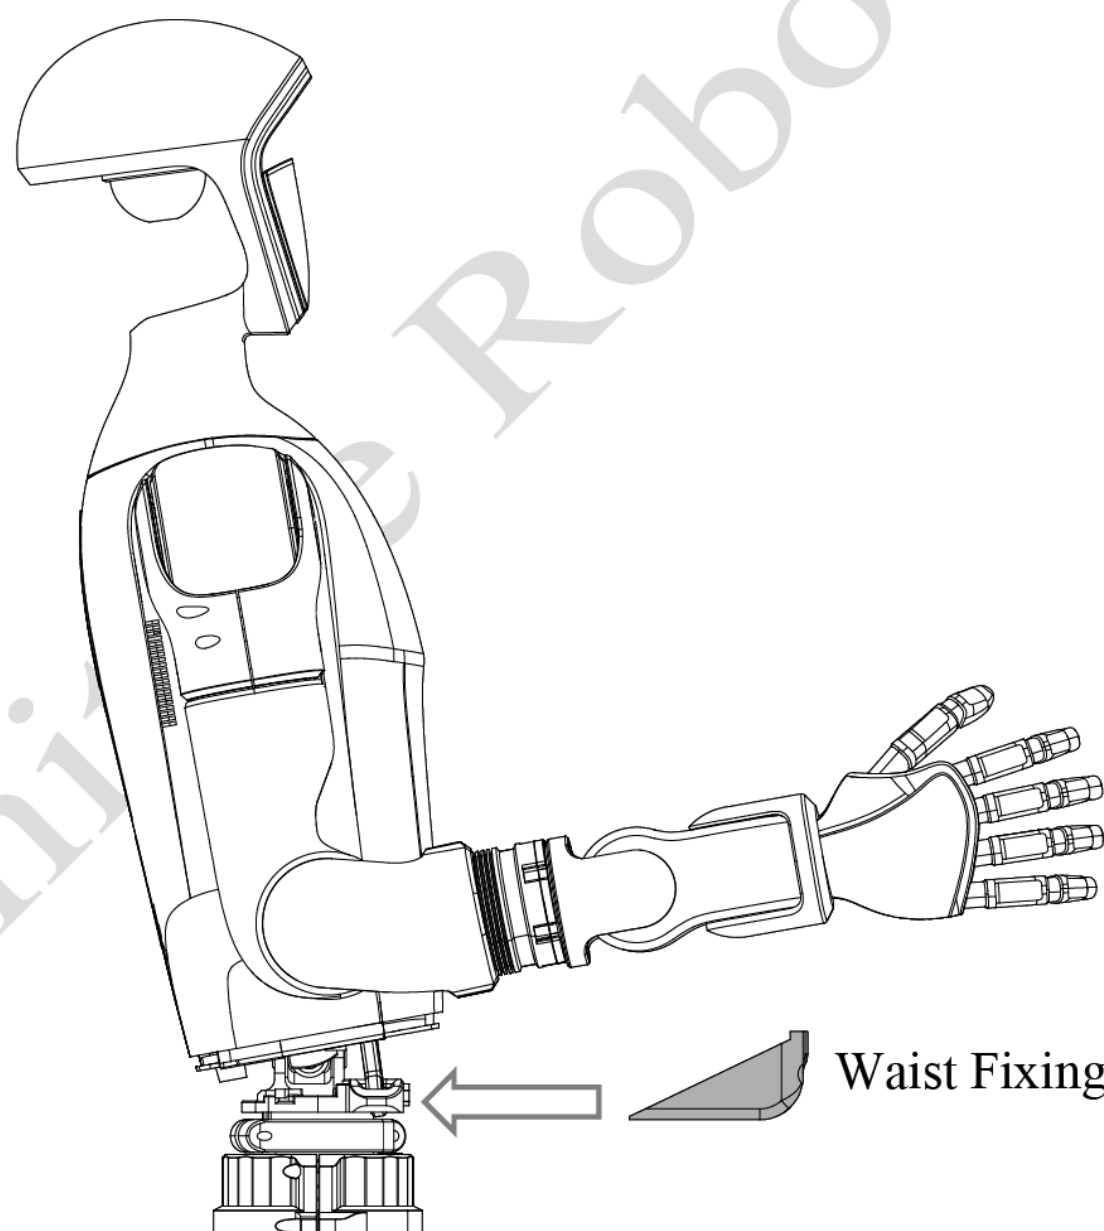

Step2: Install the waist fixing part 2


After placing the waist fixture 1, turn the G1 body forward and place the waist fixture 2 in the position shown in the figure.

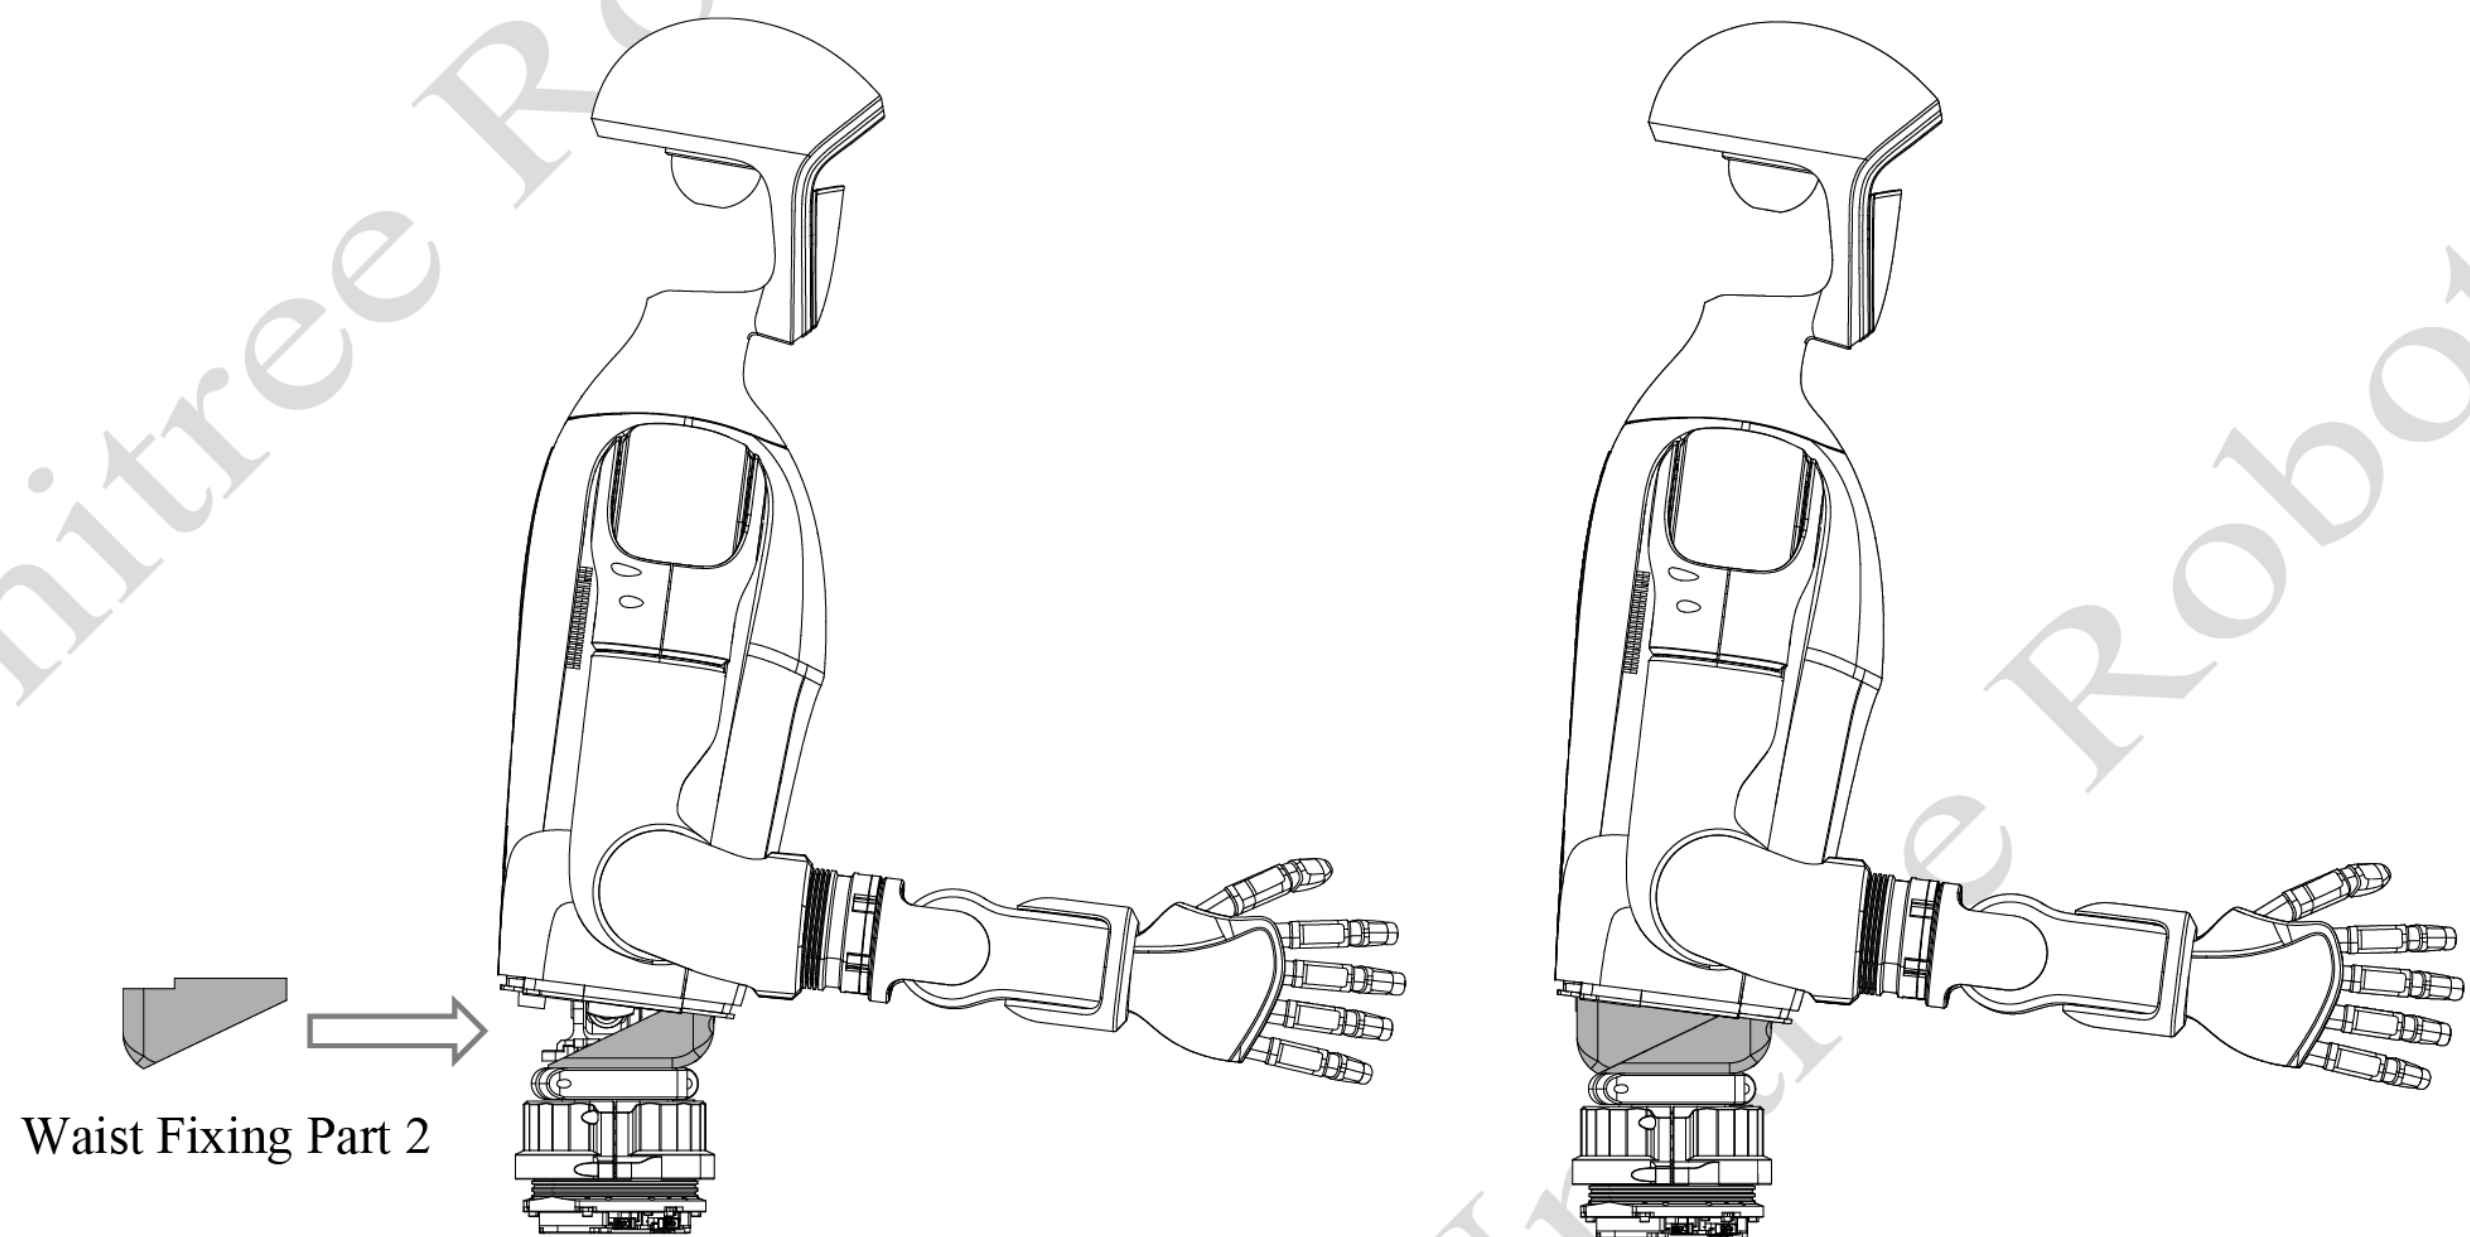


● Attention!!! When installing the waist fastener, do not press on the waist cable to avoid damaging the cable and causing poor contact.

Step3: Fix

Use an Allen wrench to secure the two M5 screws to the waist fixture, and then tighten them.

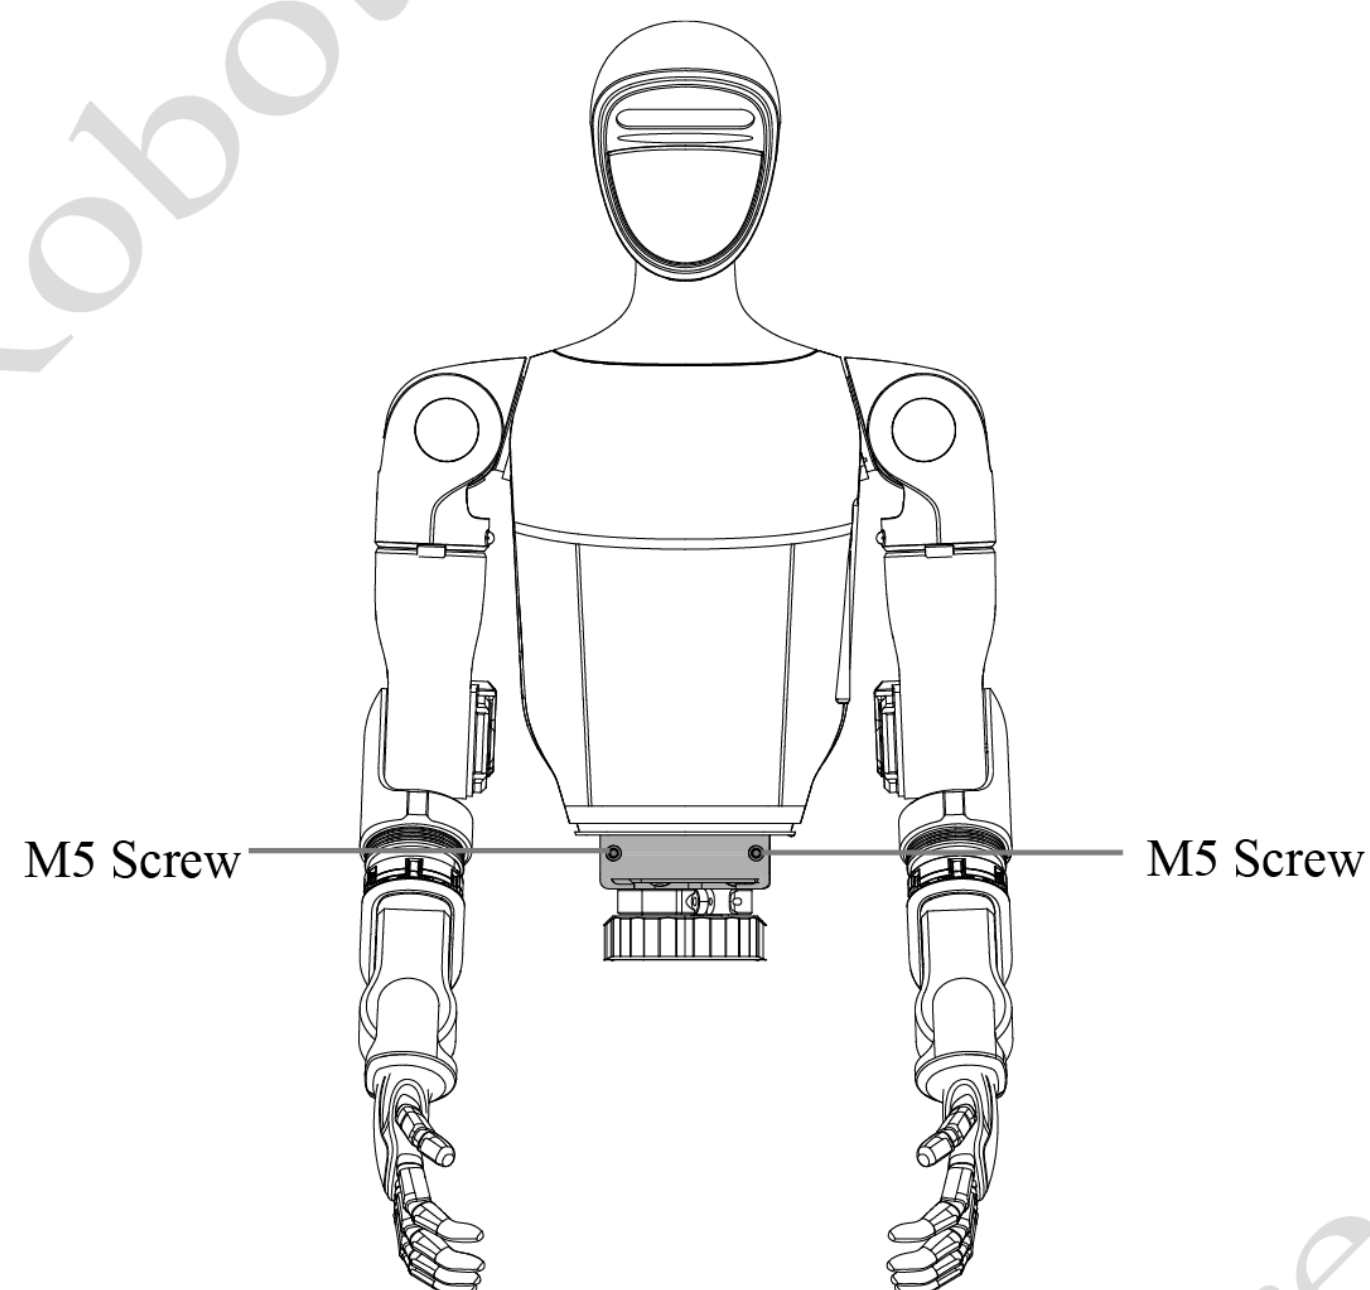


Step4: Installation completed

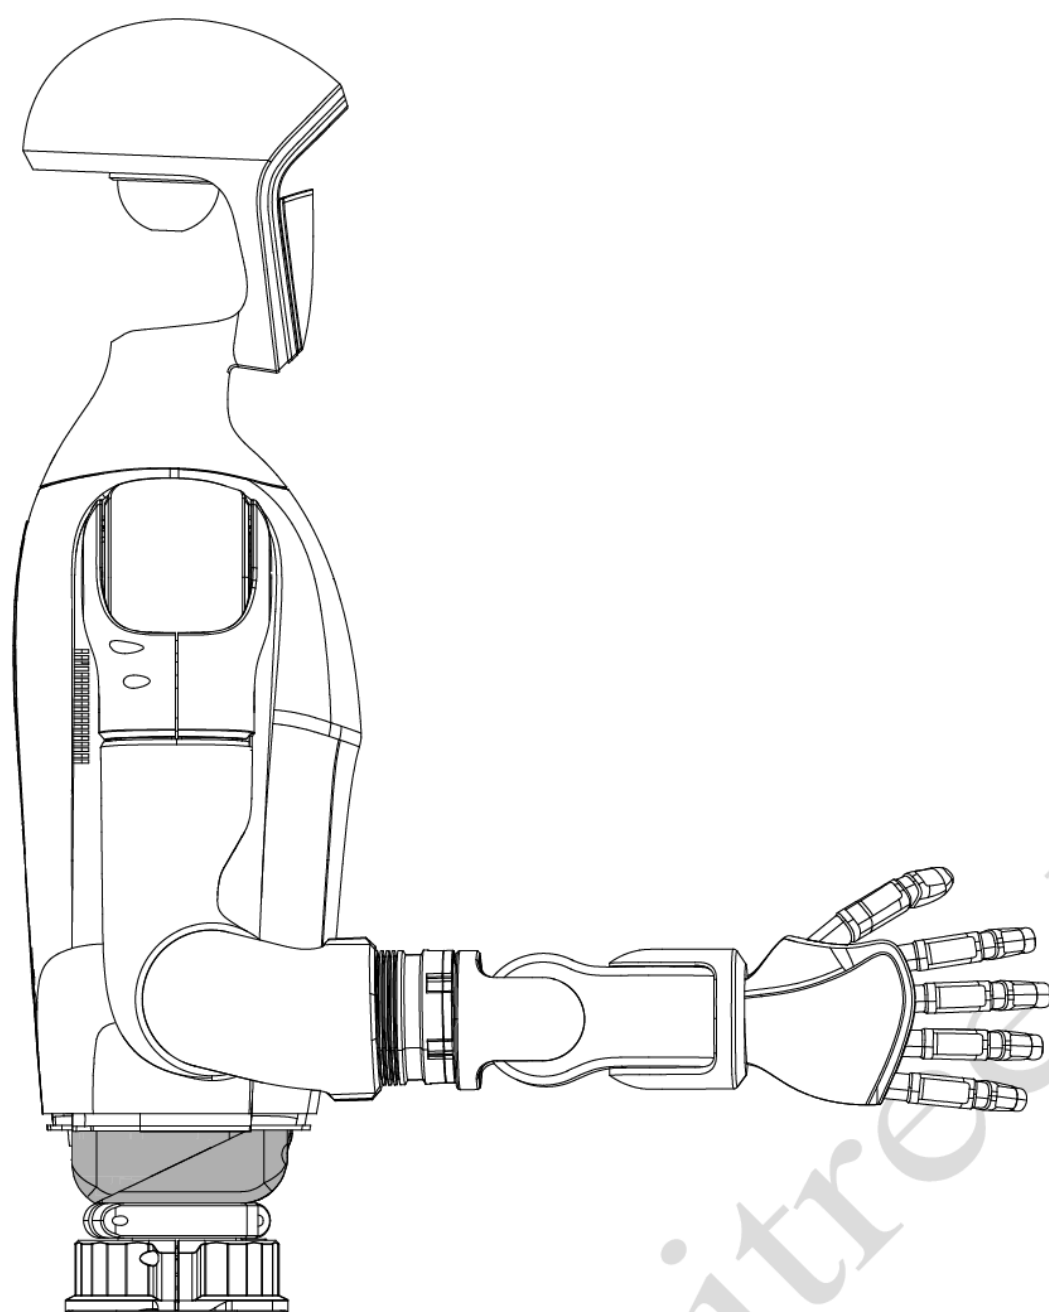

Step5: Software Configuration

After the waist fixer is installed, you need to enable the waist motor locking function on the Unitree Explore APP [Settings] - [Robot], as shown below:

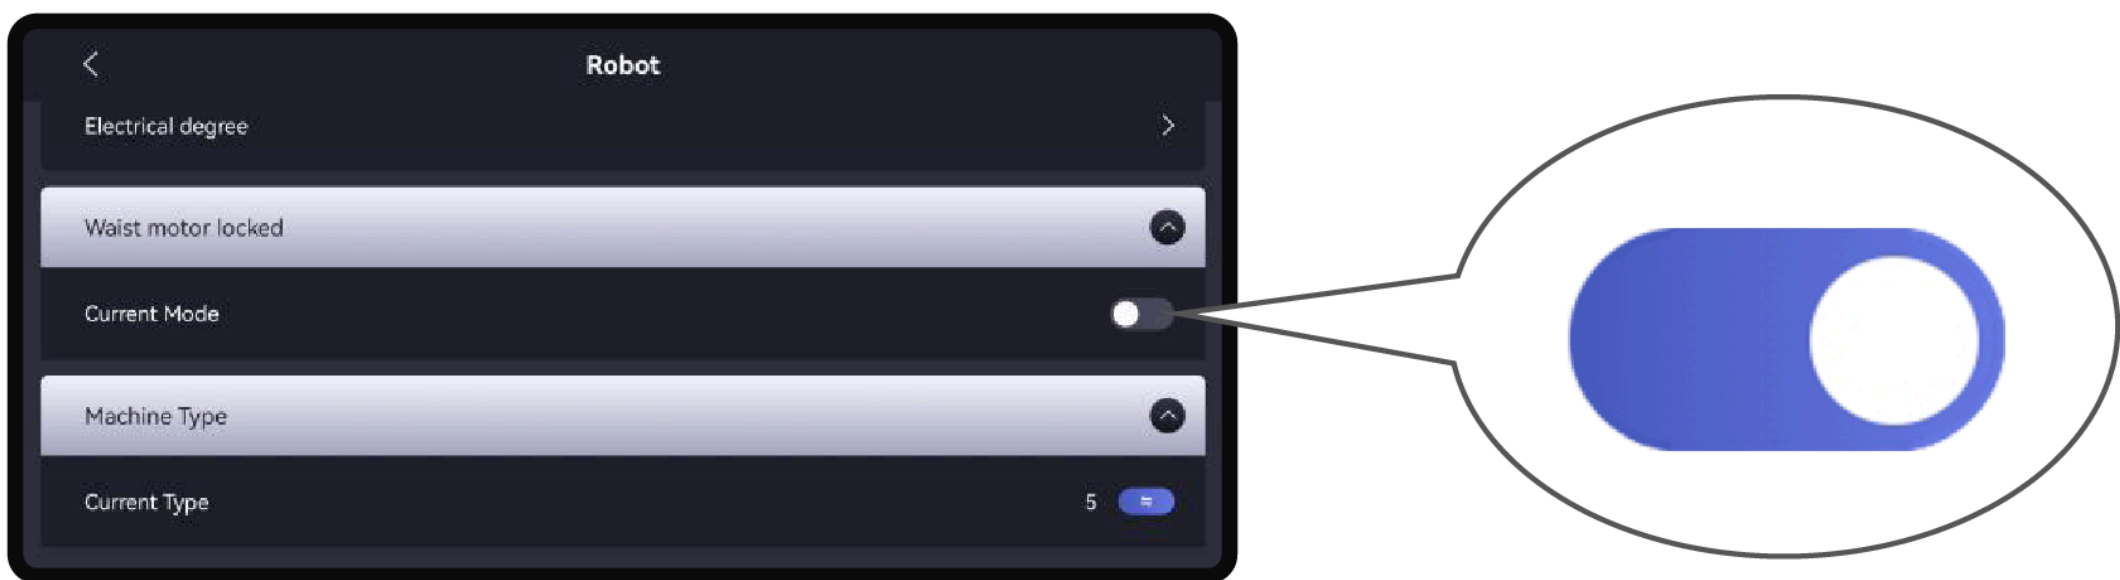


And restart the device according to the pop-up prompt.

● Attention! In the process of using the lock waist, if you have calibrated the 27-joint motor of the device, if you need to re-unlock the waist fixator , you need to re-calibrate the unlocked 29-joint motor after you have unlocked all the operations of the waist fixator.

Disassembly Instructions


Step1: Remove the waist fixing screw

Use an Allen wrench to remove the two M5 screws from the waist fixing.

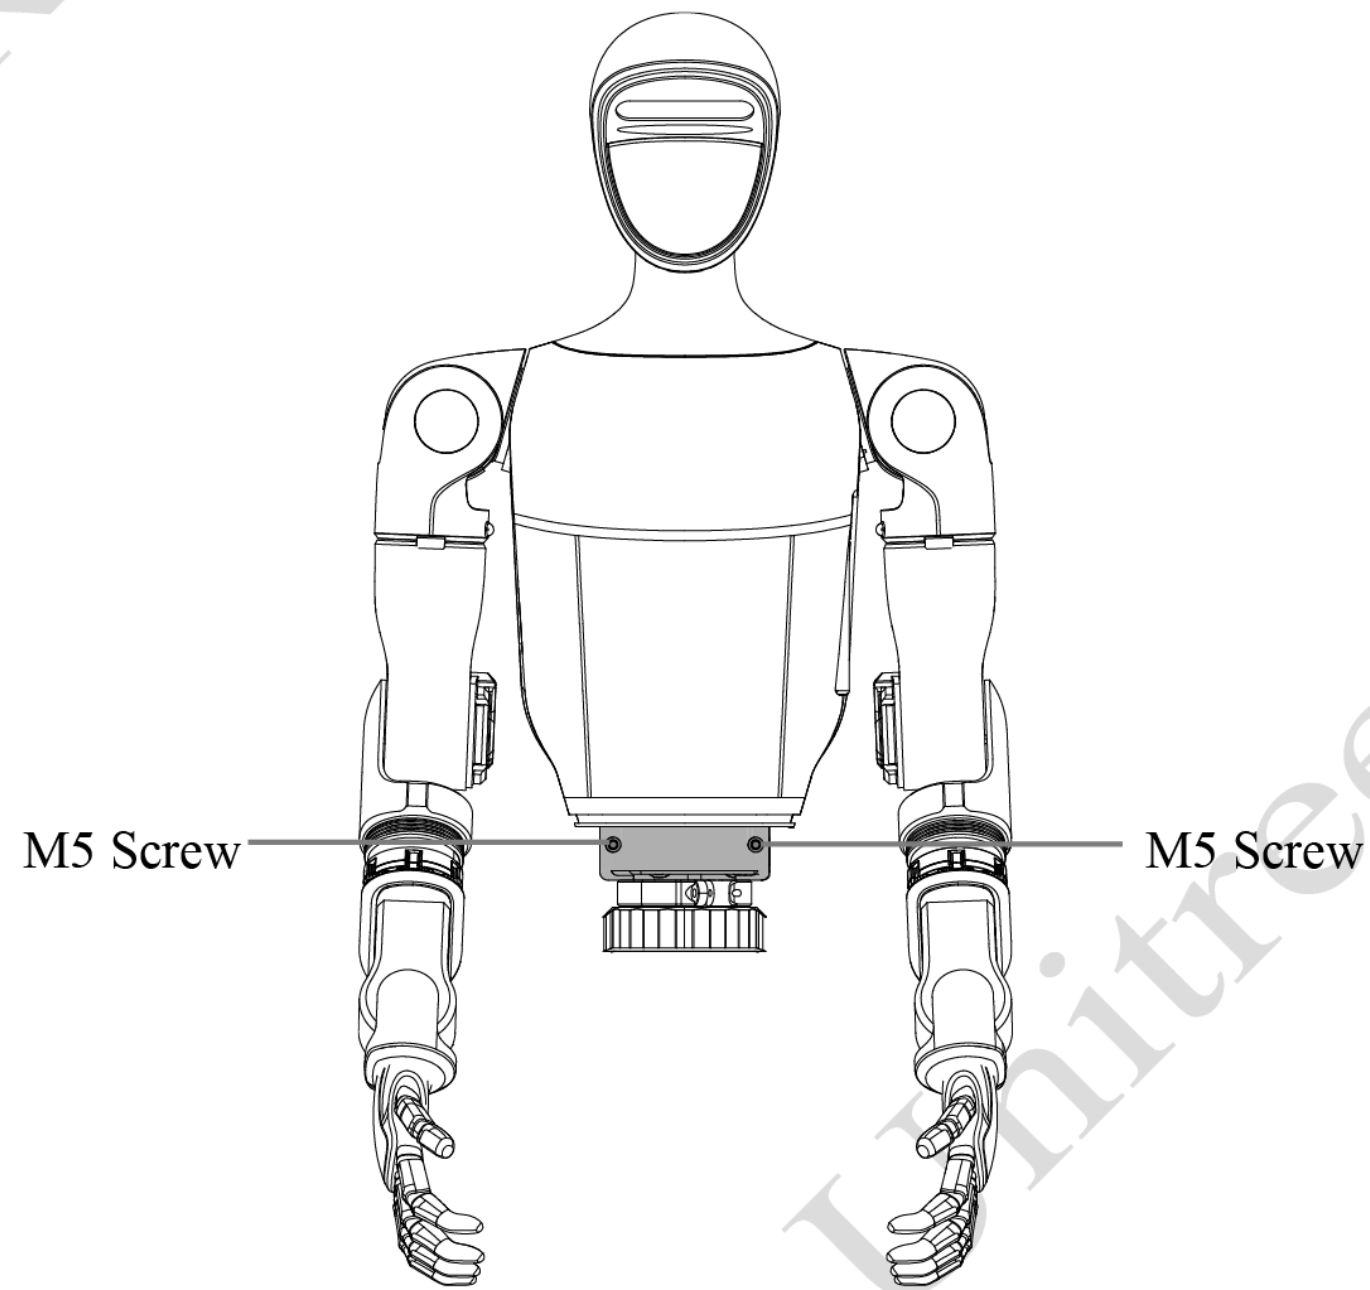


Step2: Remove the waist fixing part 2

Turn the G1 body forward and remove the waist fixture 2 as shown in the figure.

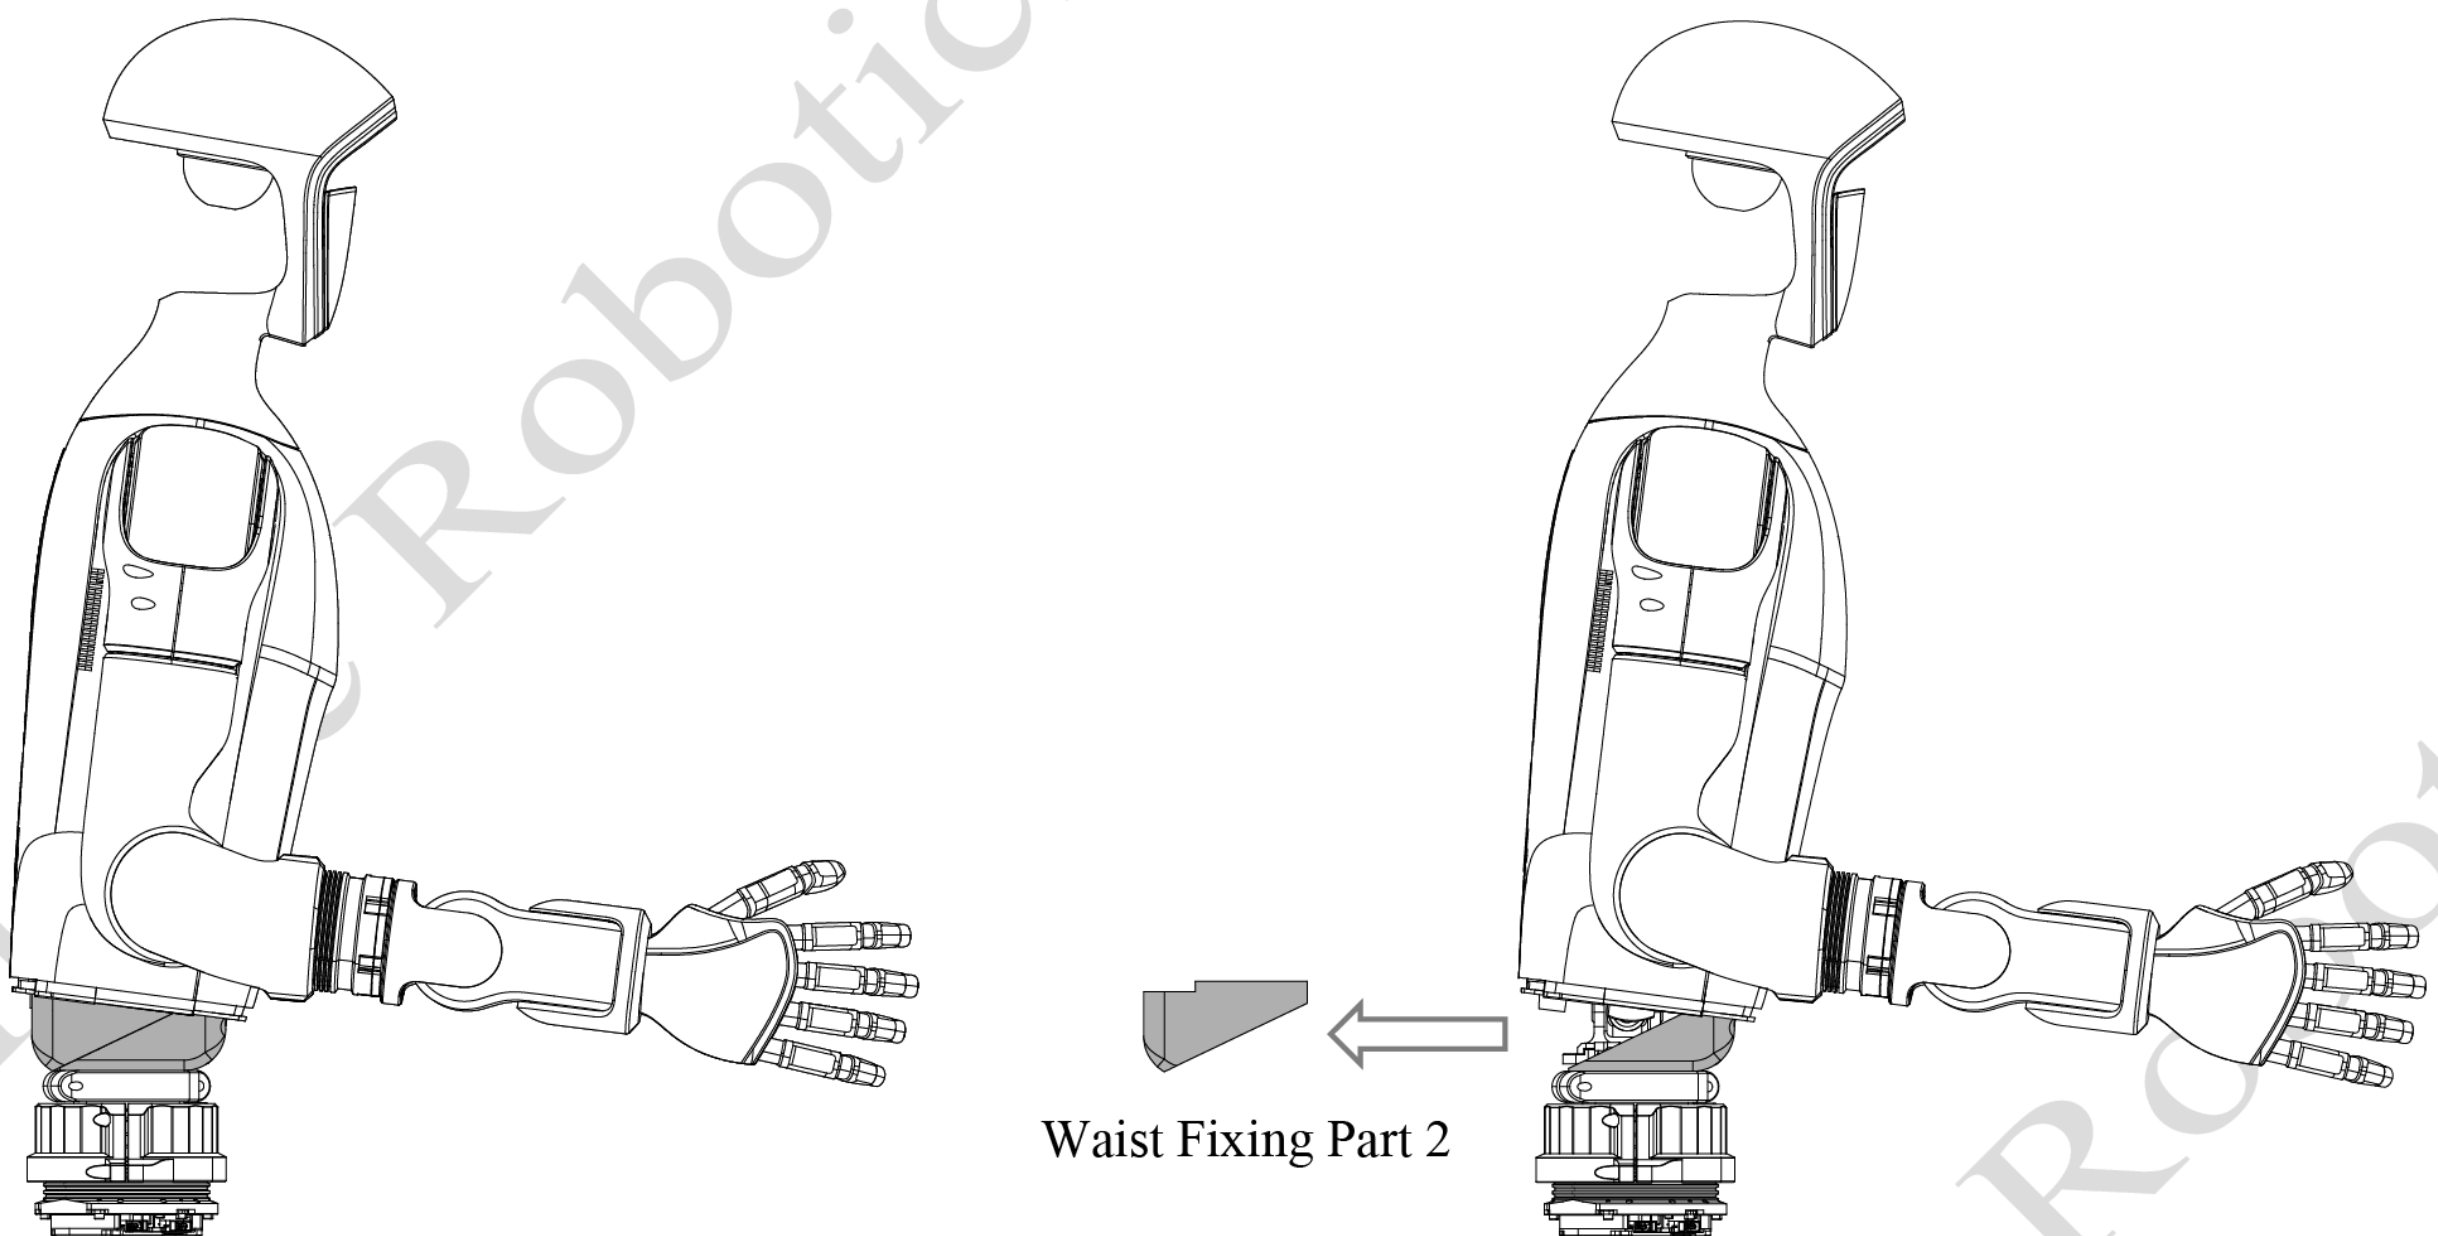


Step3: Remove the waist fixing part 1

First, turn the G1 body backwards and remove the waist fixing part 1 according to the position shown in the figure.

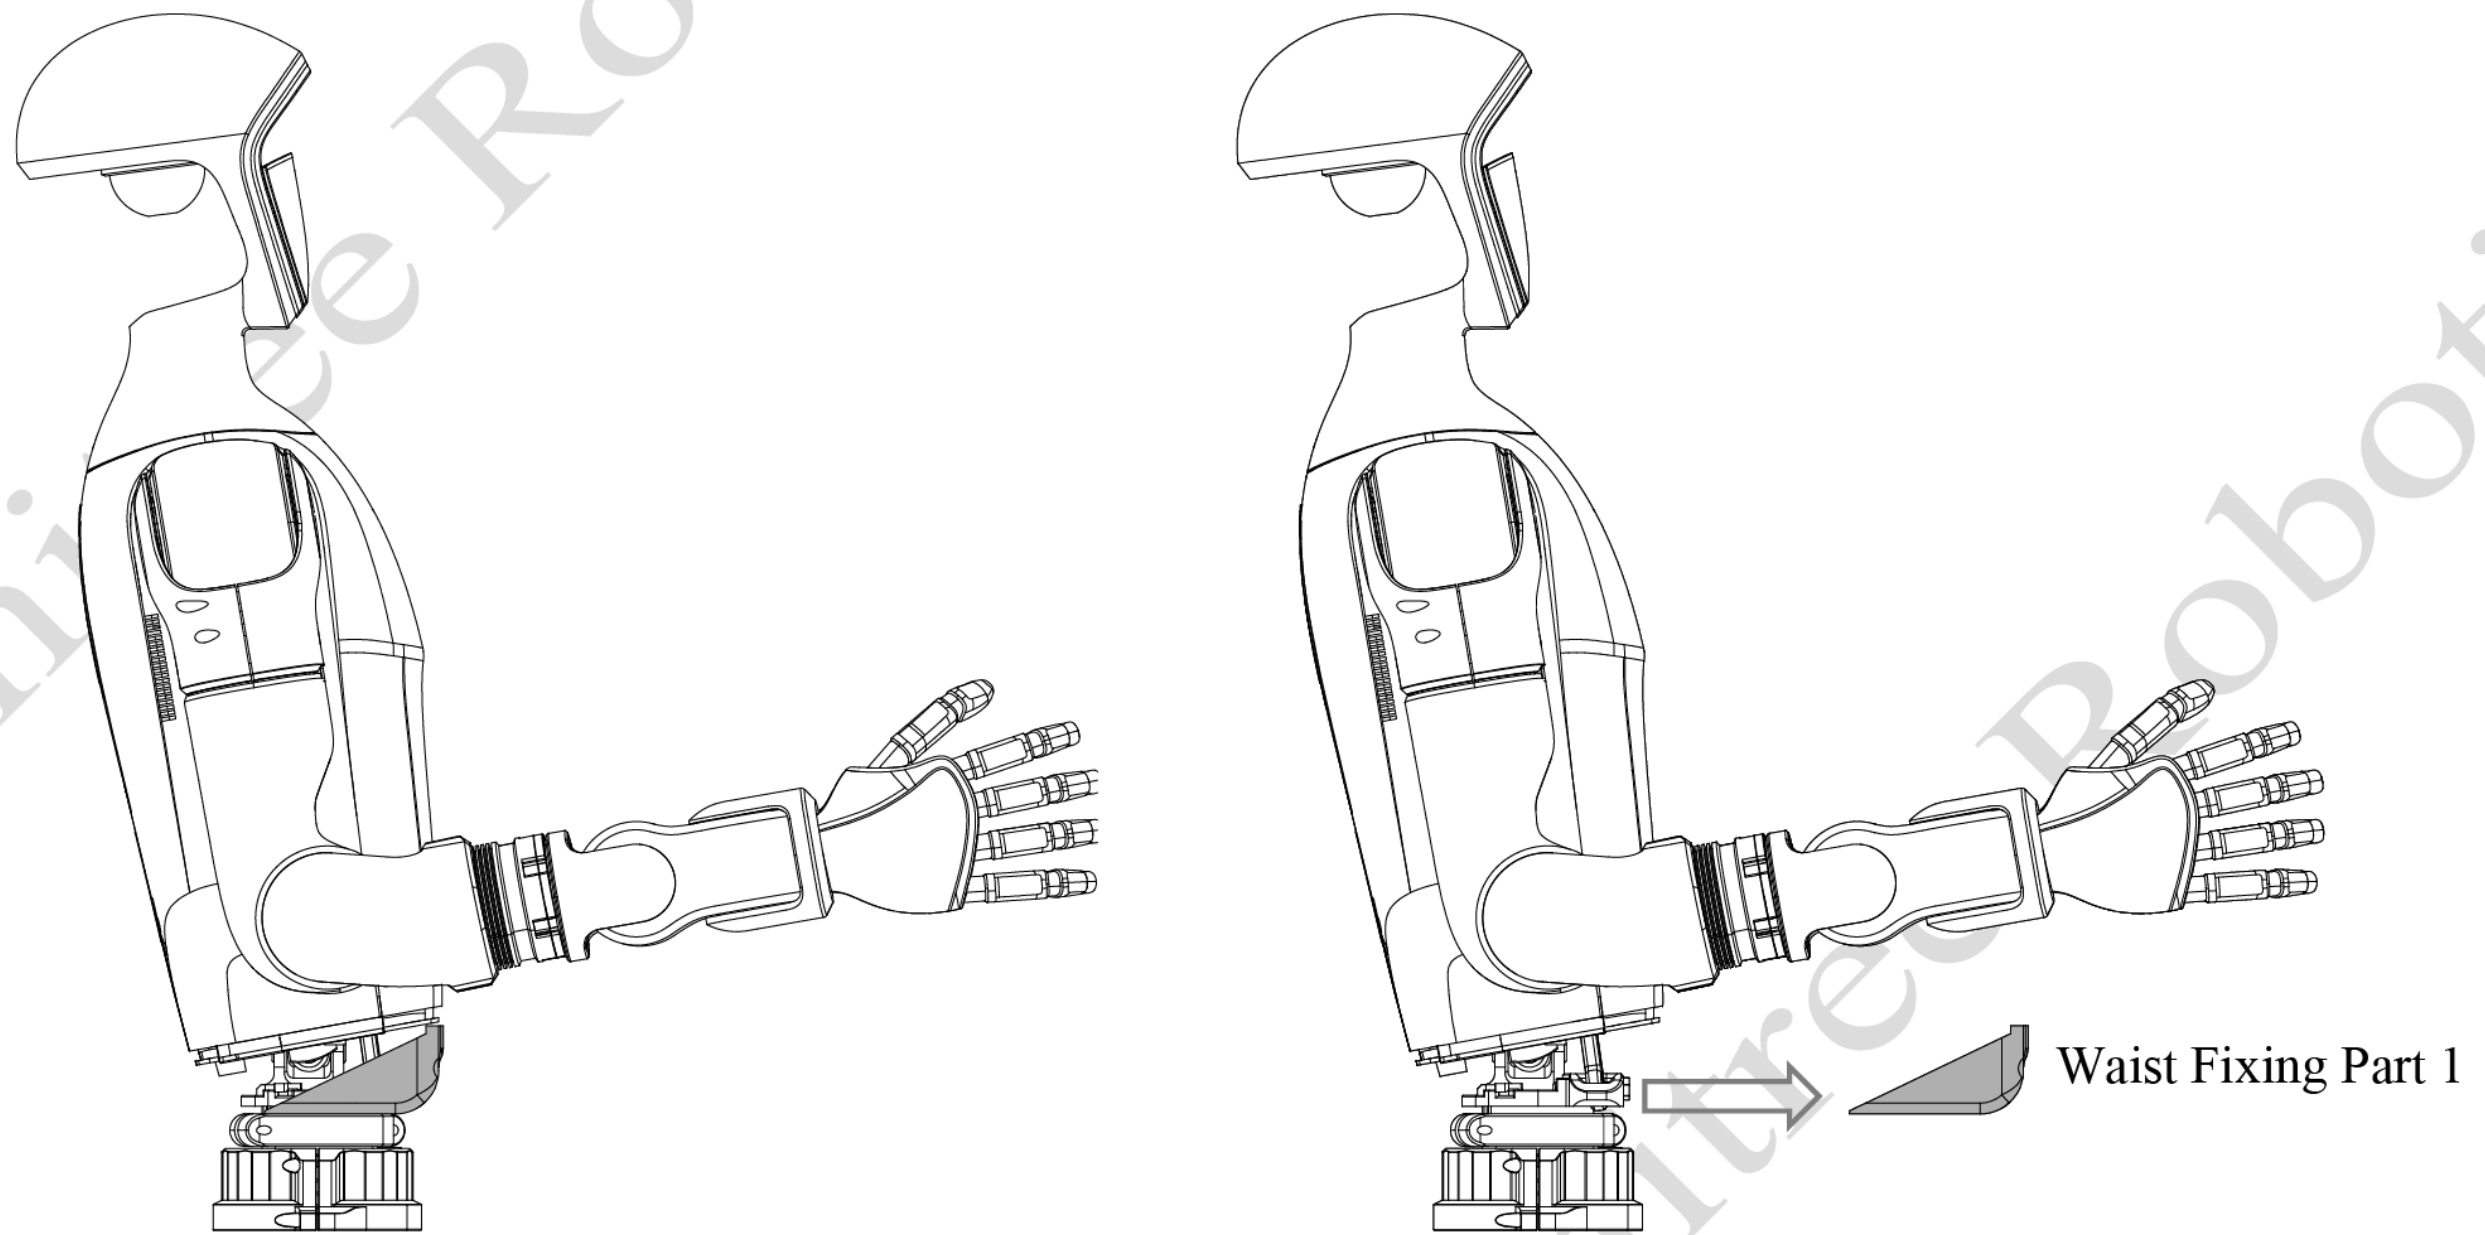

Step4: Remove the waist fixing part 1

After disassembly, you need to turn off the waist motor locking function in the Unitree Explore APP [Settings] - [Robot], as shown in the following figure:

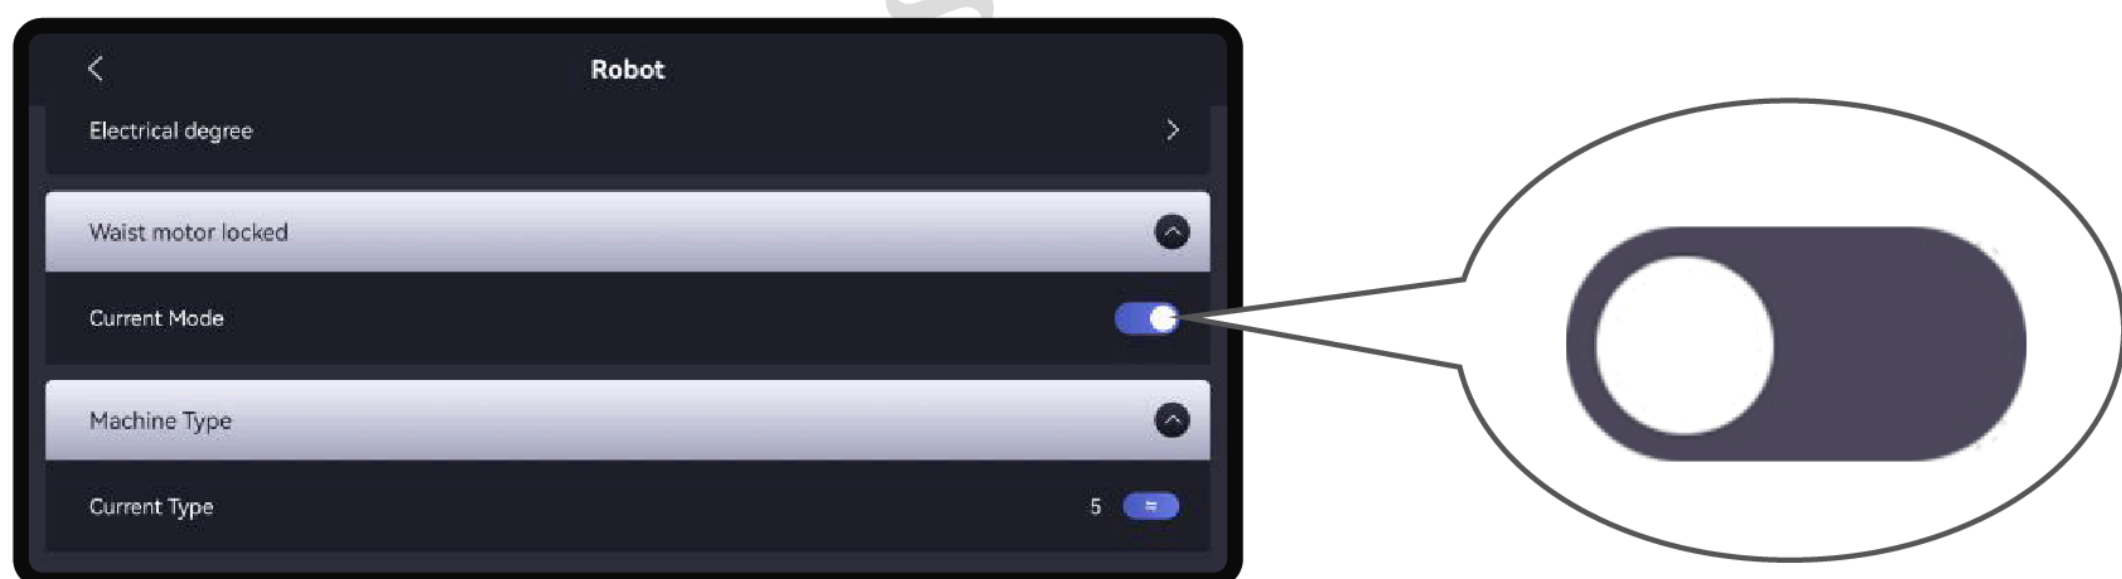

And restart the device according to the pop-up prompt.